

**BUKU PEDOMAN
PERBAIKAN
DAIHATSU
XENIA (VVT-i)**

4. ELECTRICAL WIRING DIAGRAM

**PT. ASTRA DAIHATSU MOTOR
SERVICE DIVISION**

Pub. No. EM02X1ED

INDEX


Relay Location	I
Position of Parts in Engine Compartment (K3-VE)	II
Position of Parts in Engine Compartment (EJ-VE)	III
Position of Parts in Instrument Panel	IV
Position of Parts in Body	V
Ground Points in Engine Compartment	VI
Wire and Wire, Ground Points in Instrument Panel	VII
Wire and Wire, Ground Points in Body	VIII
Overall Electrical Wiring Diagram	IX
ABS	11 - 2
Air Conditioner w/ Heater	21 - 2
Air Conditioner w/o Heater	22 - 2
Audio System	18 - 2
Back-Up Light	16 - 2
Charging	1 - 4
Cigarette Lighter	18 - 4
Clock	10 - 3
Combination Meter (A/T)	19 - 2
Combination Meter (M/T)	20 - 2
Door Lock Control	13 - 2
ECT and A/T Indicator	5 - 2
Engine Control (EJ-VE)	4 - 2
Engine Control (K3-VE)	3 - 2
Fog Light	9 - 2
Front Wiper and Washer	16 - 3
Headlight	6 - 2
Horn	10 - 4
Ignition (EJ-VE)	2 - 2
Immobiliser	3 - 11
Interior Light	15 - 2
Option Connector (w/o Air Conditioner and Audio System).....	23 - 2
Power Source	1~23 - 1
Power Window	14 - 3
Radiator Fan	15 - 4
Rear Window Defogger	17 - 4
Rear Wiper and Washer	17 - 2
Remote Control Mirror	9 - 4
Seat Belt Warning	10 - 2
SRS	12 - 2
Starting (K3-VE)	1 - 3
Starting	1 - 2
Stop Light	6 - 4
Taillight and Illumination	8 - 2
Turn Signal and Hazard Warning	7 - 2
Wireless Door Lock Control	13 - 5

BAB I


Relay Location

RELAY LOCATIONS


[Engine Compartment]

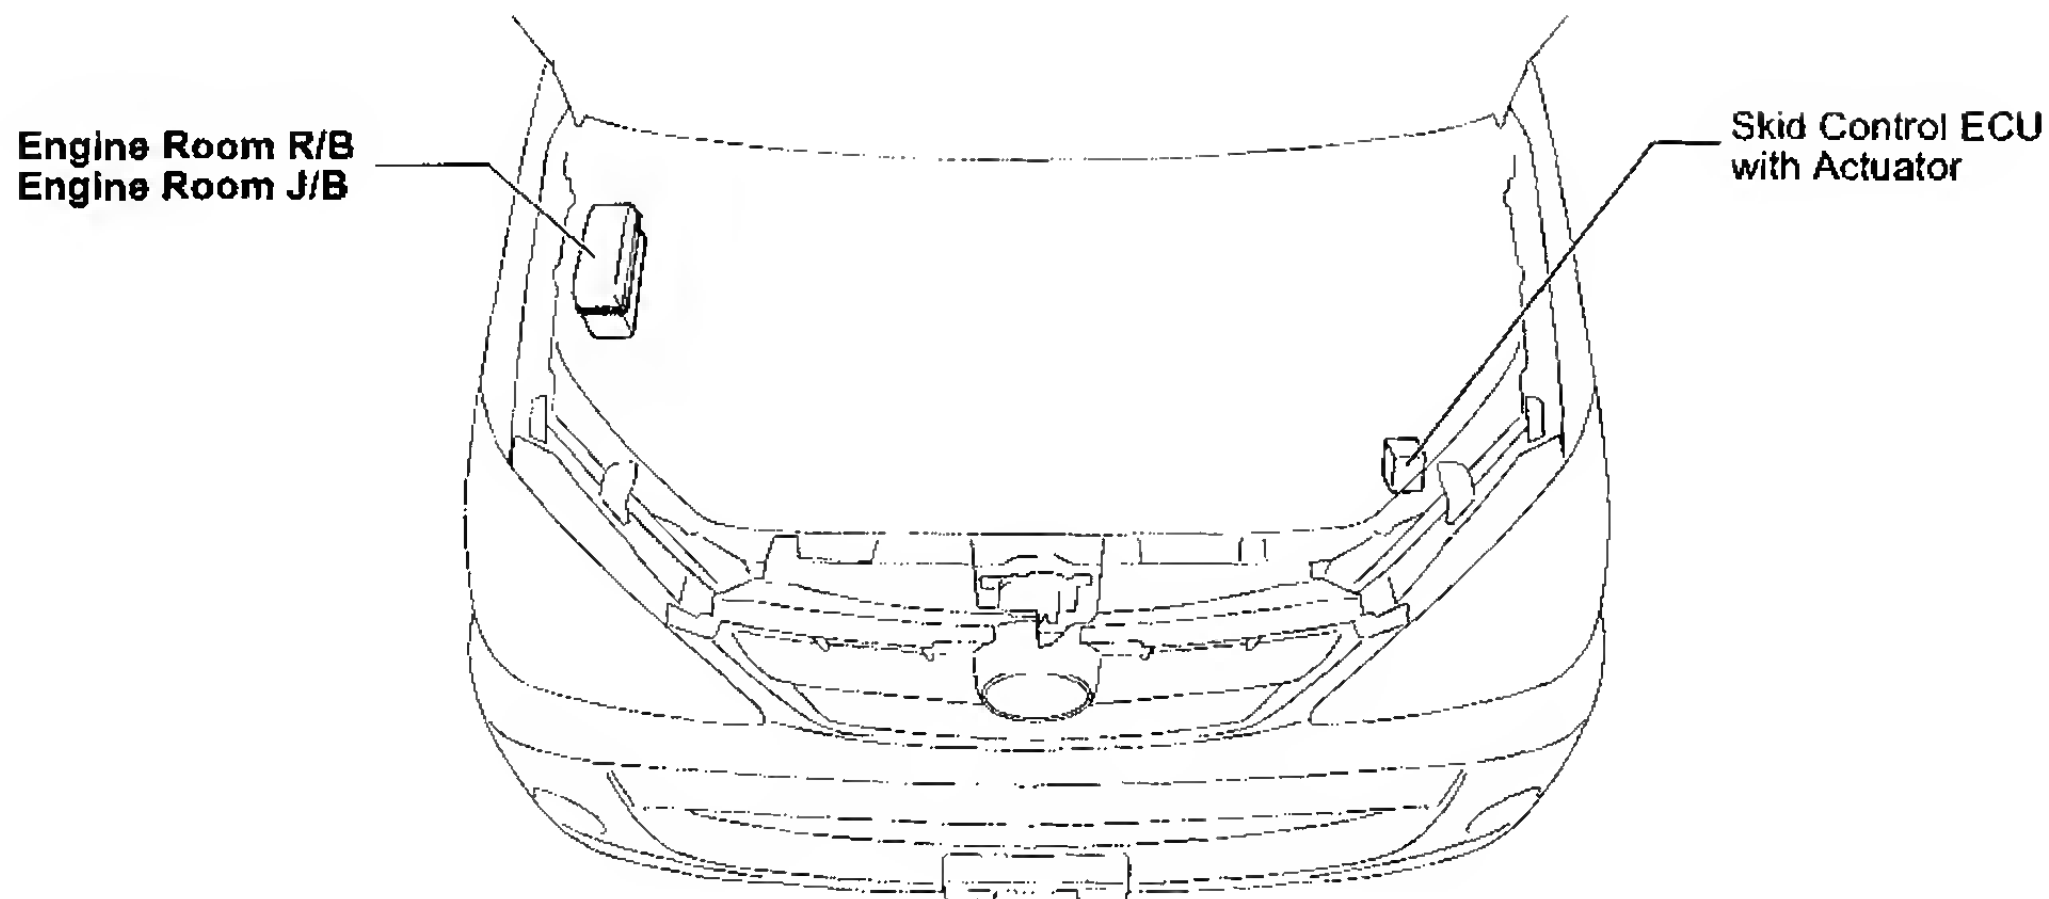

[Instrument Panel]

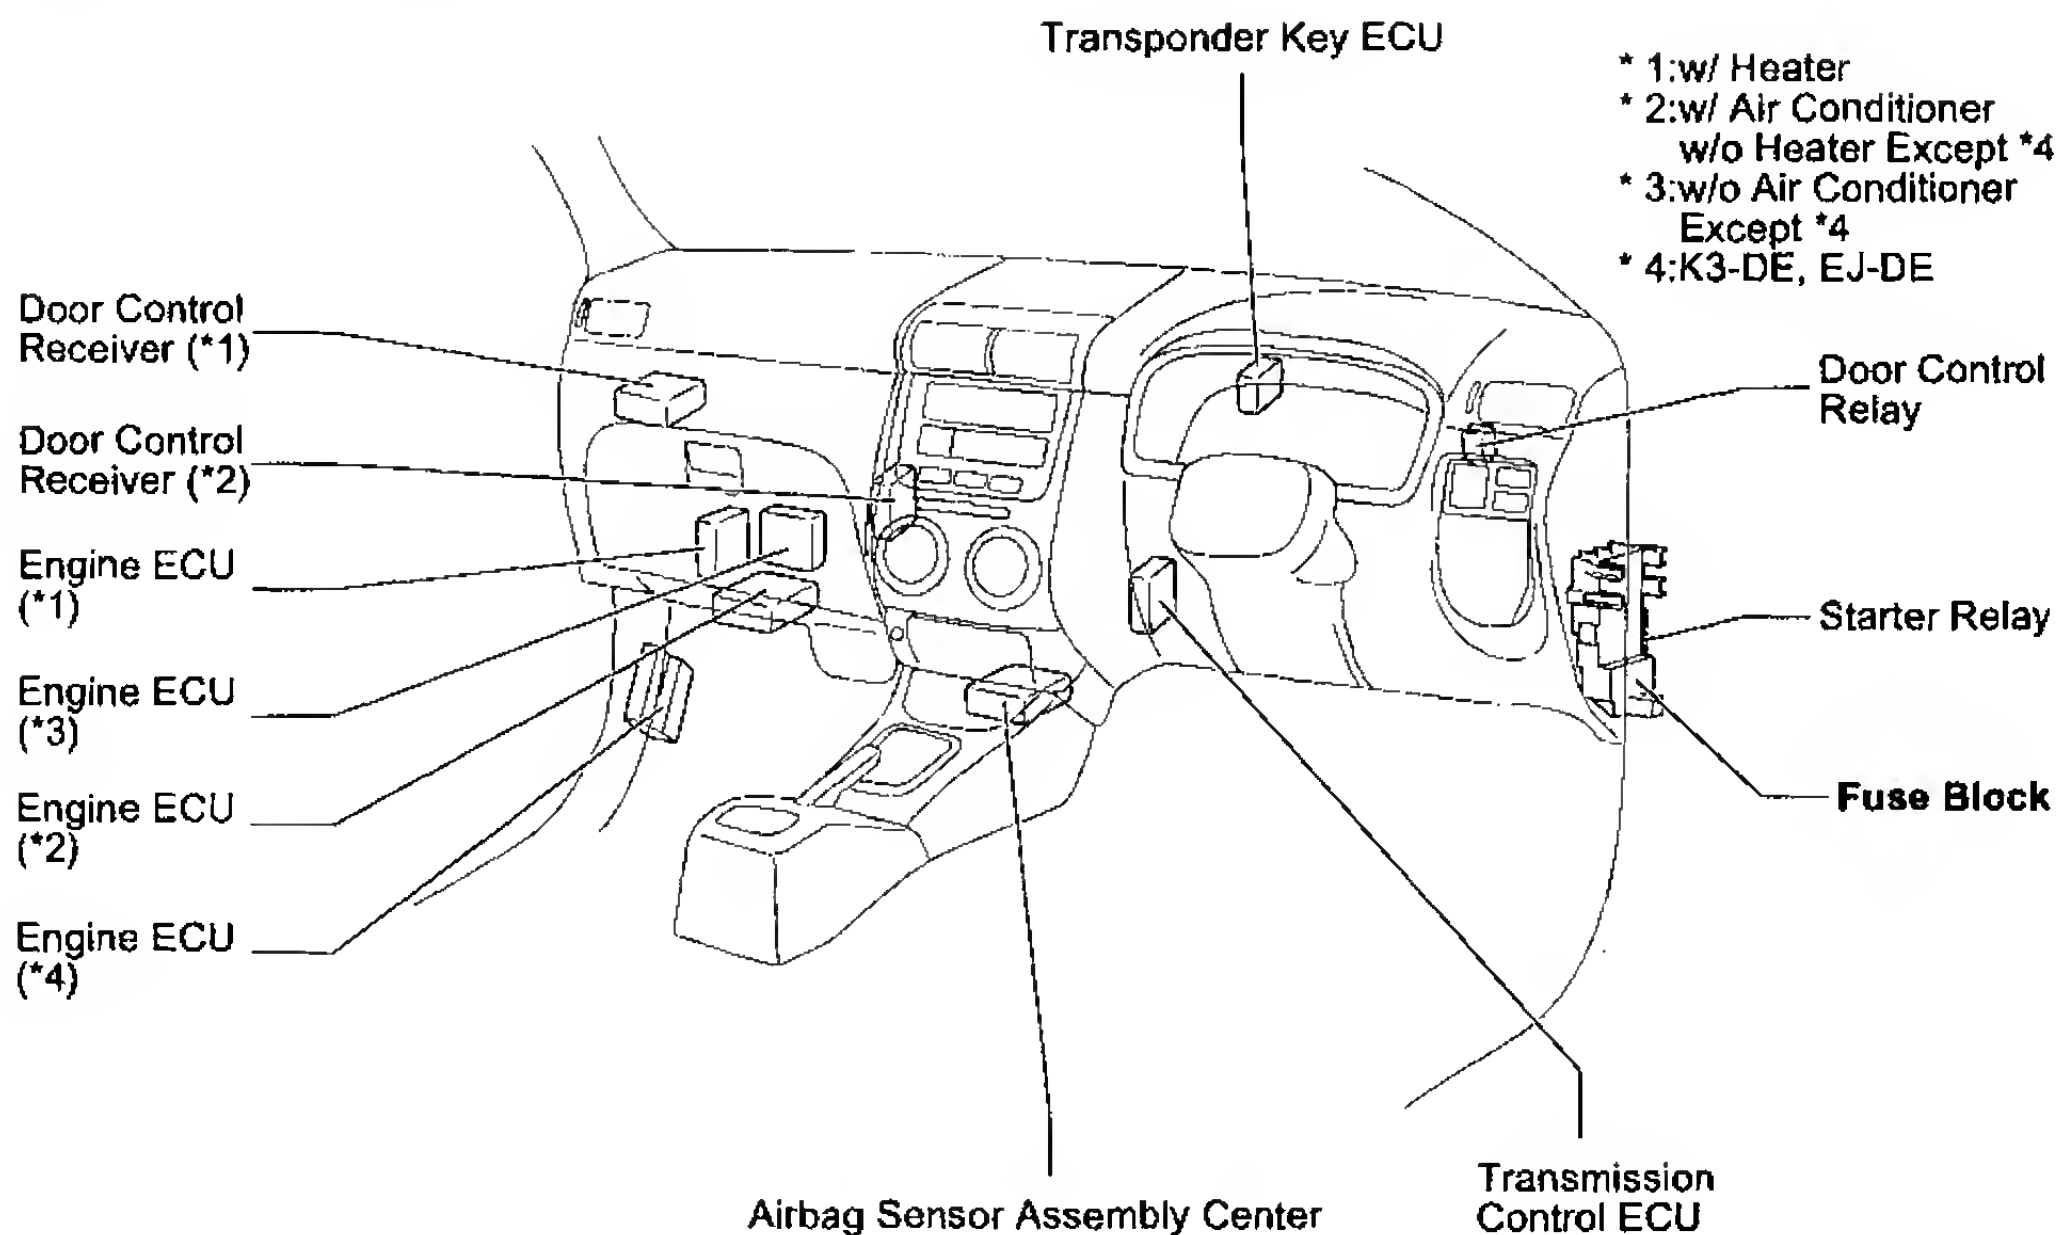


[Engine Room R/B]
[Engine Room J/B]

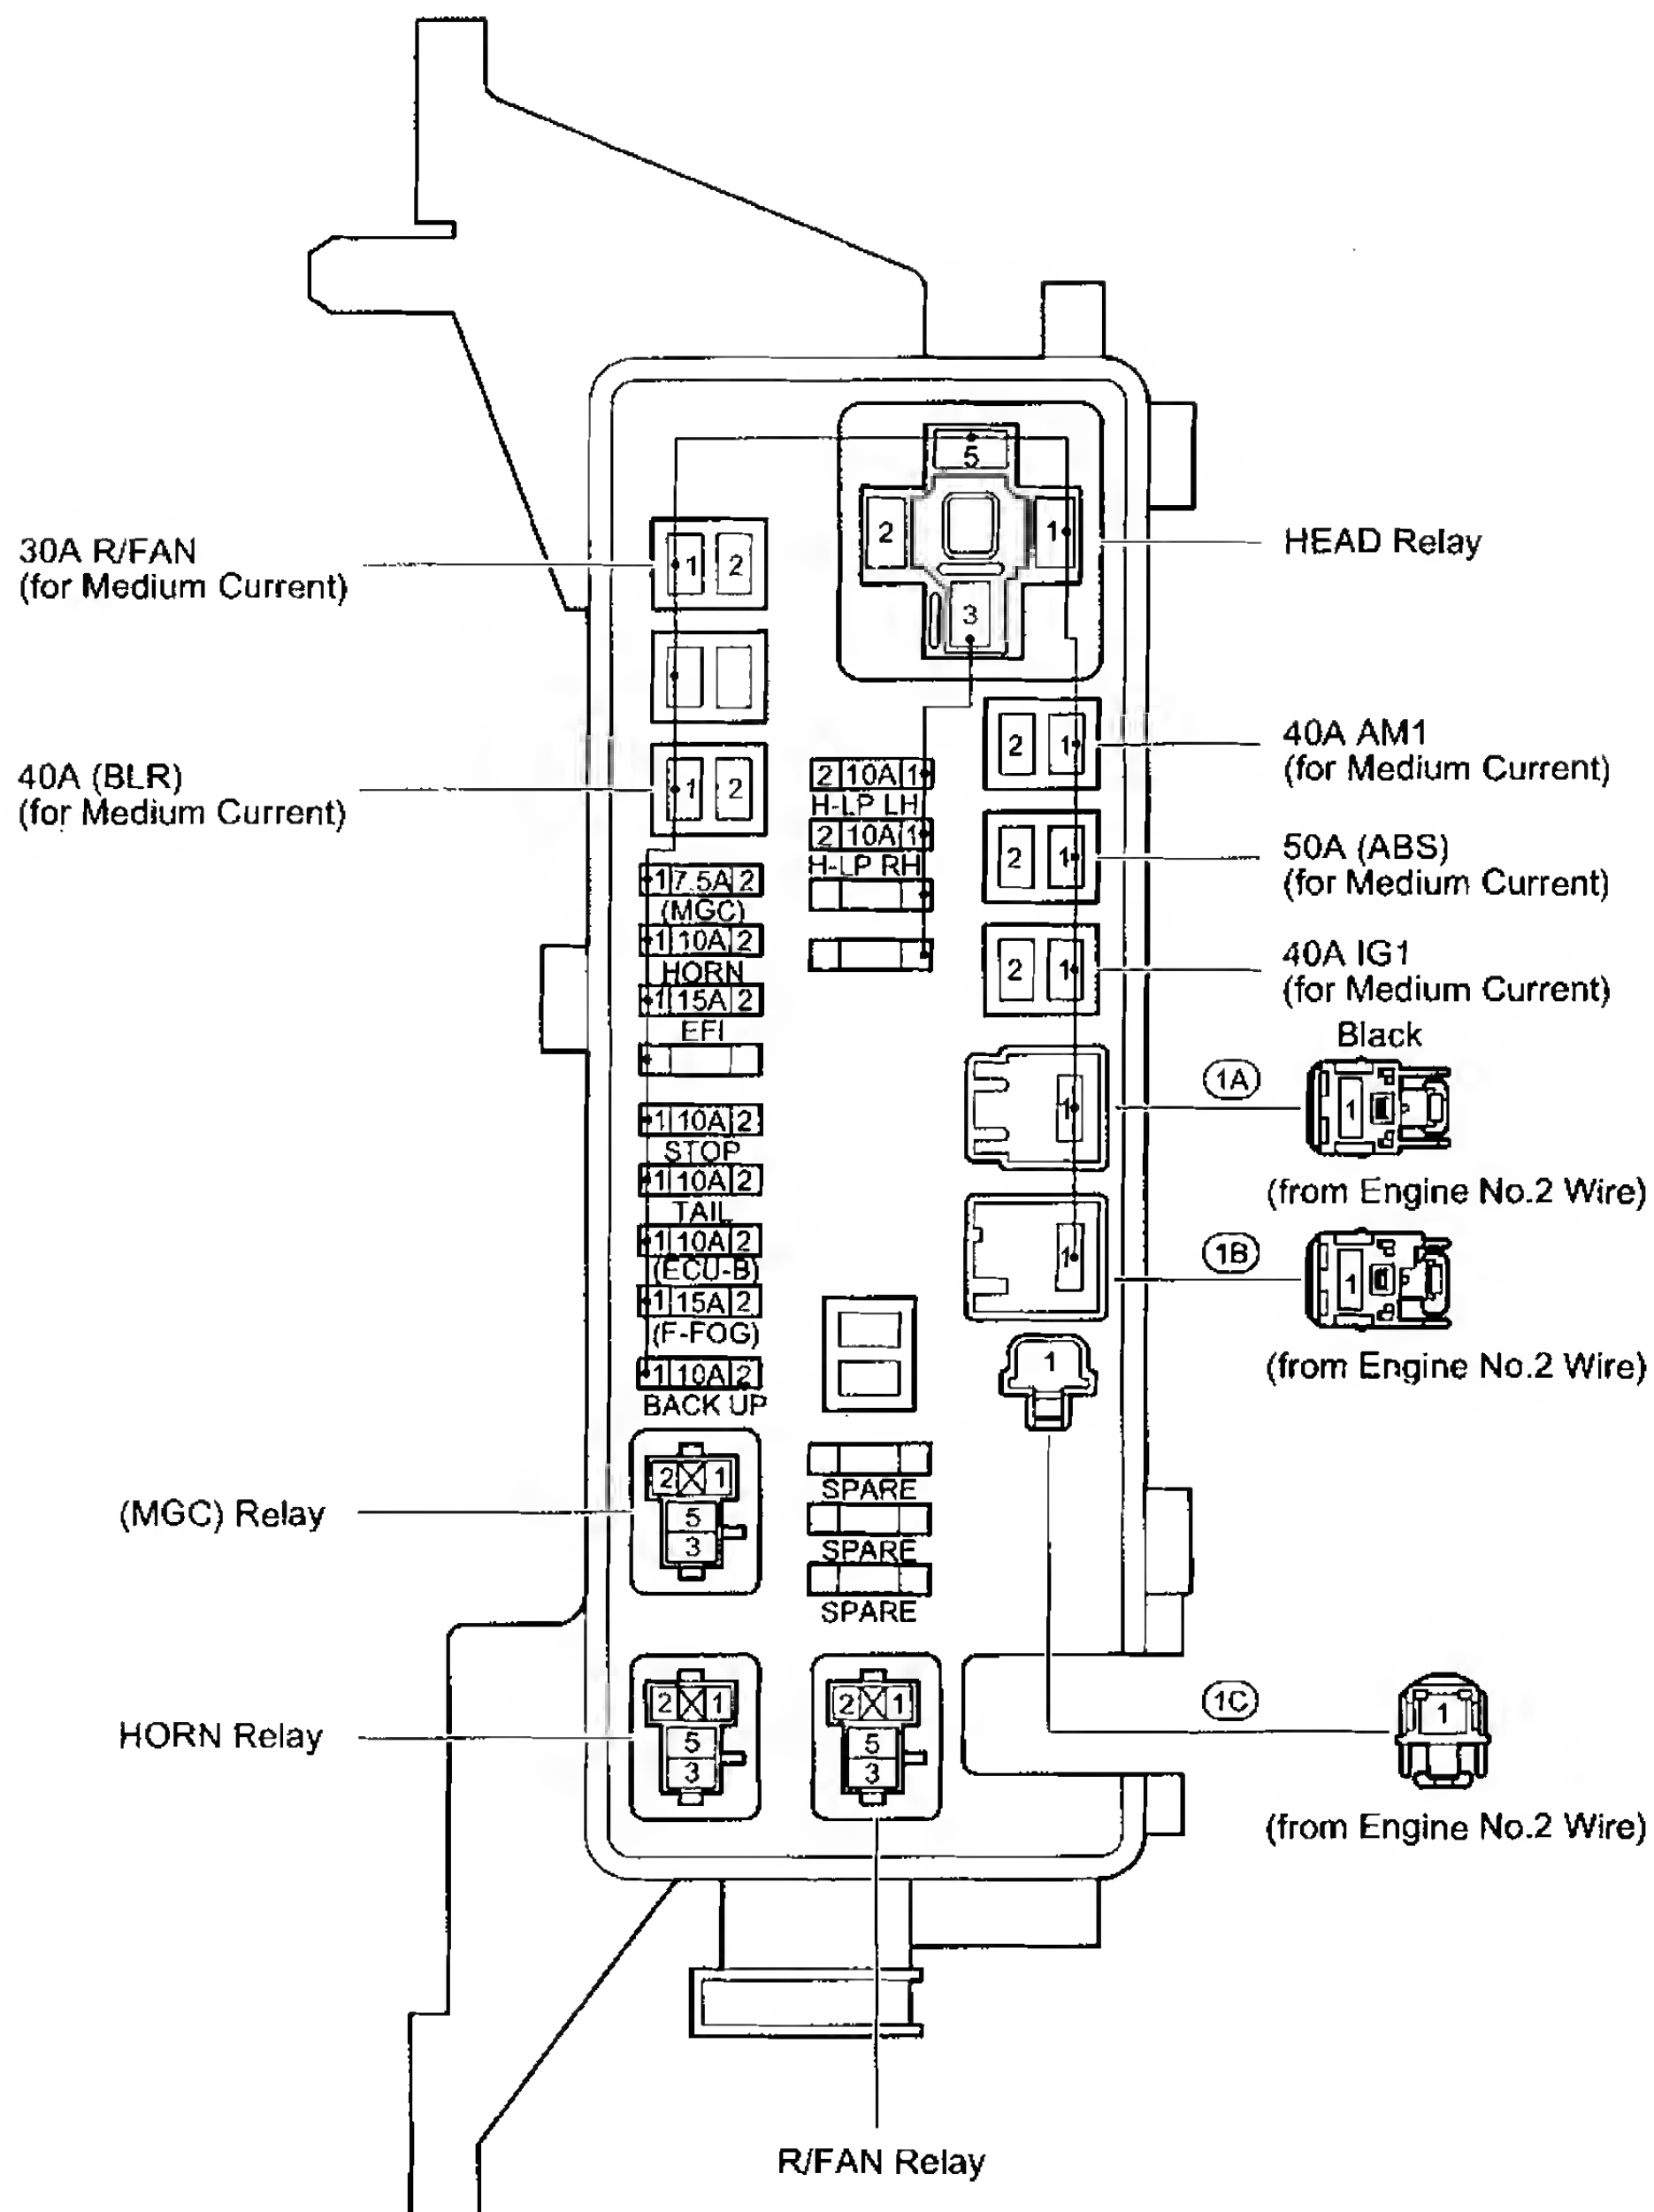


RELAY LOCATIONS

[Fuse Block]

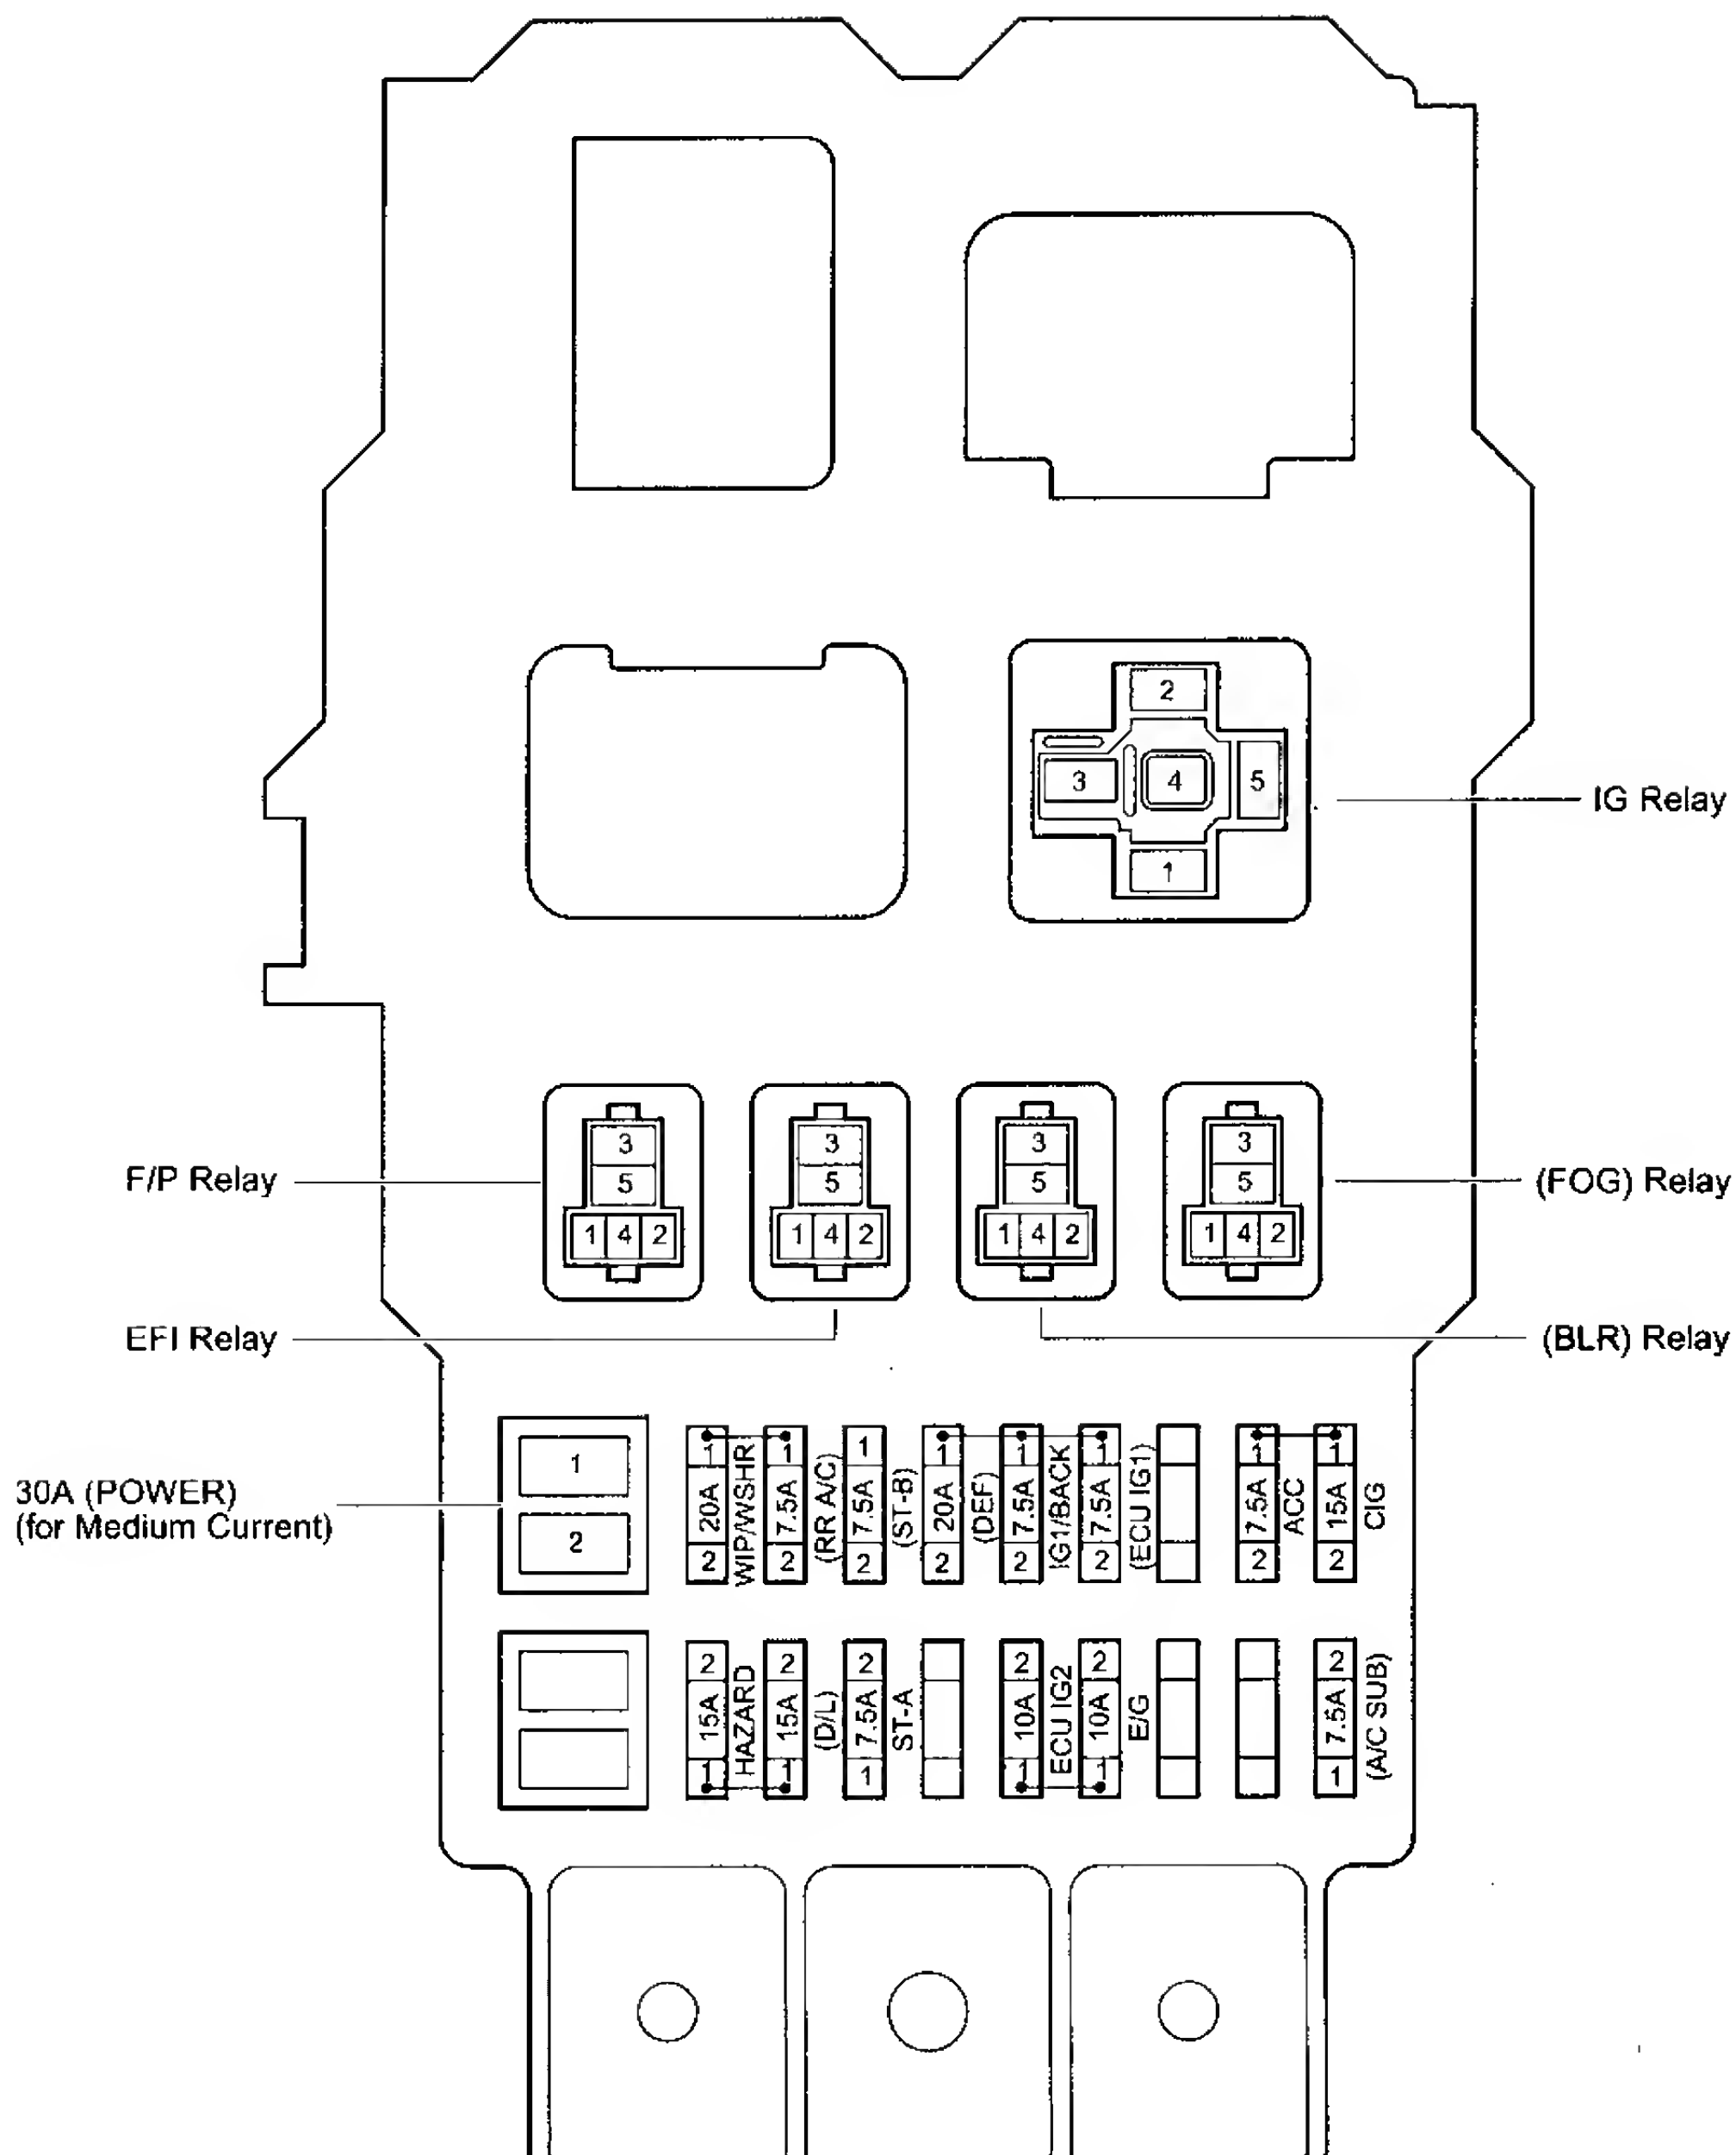

BAB II

Position of Parts in Engine Compartment (K3-VE)

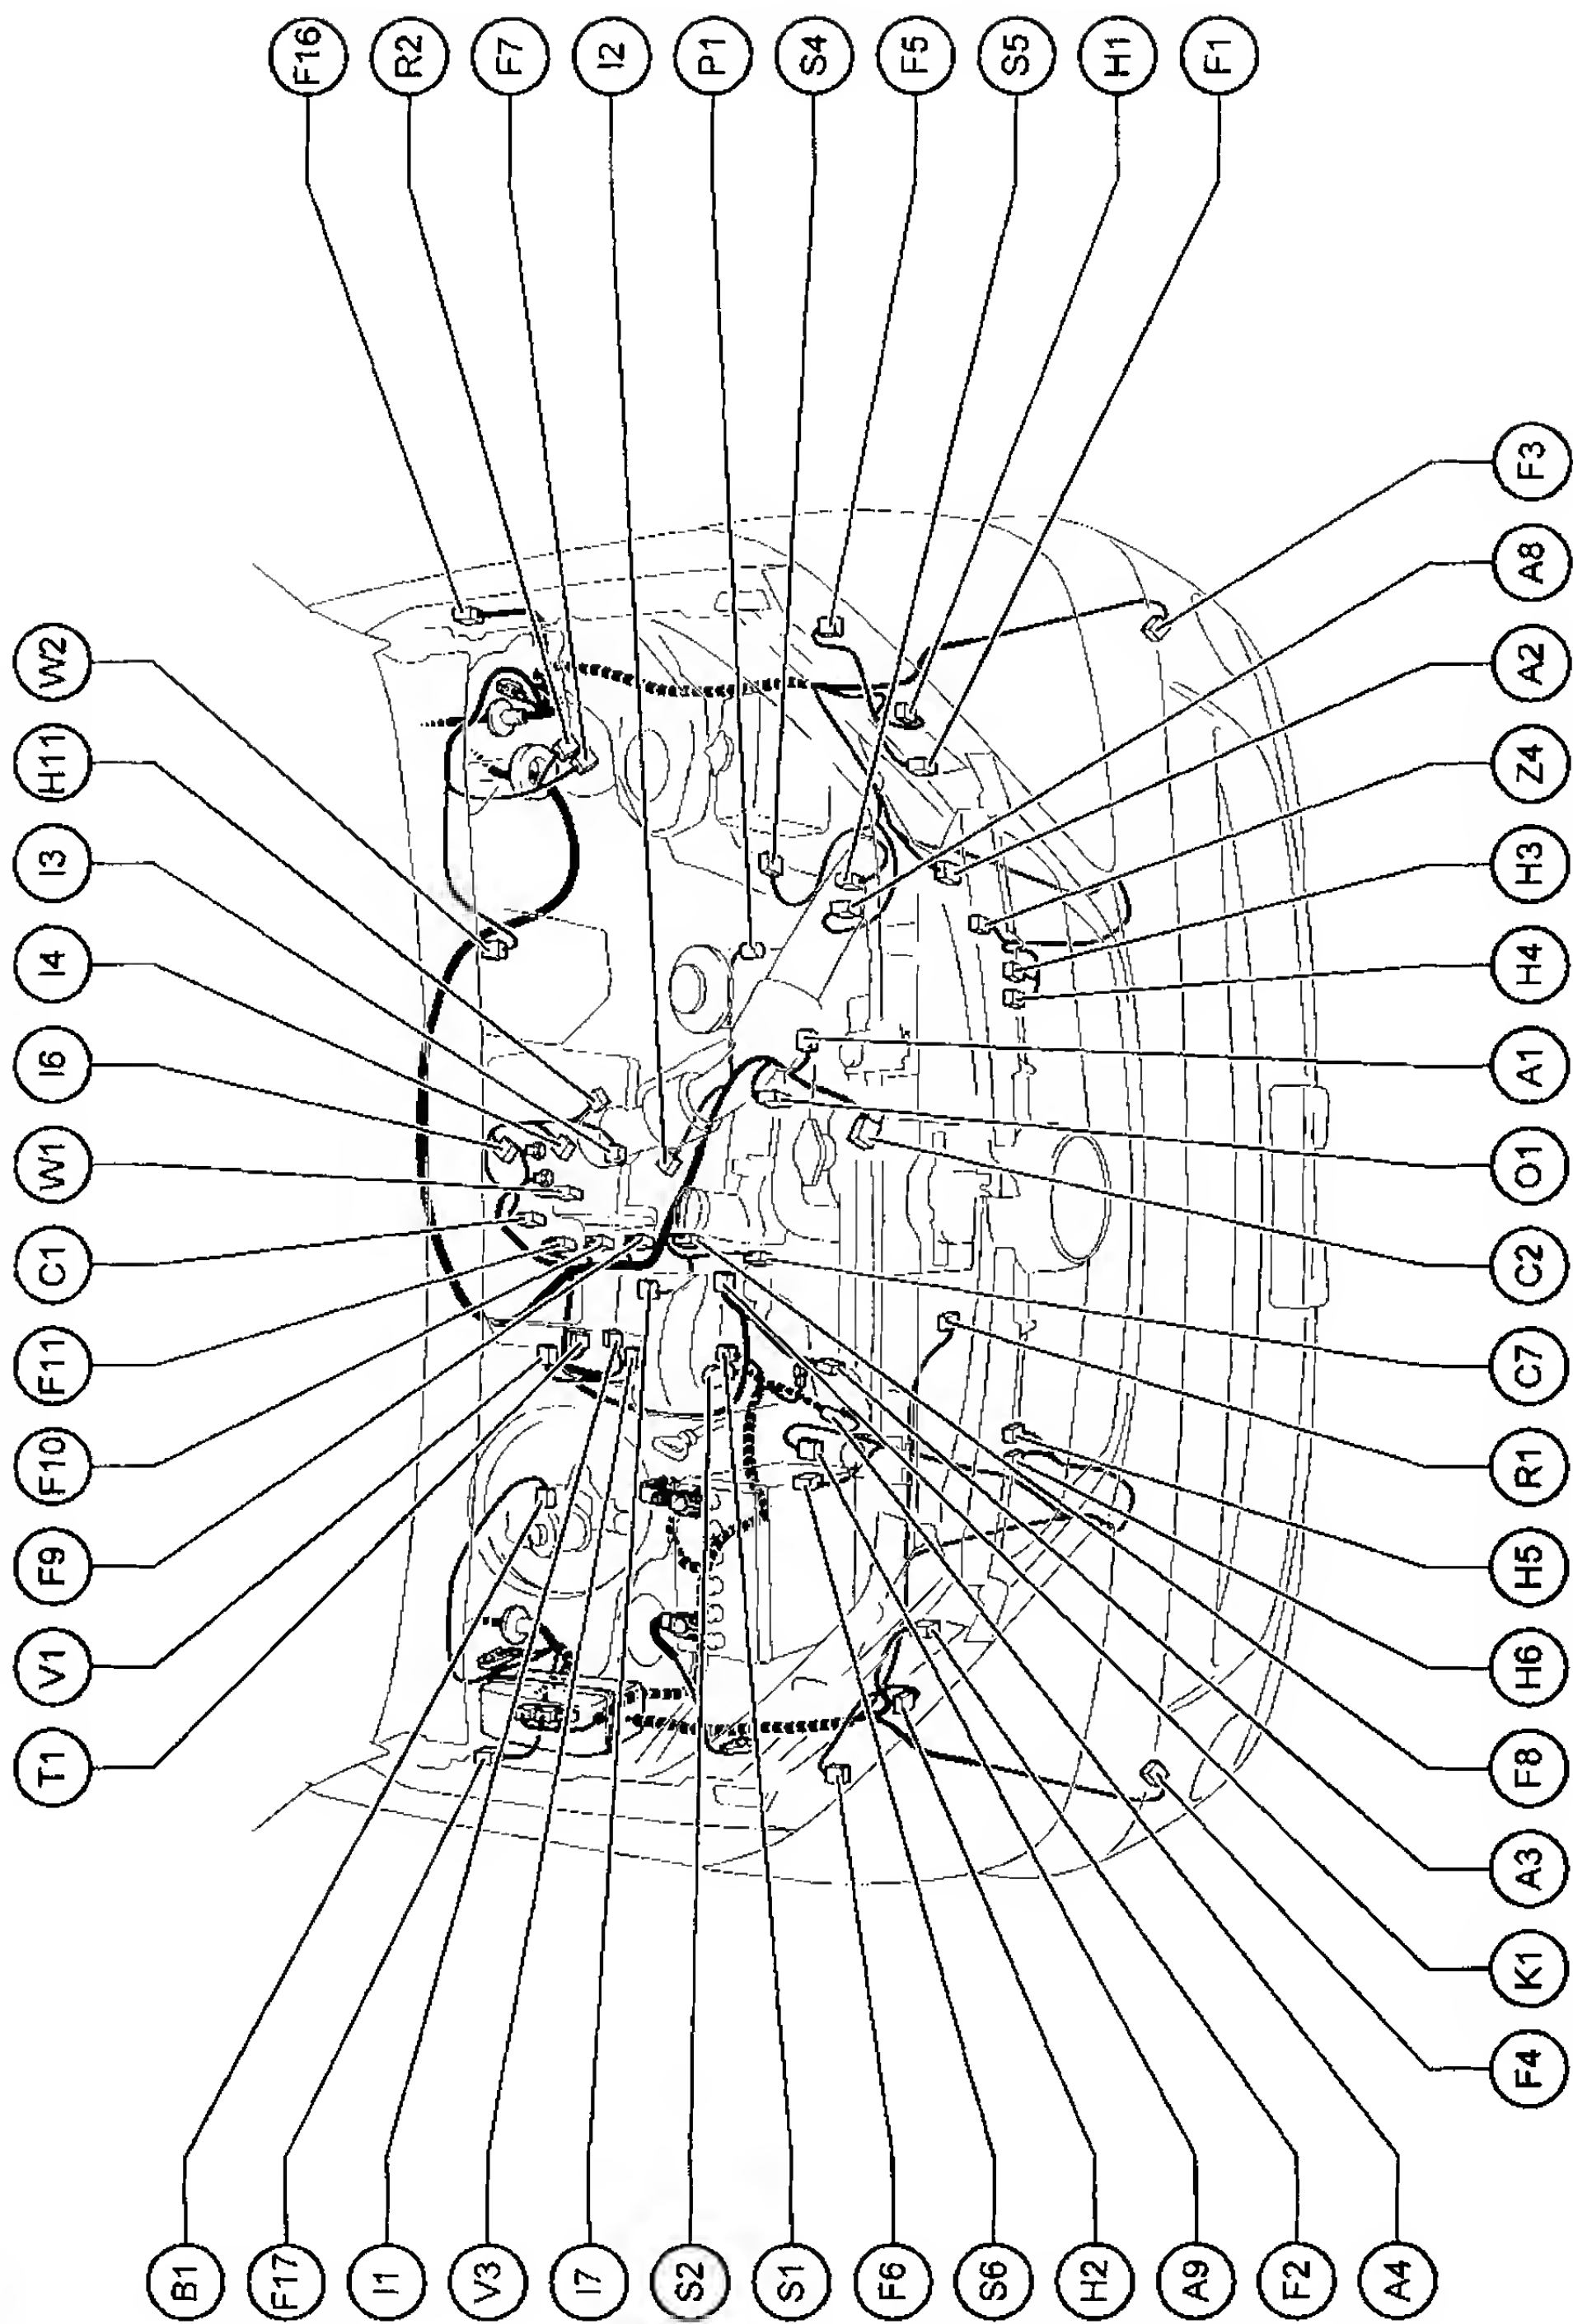

- A 1 A/C Magnetic Clutch
- A 2 A/C Pressure SW
- A 3 Alternator
- A 4 Alternator
- A 8 Airbag Sensor Front LH
- A 9 Airbag Sensor Front RH

- B 1 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Crankshaft Position Sensor
- C 7 Camshaft Timing Oil Control Valve

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Turn Signal Light LH
- F 6 Front Turn Signal Light RH
- F 7 Front Washer Pump
- F 8 Fuel Injector No.1
- F 9 Fuel Injector No.2
- F 10 Fuel Injector No.3
- F 11 Fuel Injector No.4
- F 16 Front Side Turn Signal Light LH
- F 17 Front Side Turn Signal Light RH

- H 1 Headlight LH
- H 2 Headlight RH
- H 3 Horn (High)
- H 4 Horn (High)
- H 5 Horn (Low)
- H 6 Horn (Low)
- H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)

- I 1 Idle Speed Control Actuator
- I 2 Ignition Coil No.1
- I 3 Ignition Coil No.2
- I 4 Ignition Coil No.3
- I 6 Ignition Coil No.4
- I 7 Inlet Air Temperature Sensor

- K 1 Knock Control Sensor

- O 1 Oil Pressure SW

- P 1 Power Steering Oil Pressure SW

- R 1 Radiator Fan Motor
- R 2 Rear Washer Pump

- S 1 Starter
- S 2 Starter
- S 4 Skid Control ECU with Actuator
- S 5 Speed Sensor Front LH
- S 6 Speed Sensor Front RH

- T 1 Throttle Position Sensor

Position of Parts in Engine Compartment <From Aug. 2006 Production K3-VE>

V 1 Vacuum Sensor



V 3 VSV (EVAP)

W 1 Water Temperature Sensor

W 2 Windshield Wiper Motor


Z 4 Option Connector (Engine Hood Courtesy SW)

Position of Parts in Engine Compartment <From Aug. 2006 Production K3-VE>

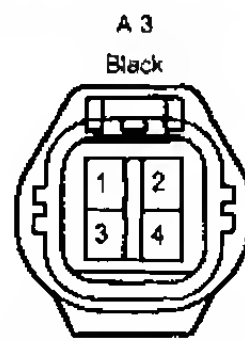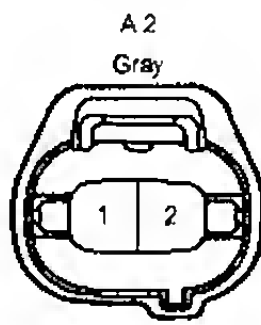


(From Aug. 2006 Production EJ-VE)

(From Aug. 2006 Production Except EJ-VE)

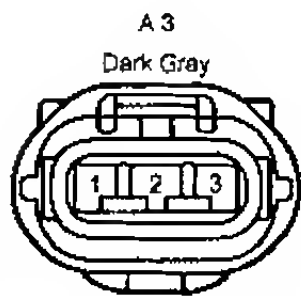


(Before Aug. 2006 Production Except K3-VE)




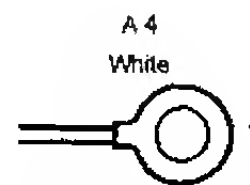


(From Aug. 2006 Production)


(Before Aug. 2006 Production K3-VE)

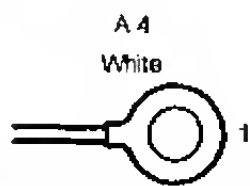


(Before Aug. 2006 Production)

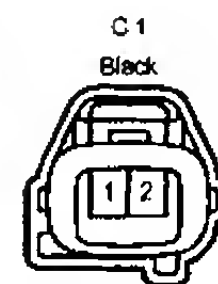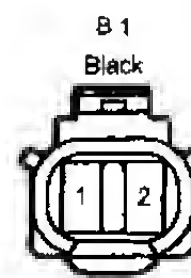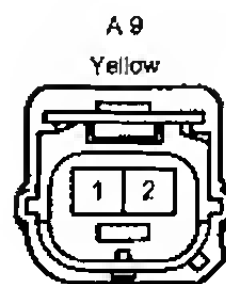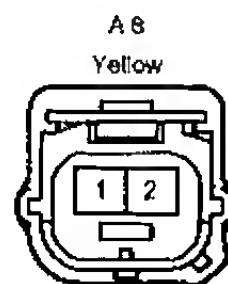


(EJ-VE, EJ-DE)

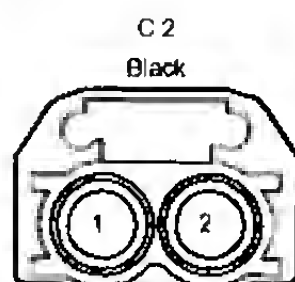


(Except EJ-VE, EJ-DE)

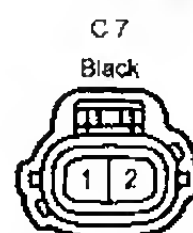


(Except EJ-VE)

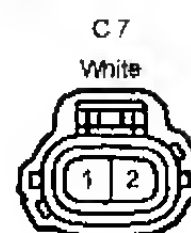


(EJ-VE)

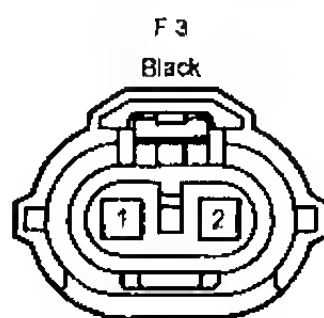


(From Aug. 2006 Production)

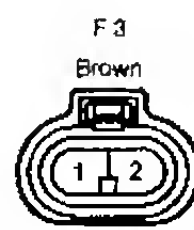




(Before Aug. 2006 Production)

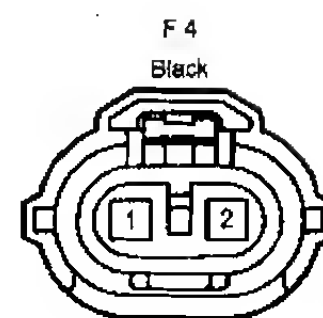


(From Aug. 2006 Production)

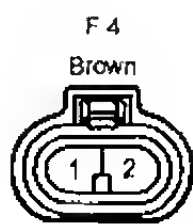

(Before Aug. 2006 Production)

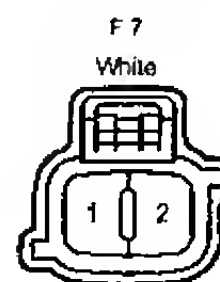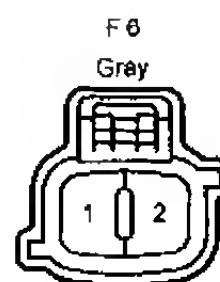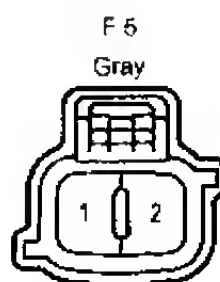


(EJ-VE, EJ-DE)

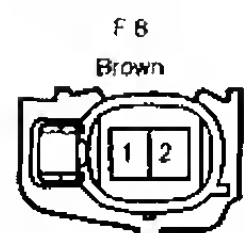


(Except EJ-VE, EJ-DE)




(EJ-VE, EJ-DE)

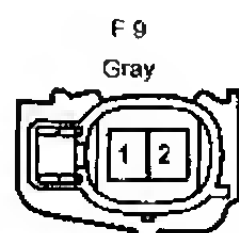

(Except EJ-VE, EJ-DE)





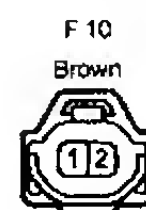


(EJ-VE, EJ-DE)

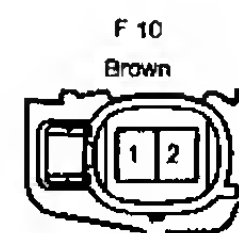

(Except EJ-VE, EJ-DE)


Position of Parts in Engine Compartment <From Aug. 2006 Production K3-VE>

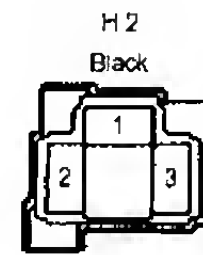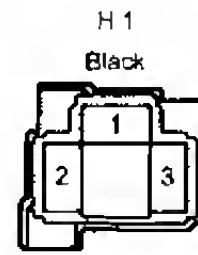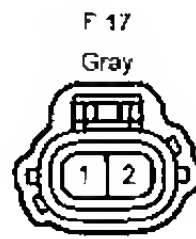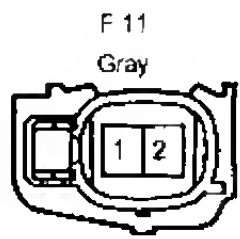


(From Aug. 2006 Production Except EJ-VE)




(EJ-VE, Before Aug. 2006 Production)

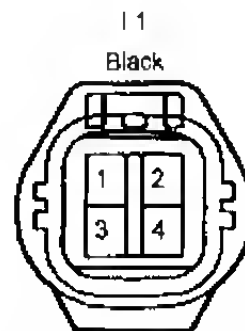


(From Aug. 2006 Production, Before Aug. 2006 Production Except K3-VE Indonesia, Brunei)

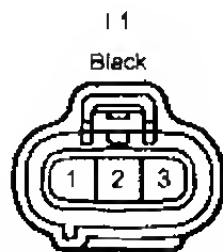

(Before Aug. 2006 Production K3-VE Indonesia, Brunei)

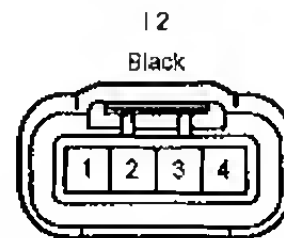

(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)

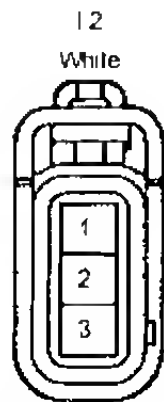


(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)



(K3-DE)




(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)

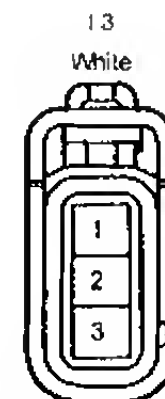

(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)




(K3-DE)

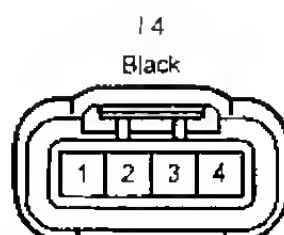


(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)


Position of Parts in Engine Compartment <From Aug. 2006 Production K3-VE>

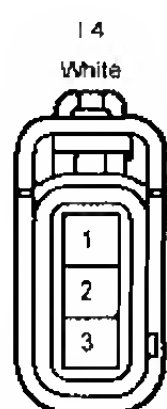



(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)

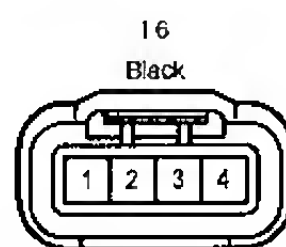

(From Aug. 2006 Production, Before Aug. 2006 Production K3-VE Thailand)

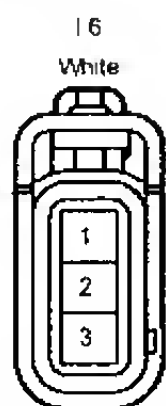


(Before Aug. 2006 Production K3-VE Except Thailand)

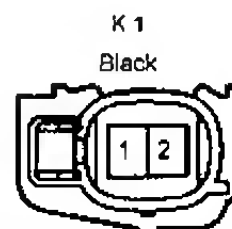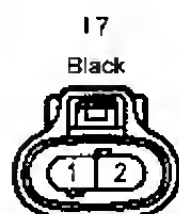




(From Aug. 2006 Production Except EJ-VE)




(Before Aug. 2006 Production Except EJ-DE)

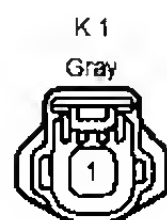



(EJ-VE, EJ-DE)

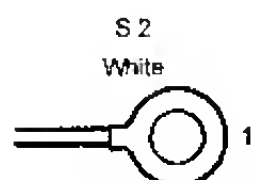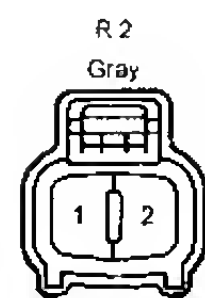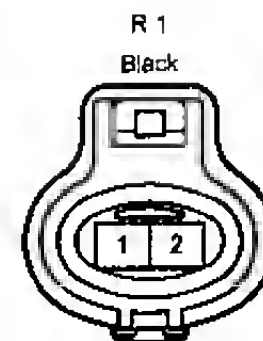


(From Aug. 2006 Production)

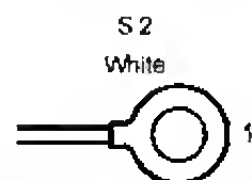


(Before Aug. 2006 Production)

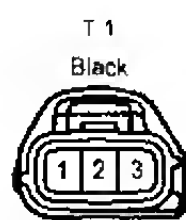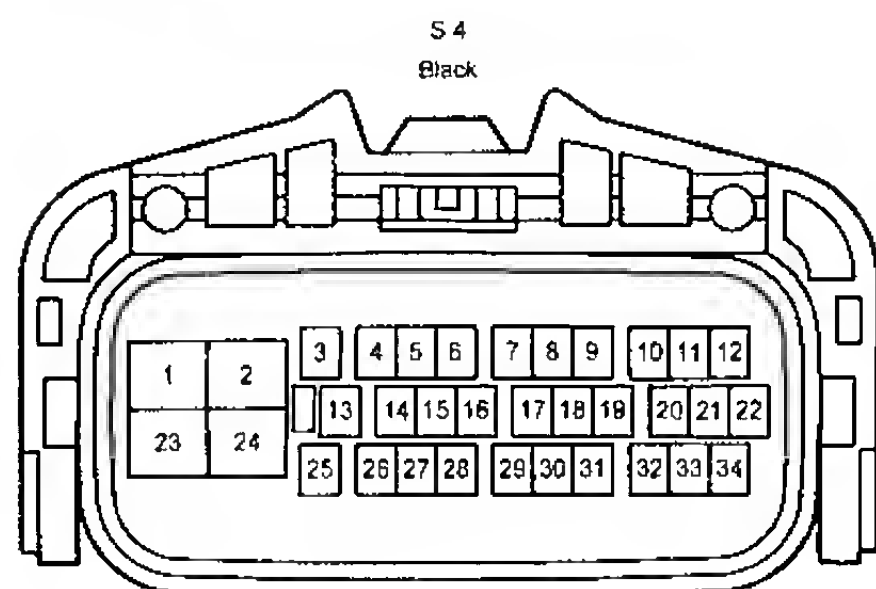


(From Aug. 2006 Production)

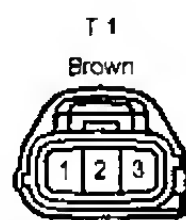

(Before Aug. 2006 Production)




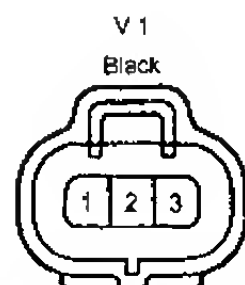


(From Aug. 2006 Production)

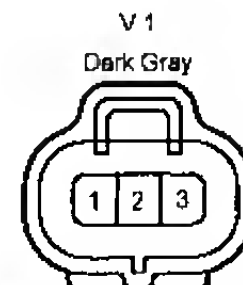


(Before Aug. 2006 Production)

Position of Parts in Engine Compartment <From Aug. 2006 Production K3-VE>

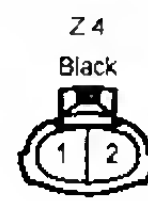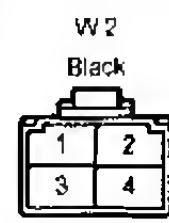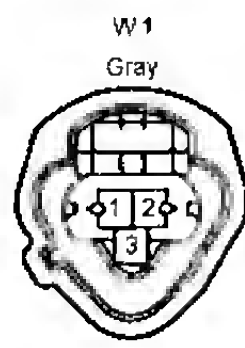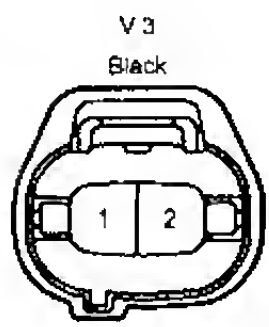

BAB III

Position of Parts in Engine Compartment (EJ-VE)

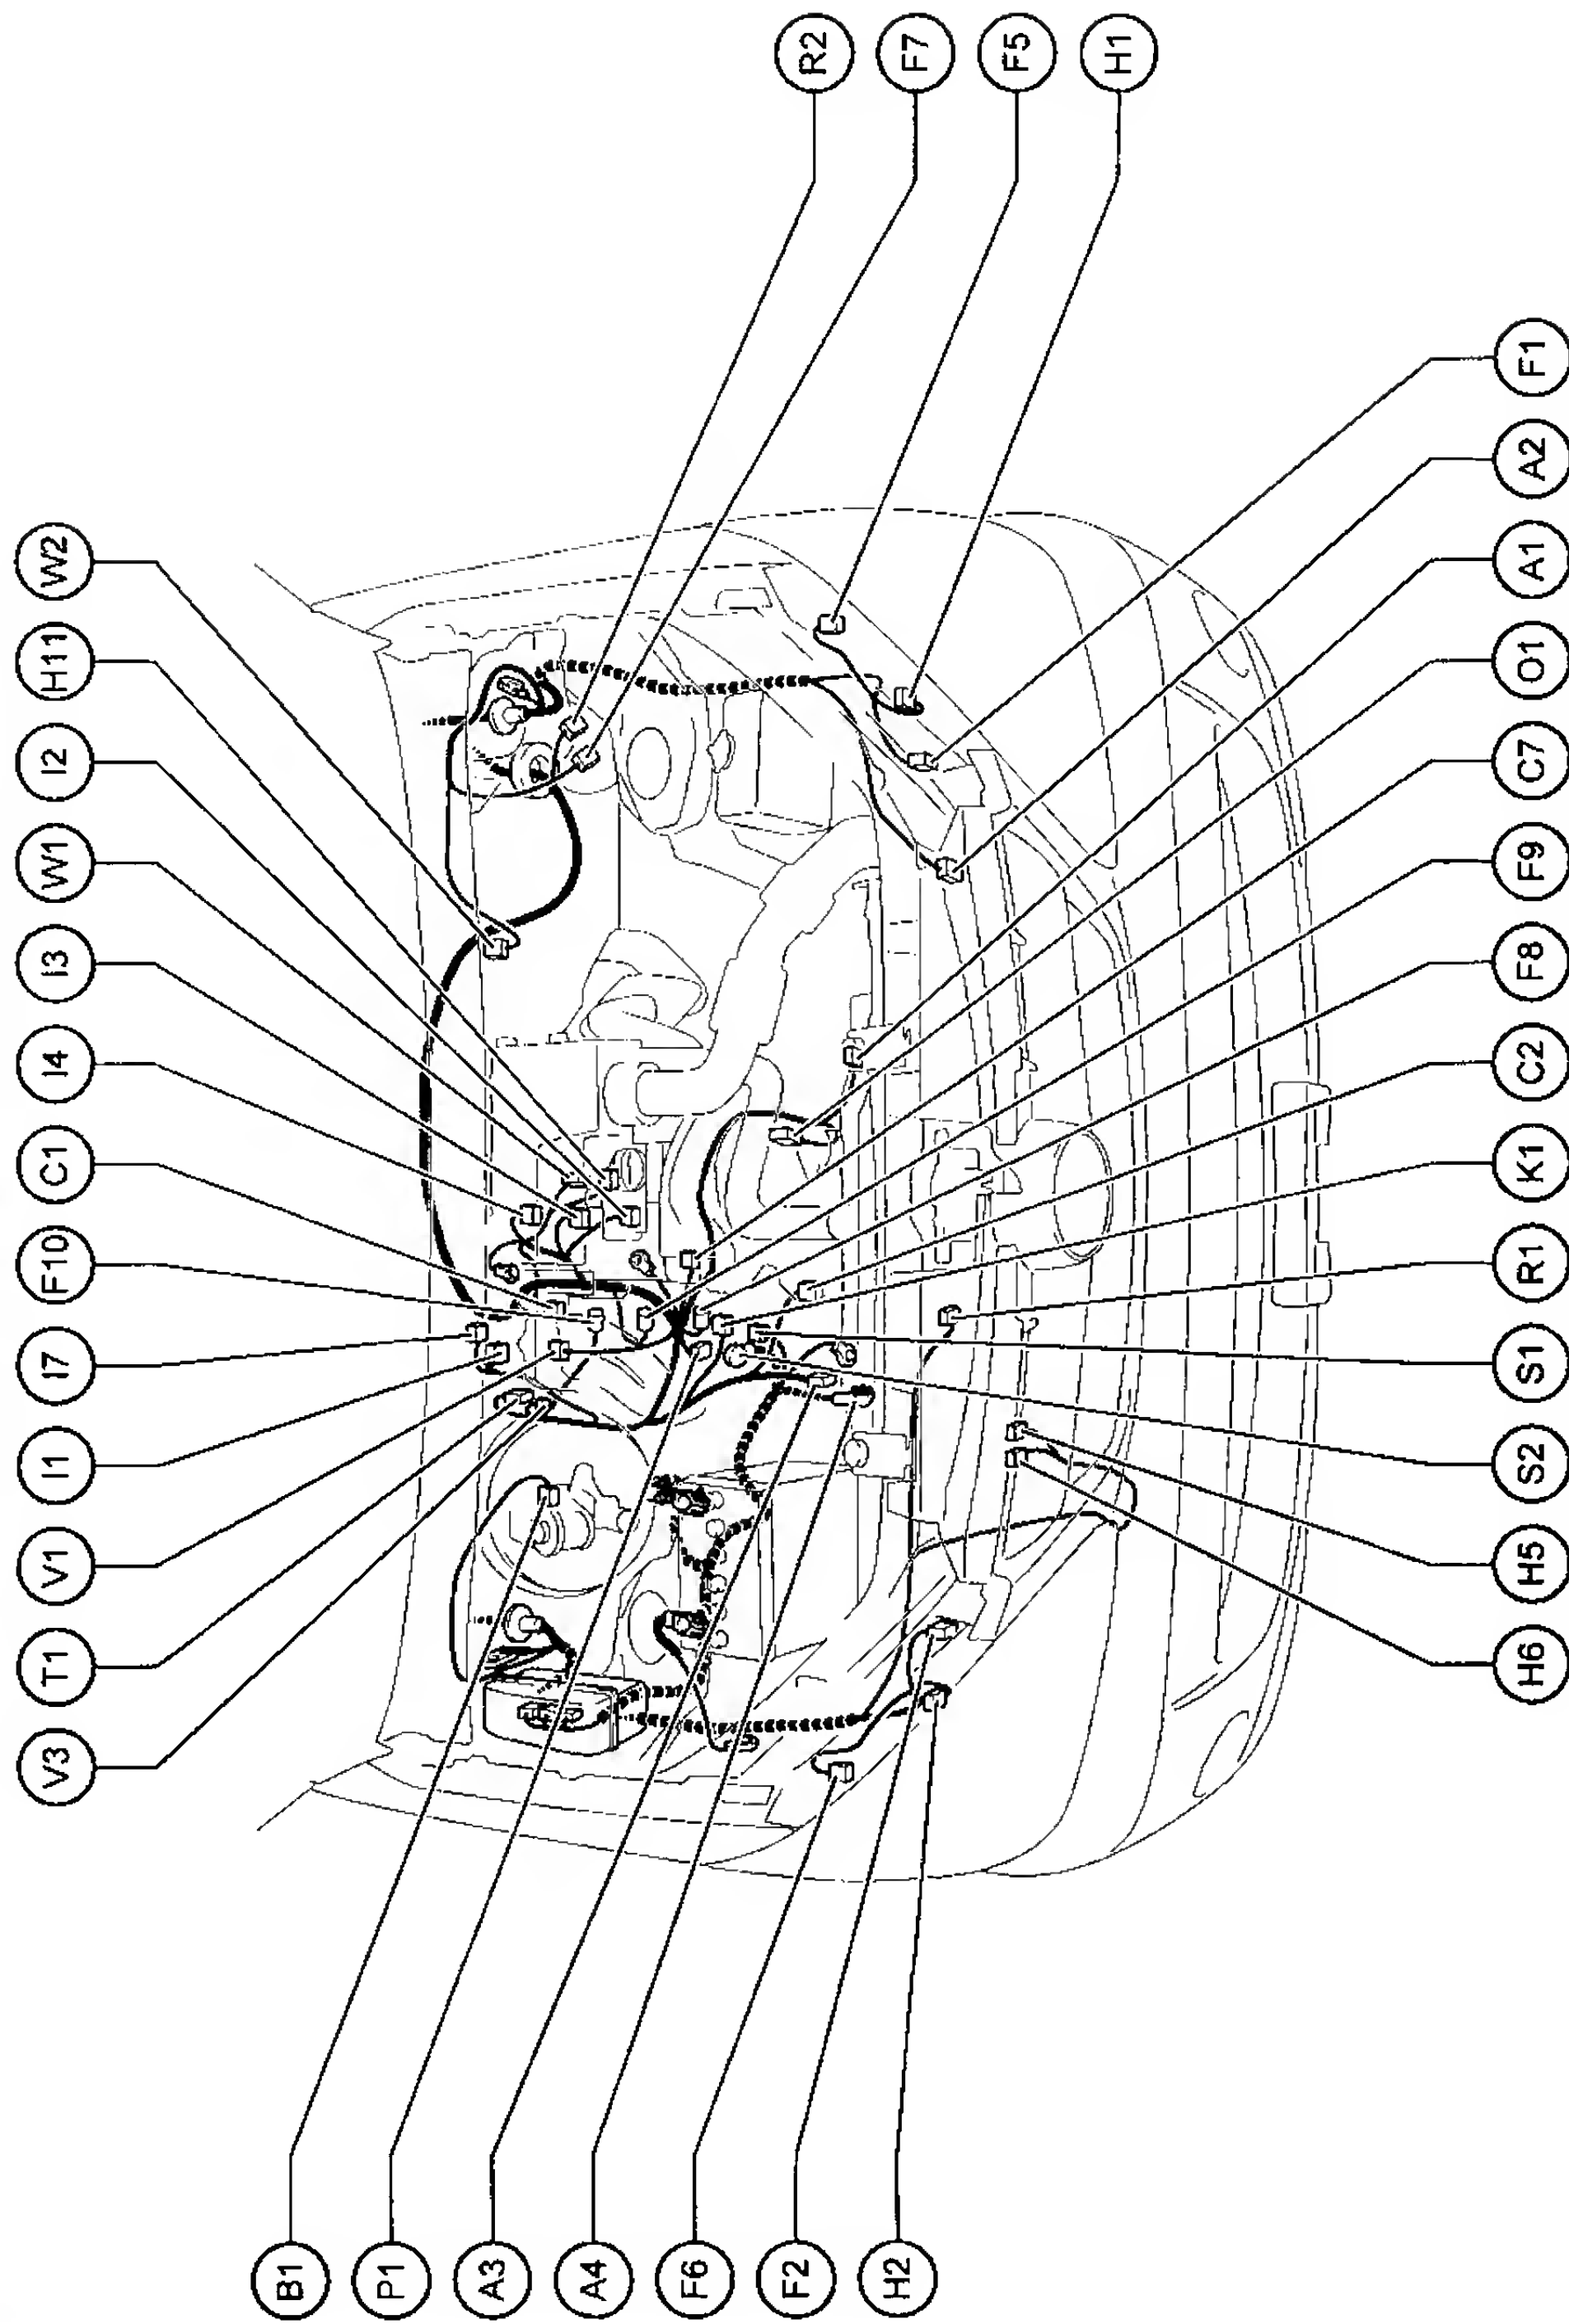

Position of Parts in Engine Compartment <EJ-VE>

- A 1 A/C Magnetic Clutch
- A 2 A/C Pressure SW
- A 3 Alternator
- A 4 Alternator

- B 1 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Crankshaft Position Sensor
- C 7 Camshaft Timing Oil Control Valve

- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 5 Front Turn Signal Light LH
- F 6 Front Turn Signal Light RH
- F 7 Front Washer Pump
- F 8 Fuel Injector No.1
- F 9 Fuel Injector No.2
- F 10 Fuel Injector No.3

- H 1 Headlight LH
- H 2 Headlight RH
- H 5 Horn (Low)
- H 6 Horn (Low)
- H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)

- I 1 Idle Speed Control Actuator
- I 2 Ignition Coil No.1
- I 3 Ignition Coil No.2
- I 4 Ignition Coil No.3
- I 7 Inlet Air Temperature Sensor

- K 1 Knock Control Sensor

- O 1 Oil Pressure SW

- P 1 Power Steering Oil Pressure SW

- R 1 Radiator Fan Motor
- R 2 Rear Washer Pump



- S 1 Starter
- S 2 Starter

- T 1 Throttle Position Sensor

- V 1 Vacuum Sensor
- V 3 VSV (EVAP)


- W 1 Water Temperature Sensor
- W 2 Windshield Wiper Motor

Position of Parts in Engine Compartment <EJ-VE>

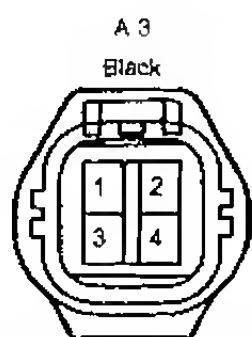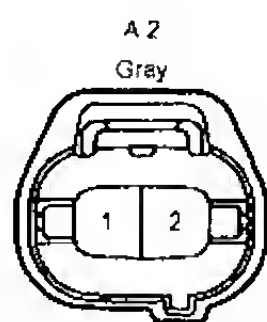

(From Aug. 2006 Production EJ-VE)


(From Aug. 2006 Production Except EJ-VE)

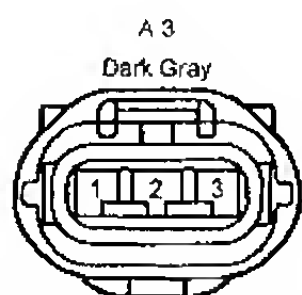


(Before Aug. 2006 Production K3-VE)



(Before Aug. 2006 Production Except K3-VE)

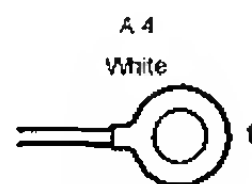


(From Aug. 2006 Production)

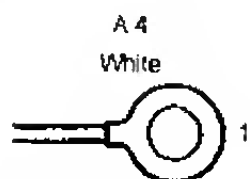


(Before Aug. 2006 Production)




(EJ-VE, EJ-DE)

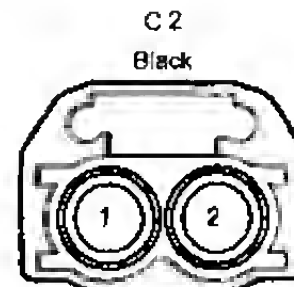




(Except EJ-VE, EJ-DE)

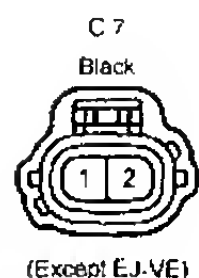


(Except EJ-VE)

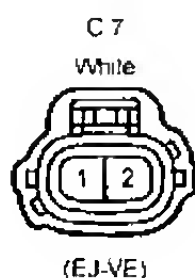

(EJ-VE)

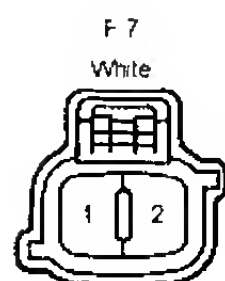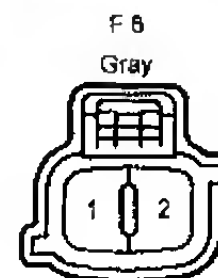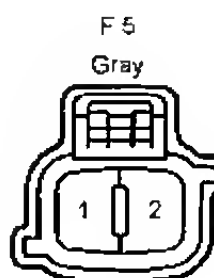


(EJ-VE, EJ-DE)

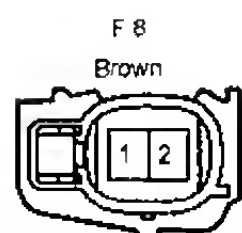


(Except EJ-VE, EJ-DE)




(EJ-VE, EJ-DE)

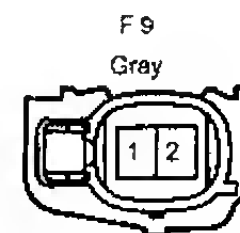






(Except EJ-VE, EJ-DE)

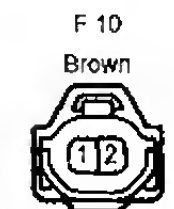

(EJ-VE, EJ-DE)

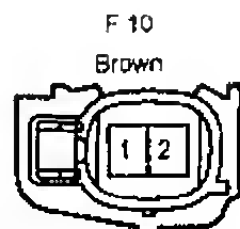

(Except EJ-VE, EJ-DE)

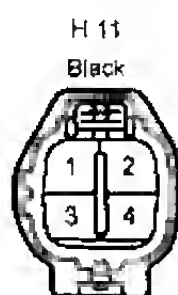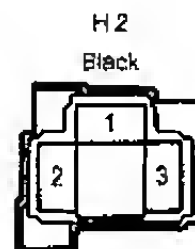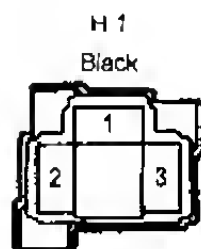


(From Aug. 2006 Production Except EJ-VE)




(EJ-VE, Before Aug. 2006 Production)


Position of Parts in Engine Compartment <EJ-VE>

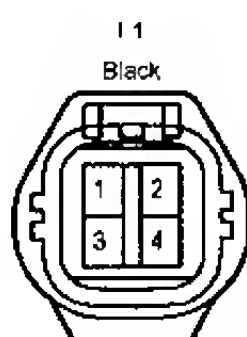


(From Aug. 2006 Production, Before Aug. 2006 Production Except K3-VE Indonesia, Brunei)

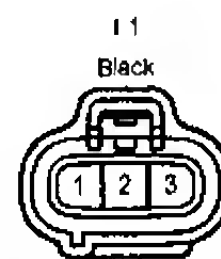


(Before Aug. 2006 Production K3-VE Indonesia, Brunei)

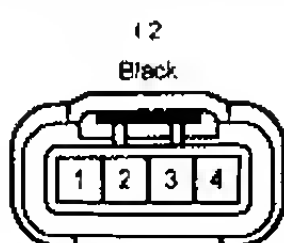


(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)

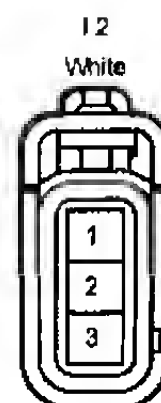


(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)

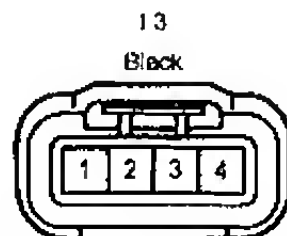


(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)

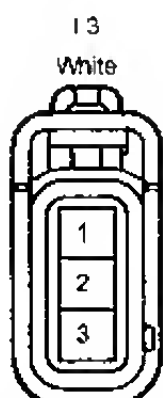



(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)

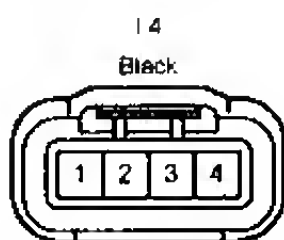

(From Aug. 2006 Production Except EJ-VE, Before Aug. 2006 Production K3-VE Thailand)

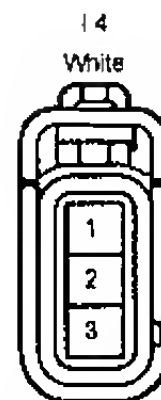


(EJ-VE, Before Aug. 2006 Production EJ-DE, K3-VE Except Thailand)

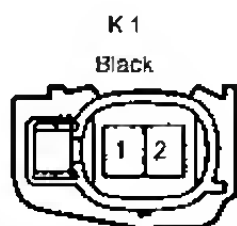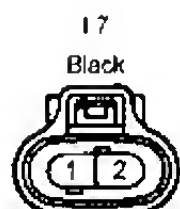

(From Aug. 2006 Production Except EJ-VE)














(Before Aug. 2006 Production Except EJ-DE)

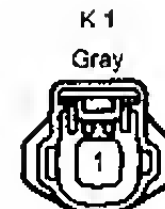


(EJ-VE, EJ-DE)

Position of Parts in Engine Compartment <EJ-VE>

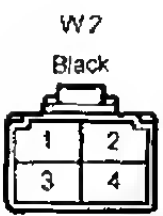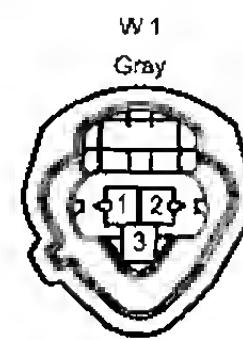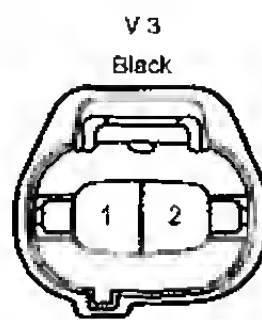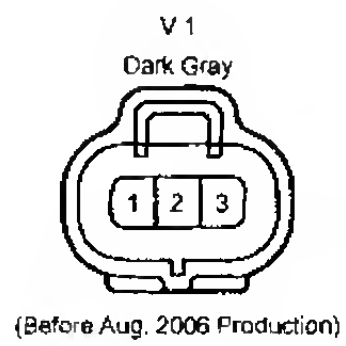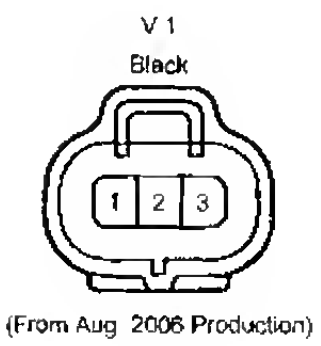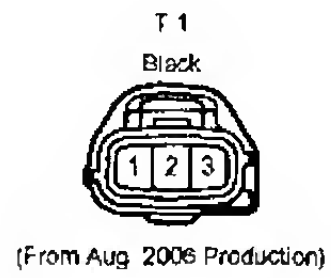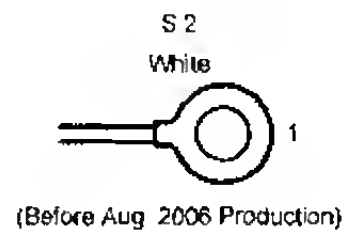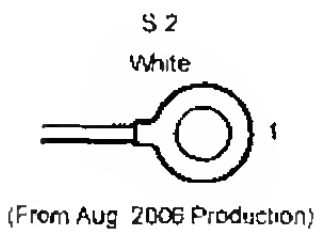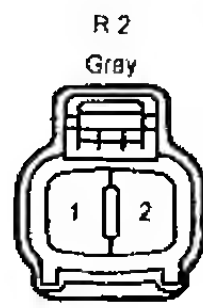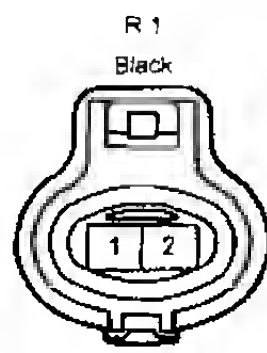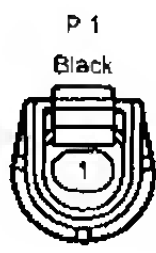

BAB IV

Position of Parts in Instrument Panel

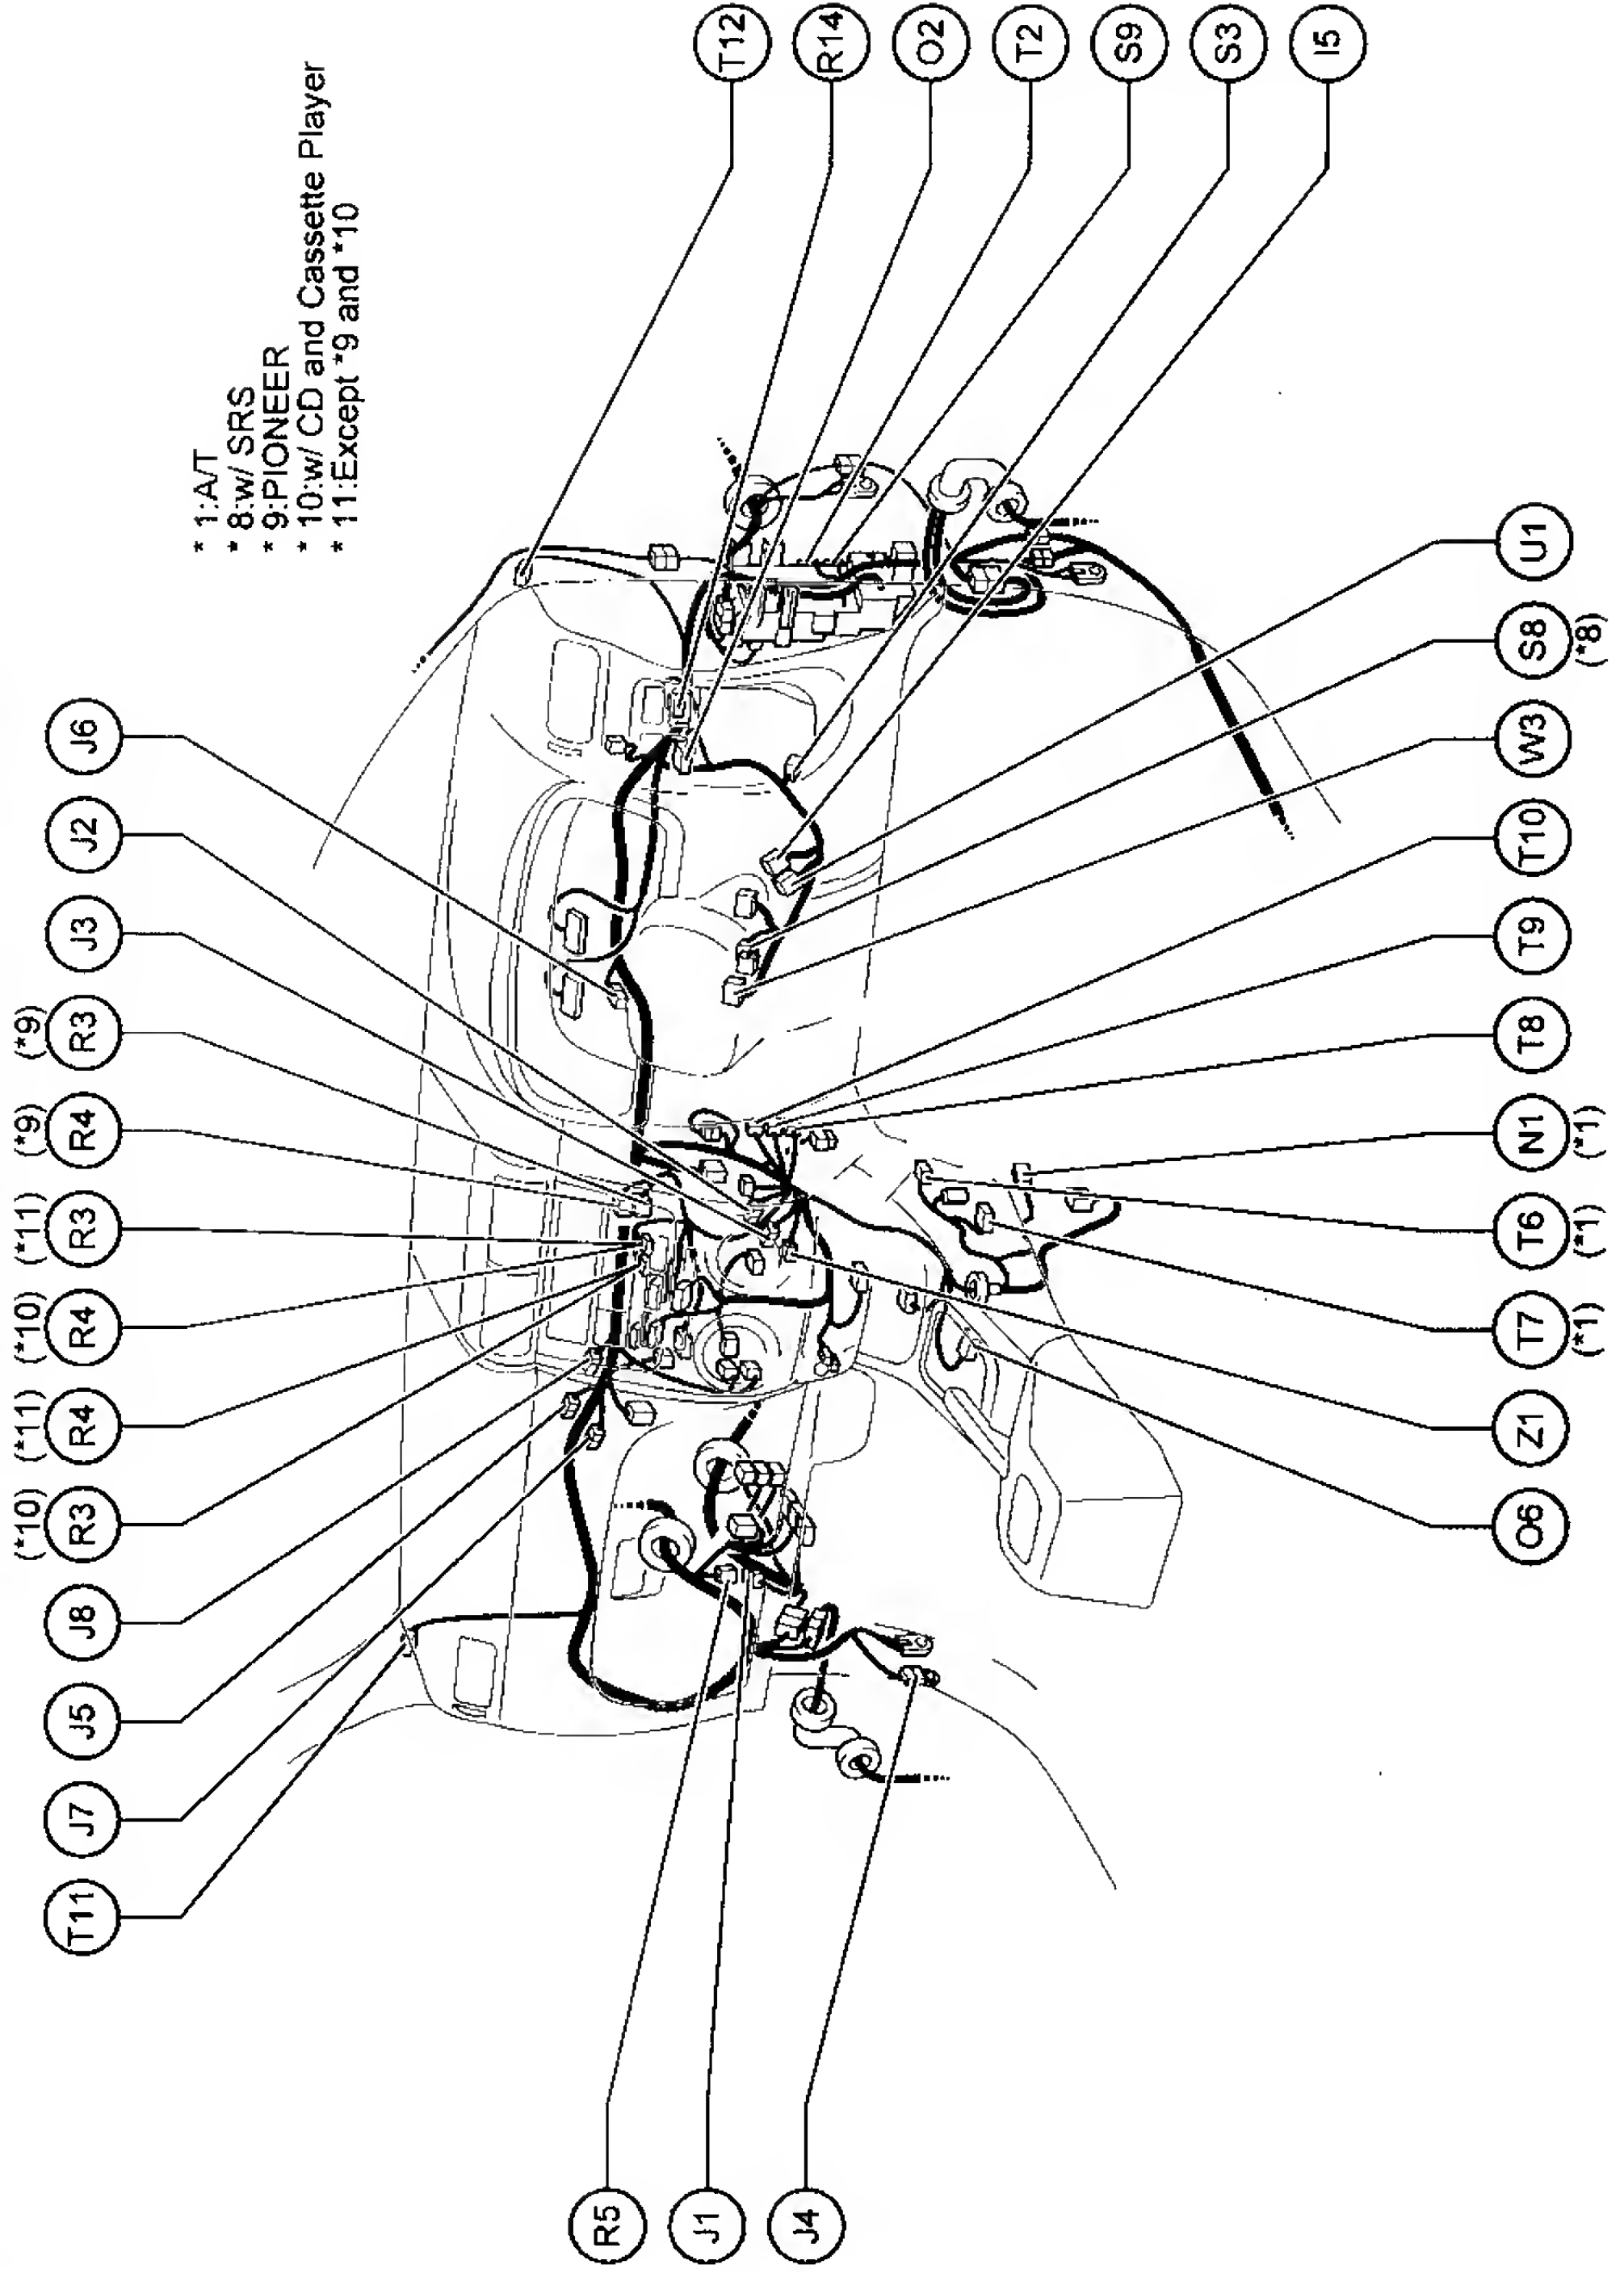

Position of Parts in Instrument Panel <From Aug. 2006 Production w/o Heater>

I 5 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector

N 1 Neutral Start SW

O 2 Outer Mirror SW
O 6 O/D Off SW

R 3 Radio Receiver
R 4 Radio Receiver
R 5 Resistor
R 14 Rear Window Defogger SW

S 3 Stop Light SW
S 8 Spiral Cable
S 9 Starter Relay























T 2 Turn Signal Flasher
T 6 Transmission Revolution Sensor (Front Clutch Drum)
T 7 Transmission Revolution Sensor (Output Shaft)
T 8 Transmission Control ECU
T 9 Transmission Control ECU
T 10 Transmission Control ECU
T 11 Tweeter LH
T 12 Tweeter RH

U 1 Unlock Warning SW


W 3 Windshield Wiper SW

Z 1 Option Connector


Position of Parts in Instrument Panel <From Aug. 2006 Production w/o Heater>

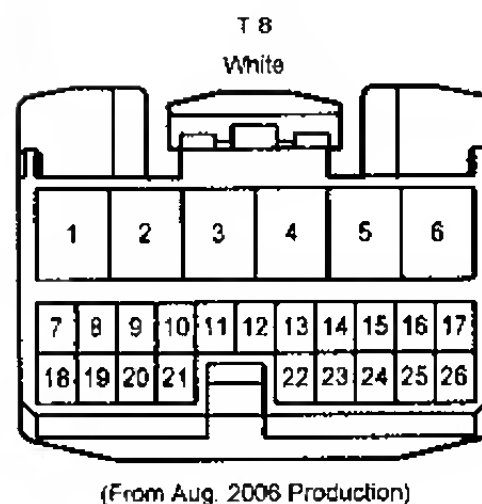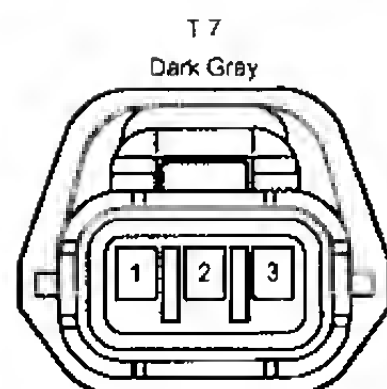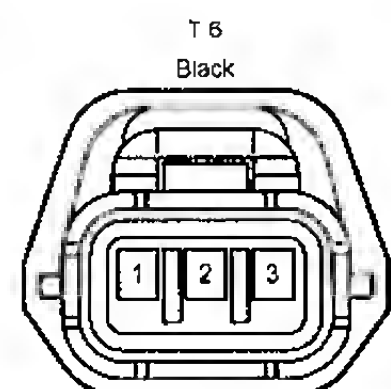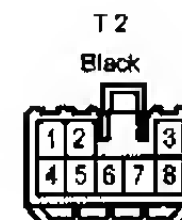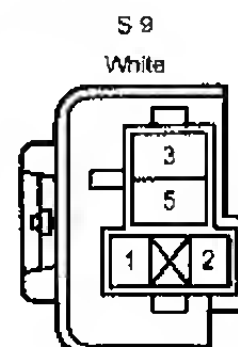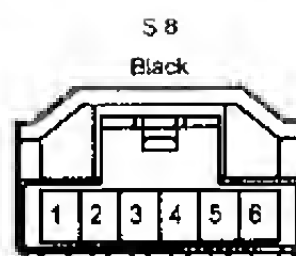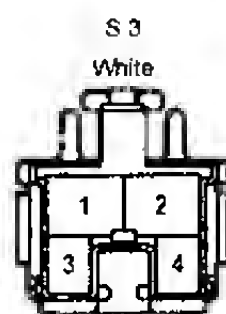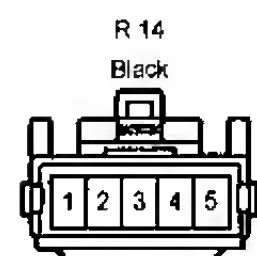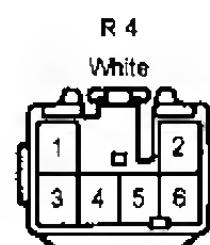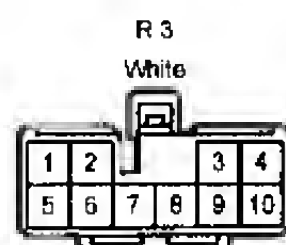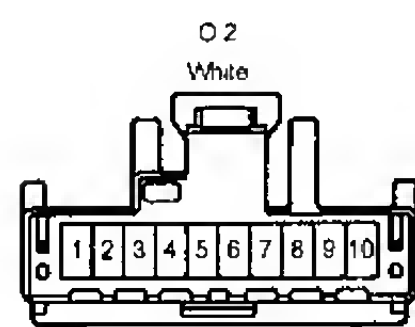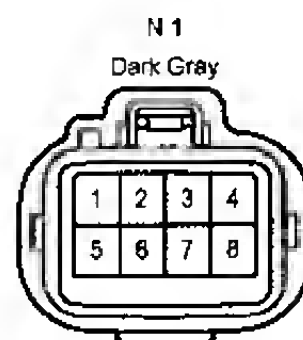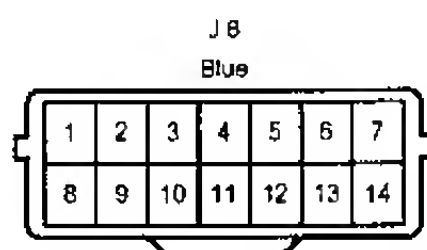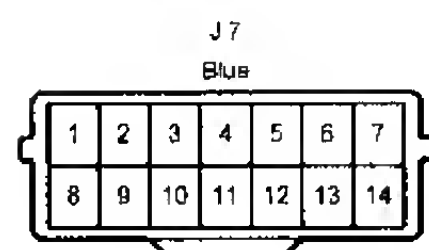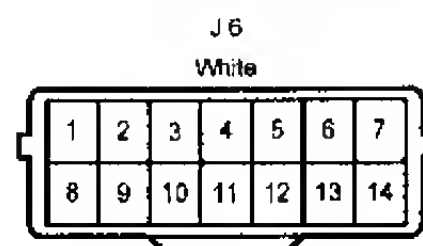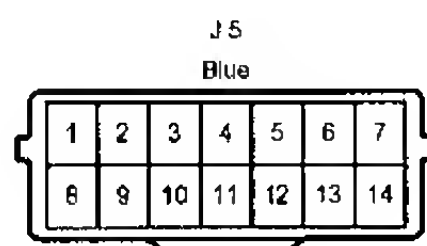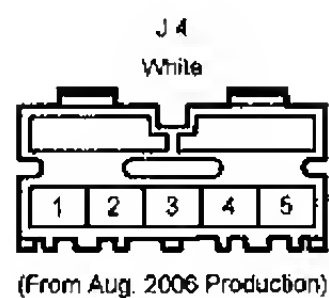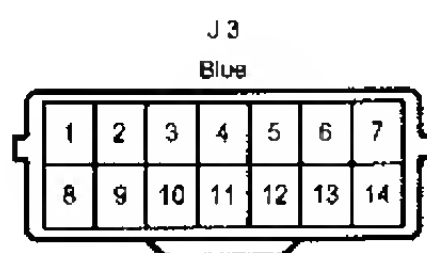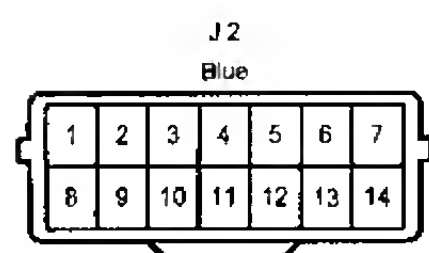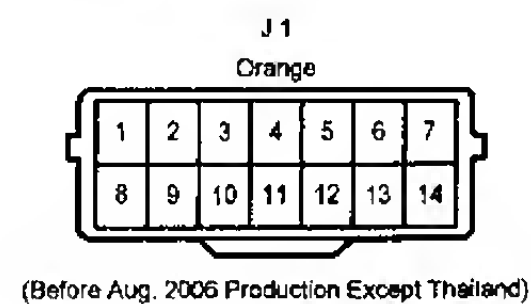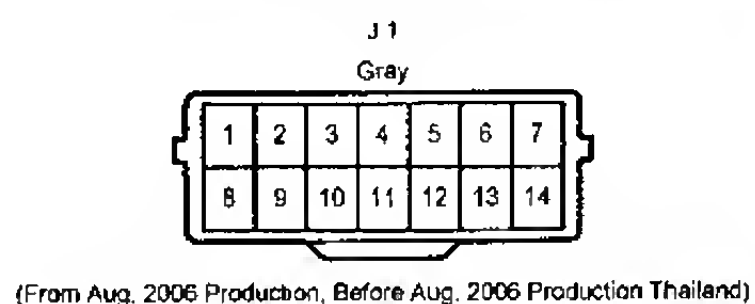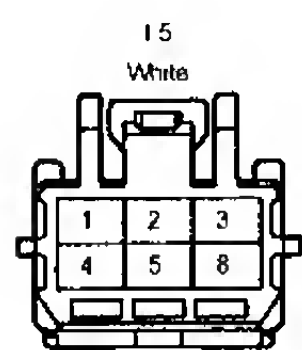


Position of Parts in Instrument Panel <From Aug. 2006 Production w/o Heater>

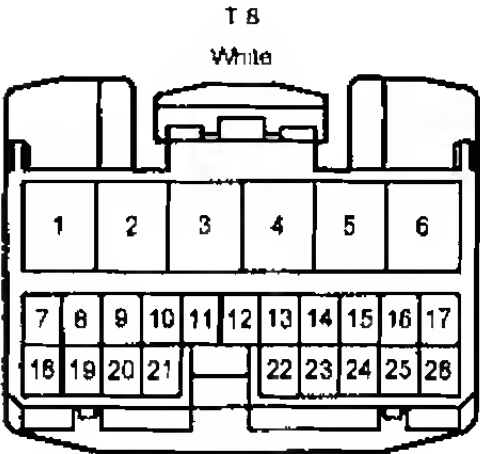


(Before Aug. 2006 Production)

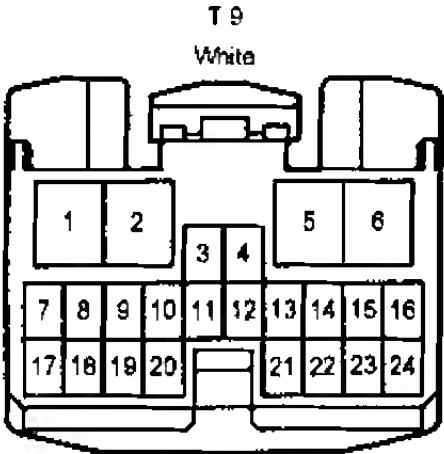


(From Aug. 2006 Production)

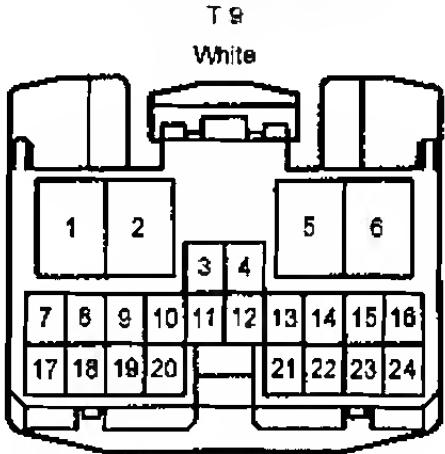



(Before Aug. 2006 Production)

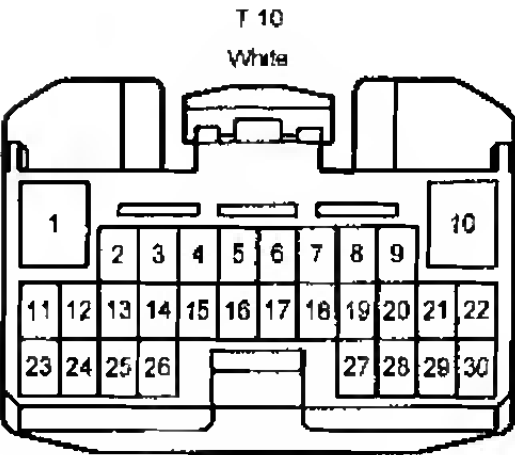


(From Aug. 2006 Production)

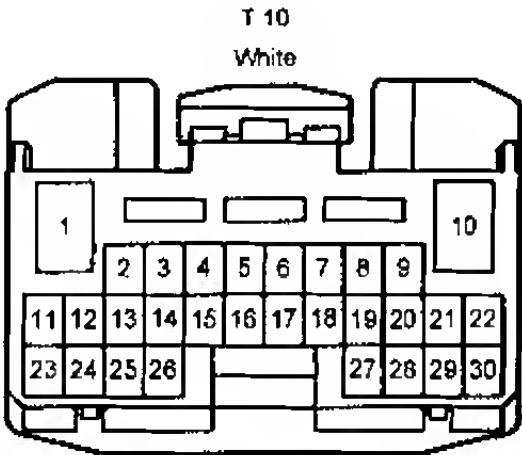

(Before Aug. 2006 Production)

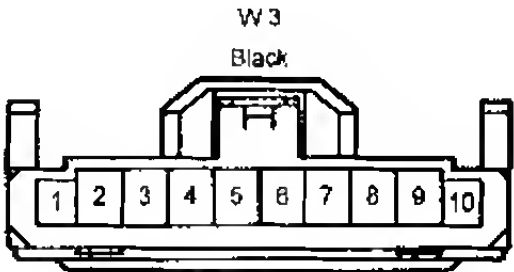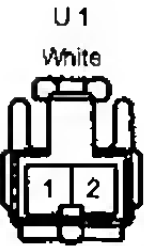

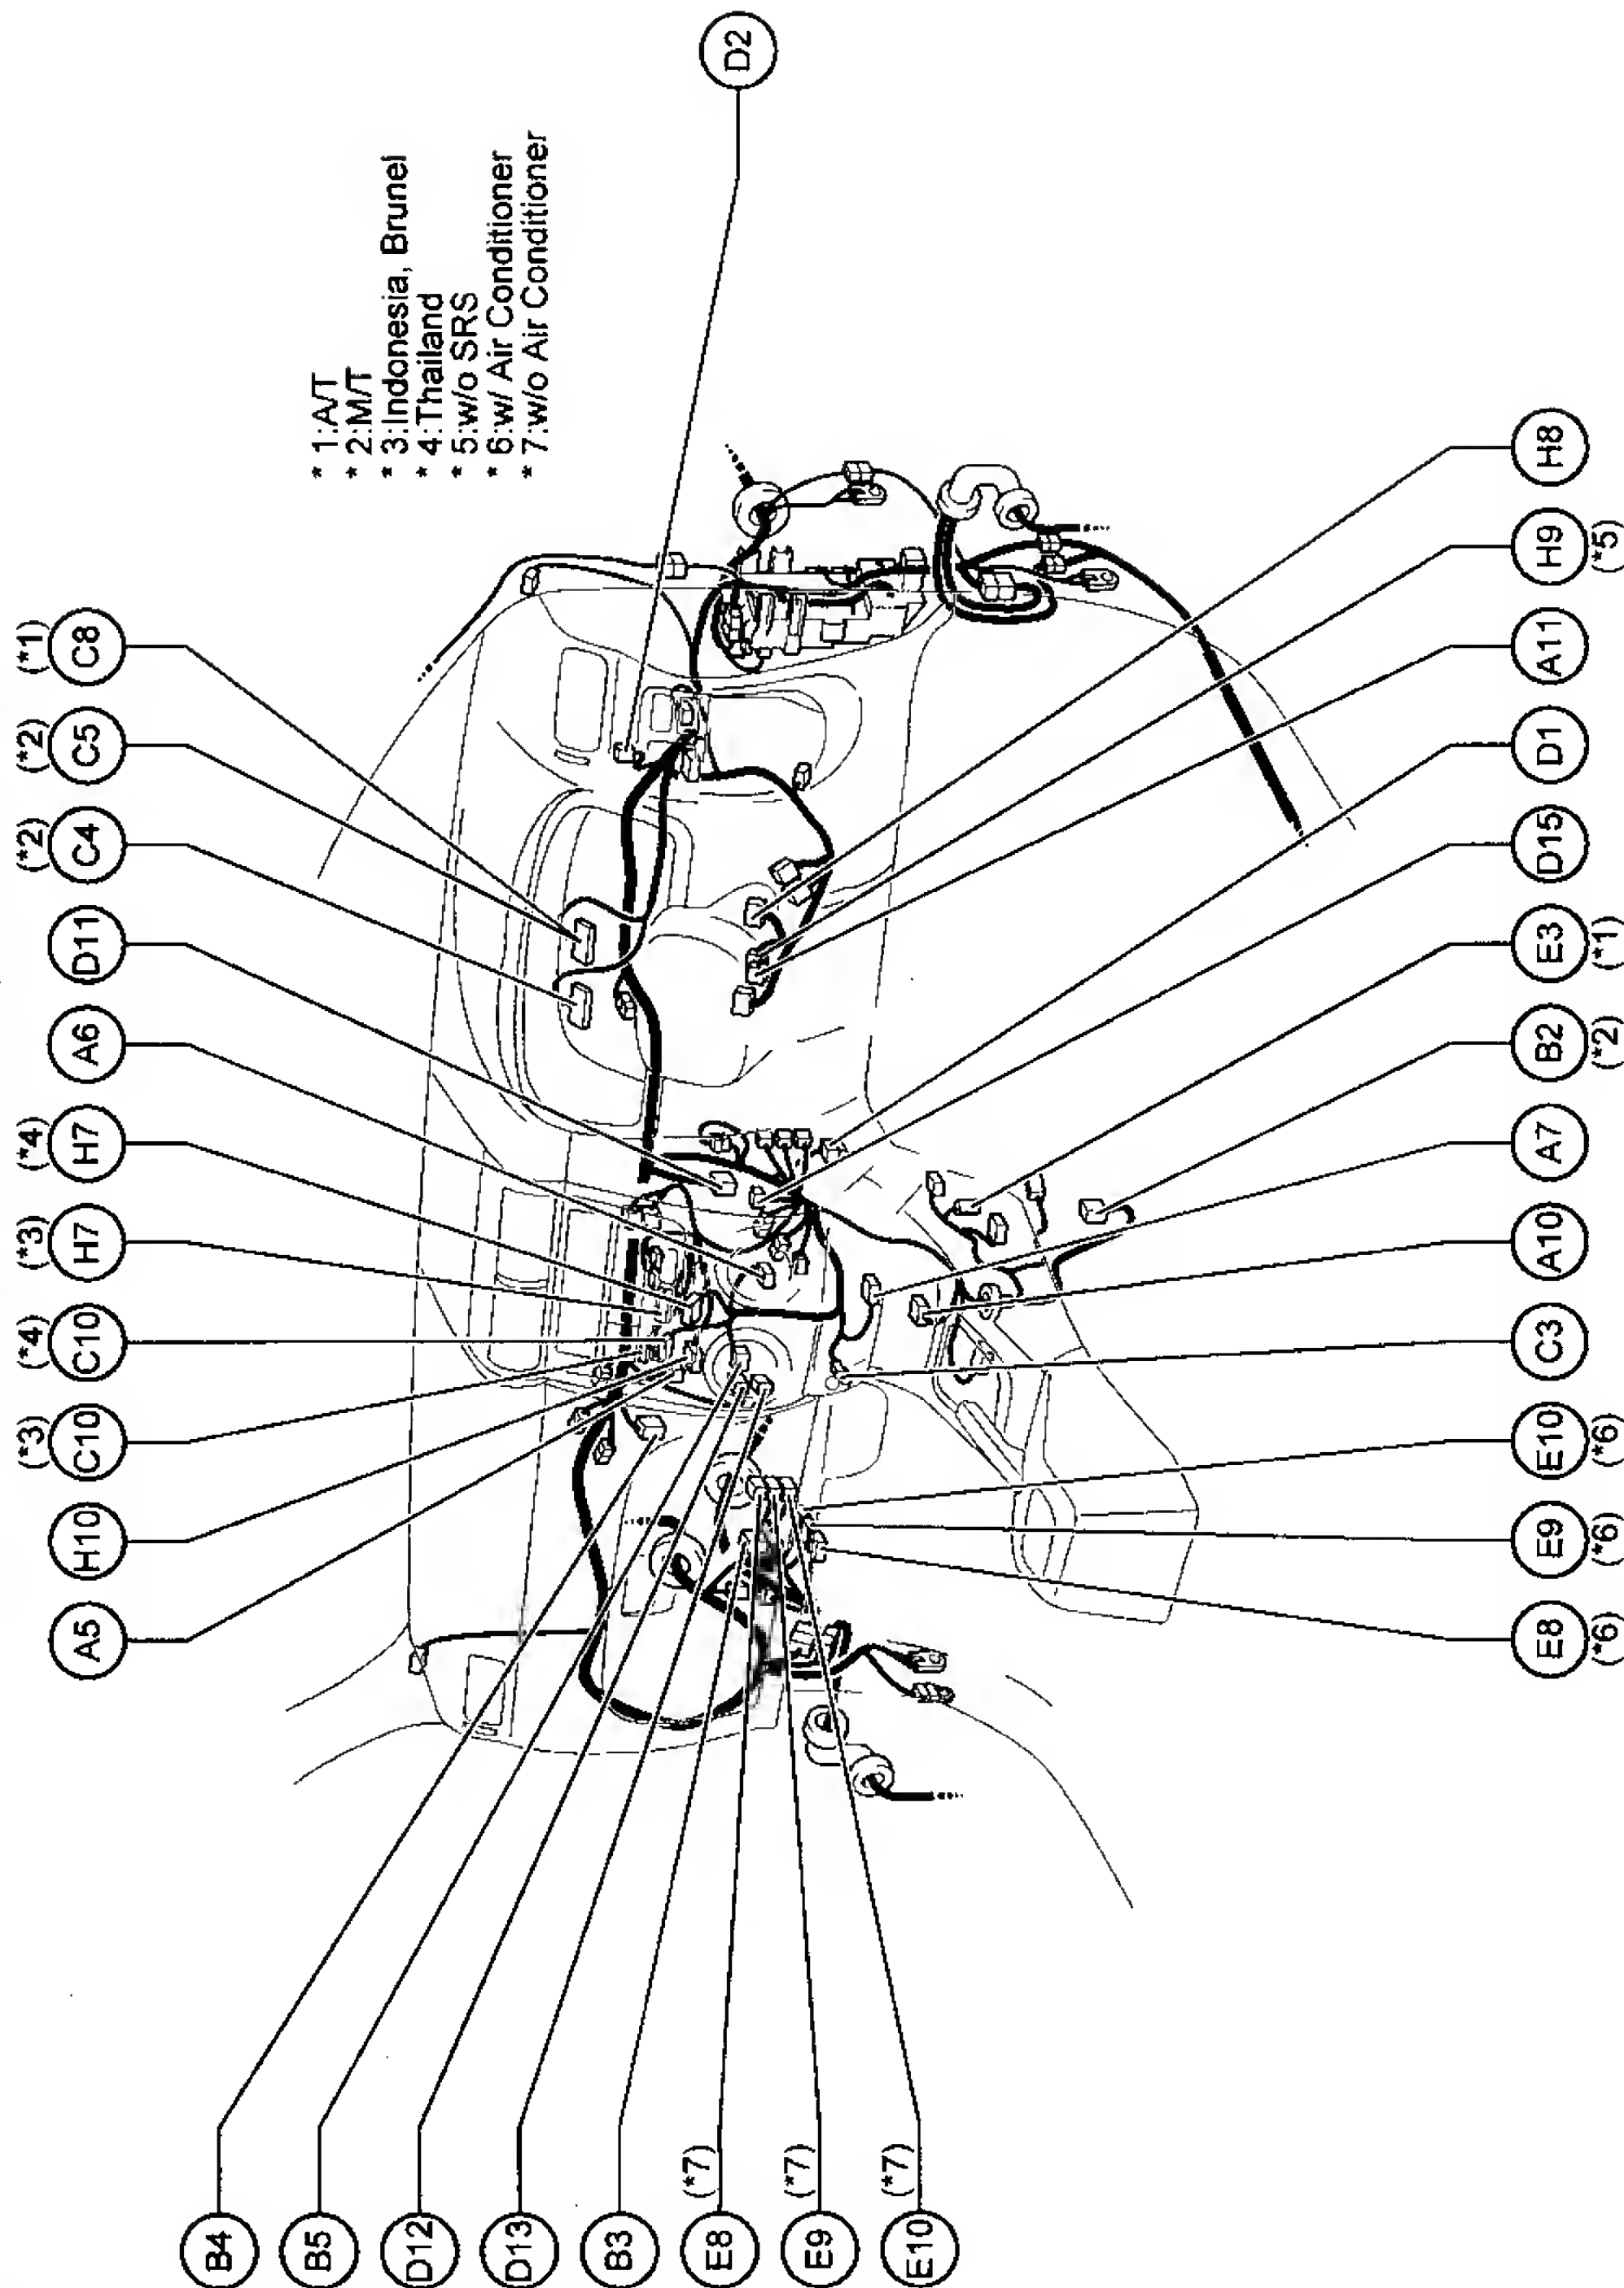

Position of Parts in Instrument Panel <From Aug. 2006 Production w/o Heater>

- A 5 A/C Thermistor
- A 6 A/C Volume SW
- A 7 Ash Receptacle Light
- A 10 Airbag Sensor Assembly Center
- A 11 Airbag Squib (Steering Wheel Pad)

- B 2 Back-Up Light SW
- B 3 Blower Motor
- B 4 Blower Resistor
- B 5 Blower SW




- C 3 Cigarette Lighter
- C 4 Combination Meter
- C 5 Combination Meter
- C 8 Combination Meter
- C 10 Clock

- D 1 DLC3
- D 2 Door Control Relay
- D 11 Diode
- D 12 Door Control Receiver
- D 13 Door Control Receiver
- D 15 Diode (Interior Light)

- E 3 ECT Solenoid
- E 8 Engine ECU
- E 9 Engine ECU
- E 10 Engine ECU




- H 7 Hazard Warning Signal SW
- H 8 Headlight Dimmer SW
- H 9 Horn SW
- H 10 Heater Control (Air Inlet Select Lever Illumination)

Position of Parts In Instrument Panel <From Aug. 2006 Production w/o Heater>

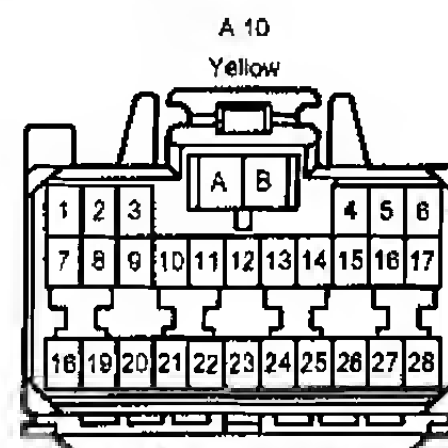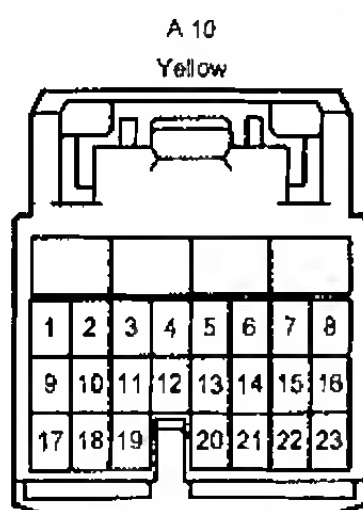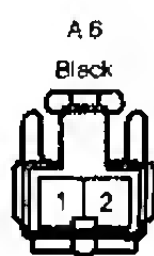


(w/o Front Passenger's Airbag)





(w/ Front Passenger's Airbag)

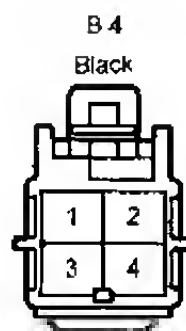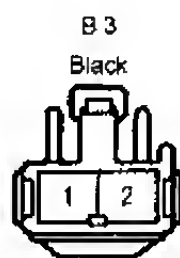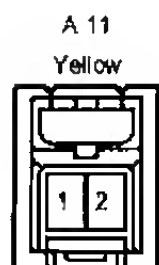


(w/ Heater)

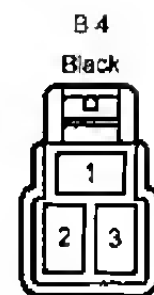





(w/o Heater)

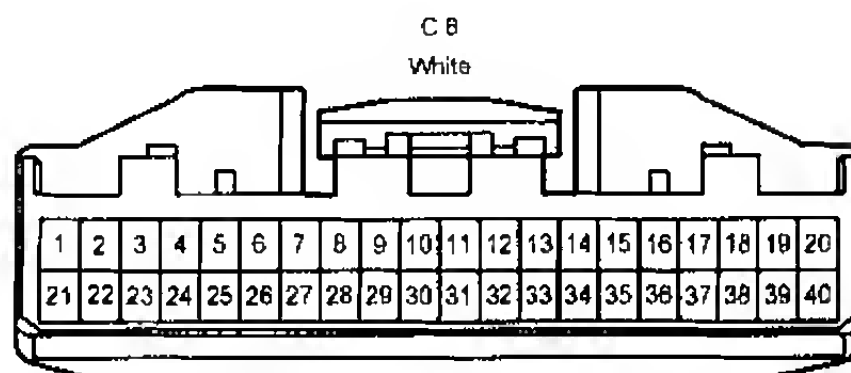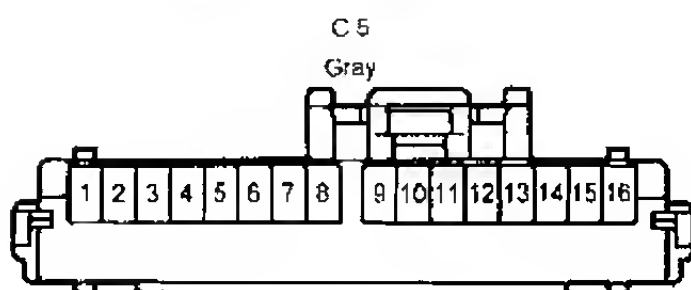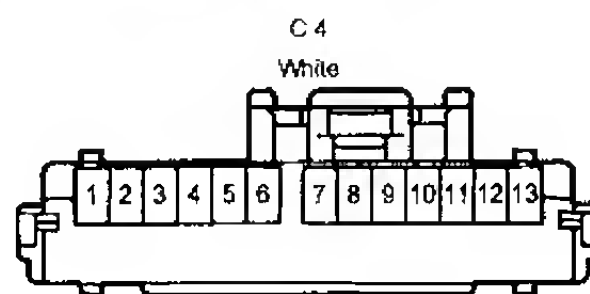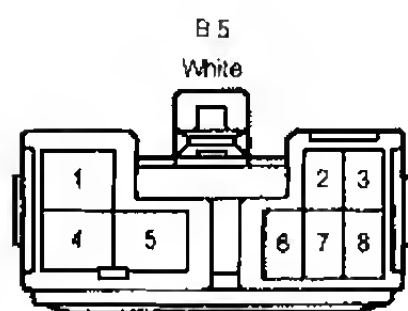









(From Aug. 2006 Production, Before Aug. 2006 Production Thailand)

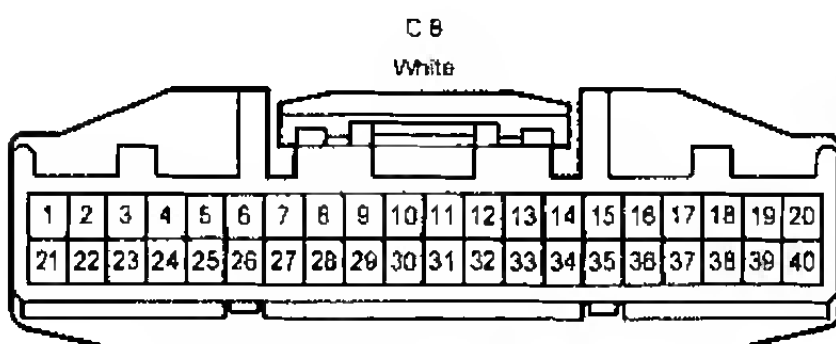

(Before Aug. 2006 Production Except Thailand)

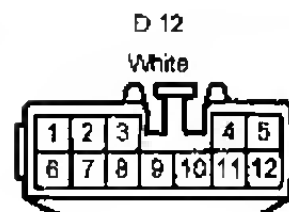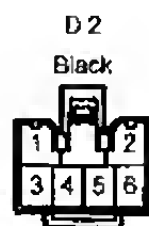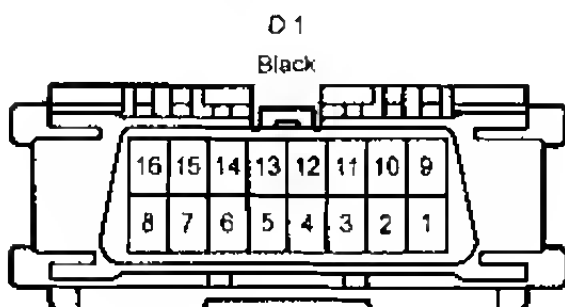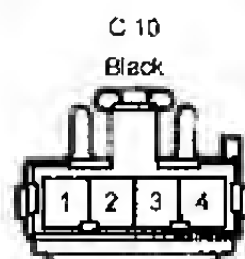


Position of Parts in Instrument Panel <From Aug. 2006 Production w/o Heater>

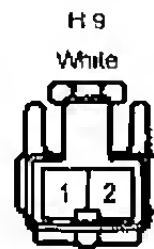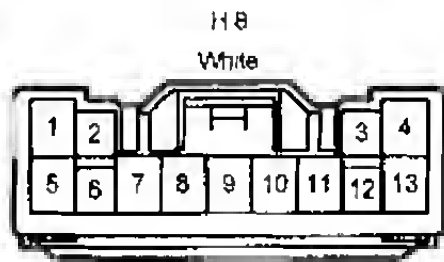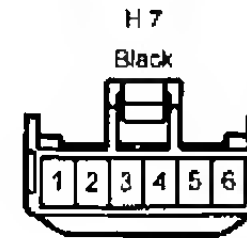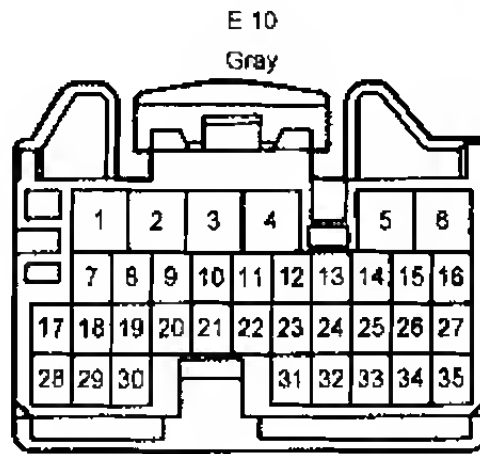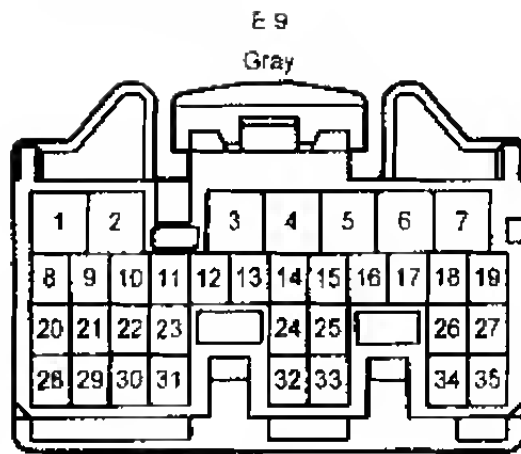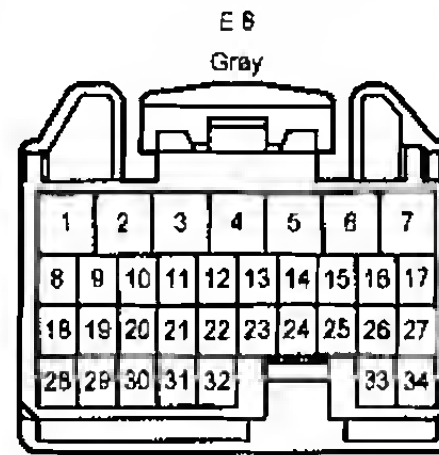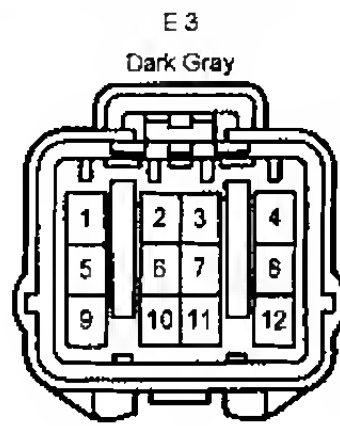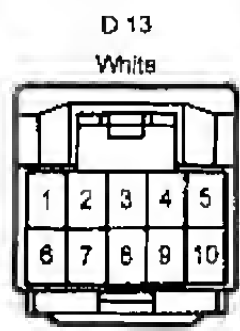

BAB V

Position of Parts in Body

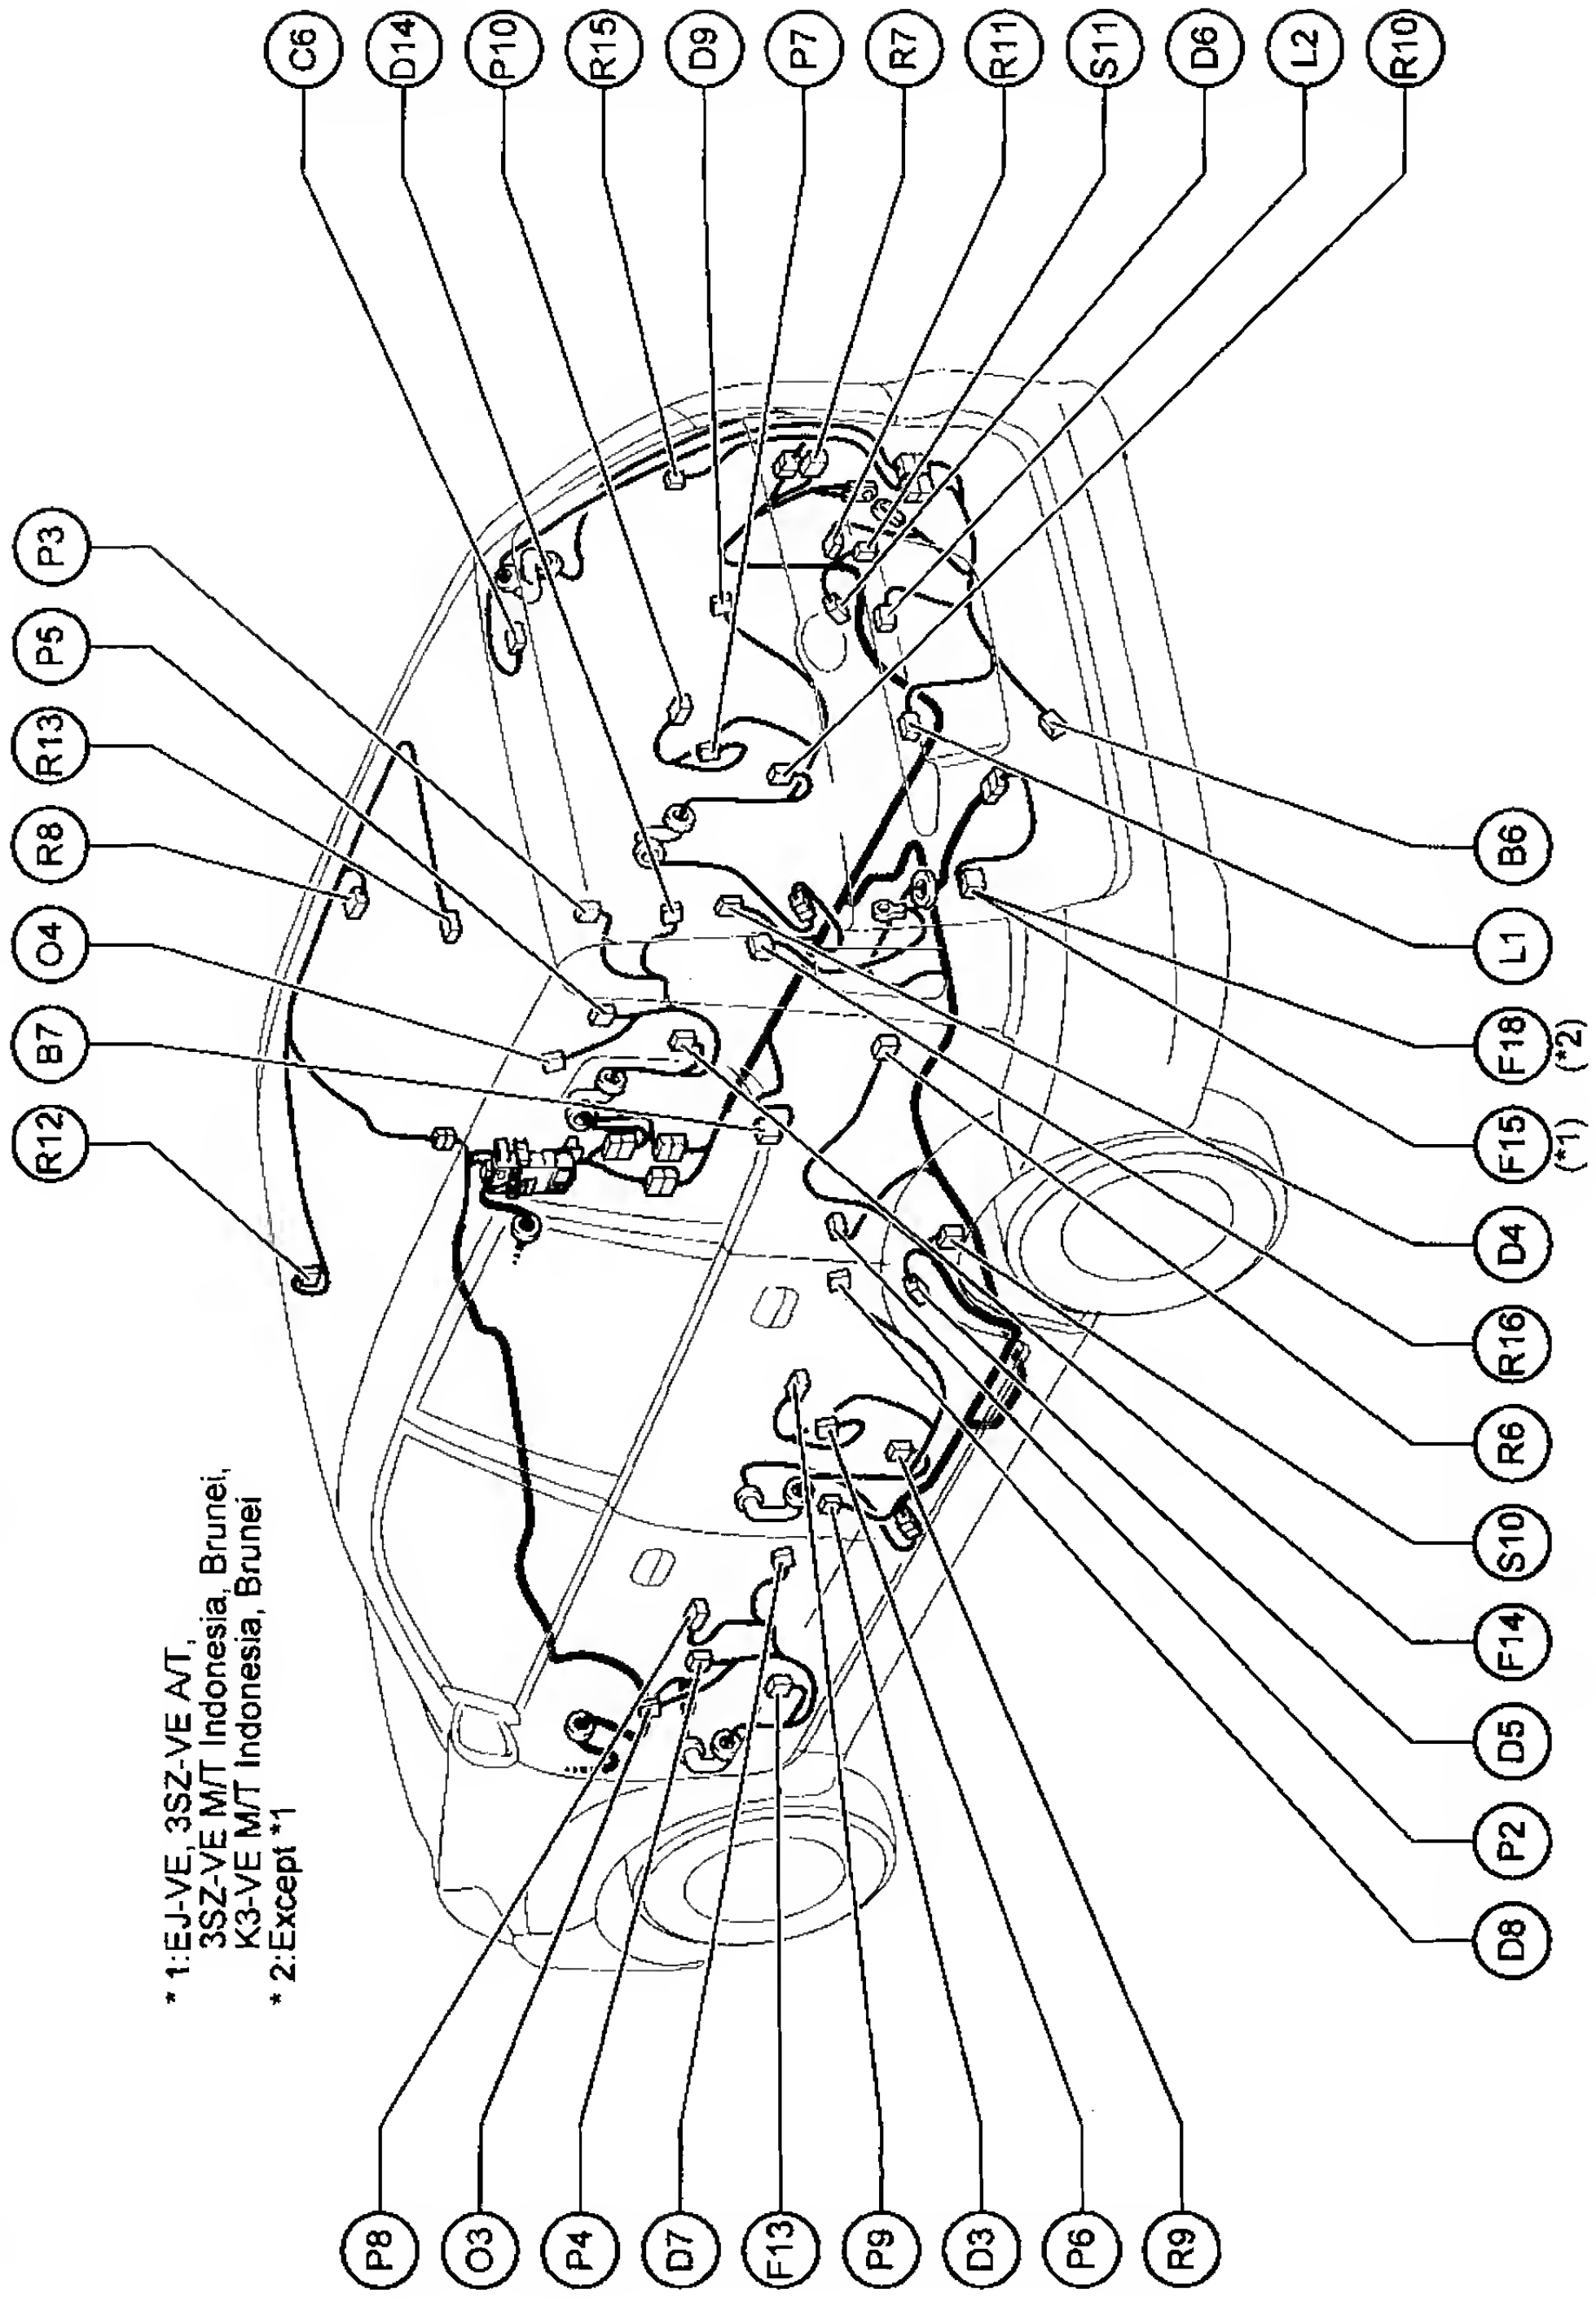

Position of Parts in Body <From Aug. 2006 Production>

- B 6 Back Door Courtesy SW
- B 7 Buckle SW RH

- C 6 Center Stop Light

- D 3 Door Courtesy SW Front LH
- D 4 Door Courtesy SW Front RH
- D 5 Door Courtesy SW Rear LH
- D 6 Door Courtesy SW Rear RH
- D 7 Door Lock Control Motor Front LH
- D 8 Door Lock Control Motor Rear LH
- D 9 Door Lock Control Motor Rear RH
- D 14 Door Lock Assembly Front RH

- F 13 Front Speaker LH
- F 14 Front Speaker RH
- F 15 Fuel Pump , Fuel Sender Gauge
- F 18 Fuel Pump , Fuel Sender Gauge

- L 1 License Plate Light LH
- L 2 License Plate Light RH


- O 3 Outer Rear View Mirror LH
- O 4 Outer Rear View Mirror RH

- P 2 Parking Brake SW
- P 3 Power Window Regulator Master SW
- P 4 Power Window Regulator Motor Front LH
- P 5 Power Window Regulator Motor Front RH
- P 6 Power Window Regulator Motor Rear LH
- P 7 Power Window Regulator Motor Rear RH
- P 8 Power Window Regulator SW Front LH
- P 9 Power Window Regulator SW Rear LH
- P 10 Power Window Regulator SW Rear RH

- R 6 Rear Combination Light LH
- R 7 Rear Combination Light RH
- R 8 Rear Cooling Unit
- R 9 Rear Speaker LH
- R 10 Rear Speaker RH
- R 11 Rear Wiper Motor
- R 12 Room Light (Front)
- R 13 Room Light (Rear)
- R 15 Rear Window Defogger
- R 16 Rear Window Defogger


- S 10 Speed Sensor Rear LH
- S 11 Speed Sensor Rear RH


Position of Parts In Body <From Aug. 2006 Production>

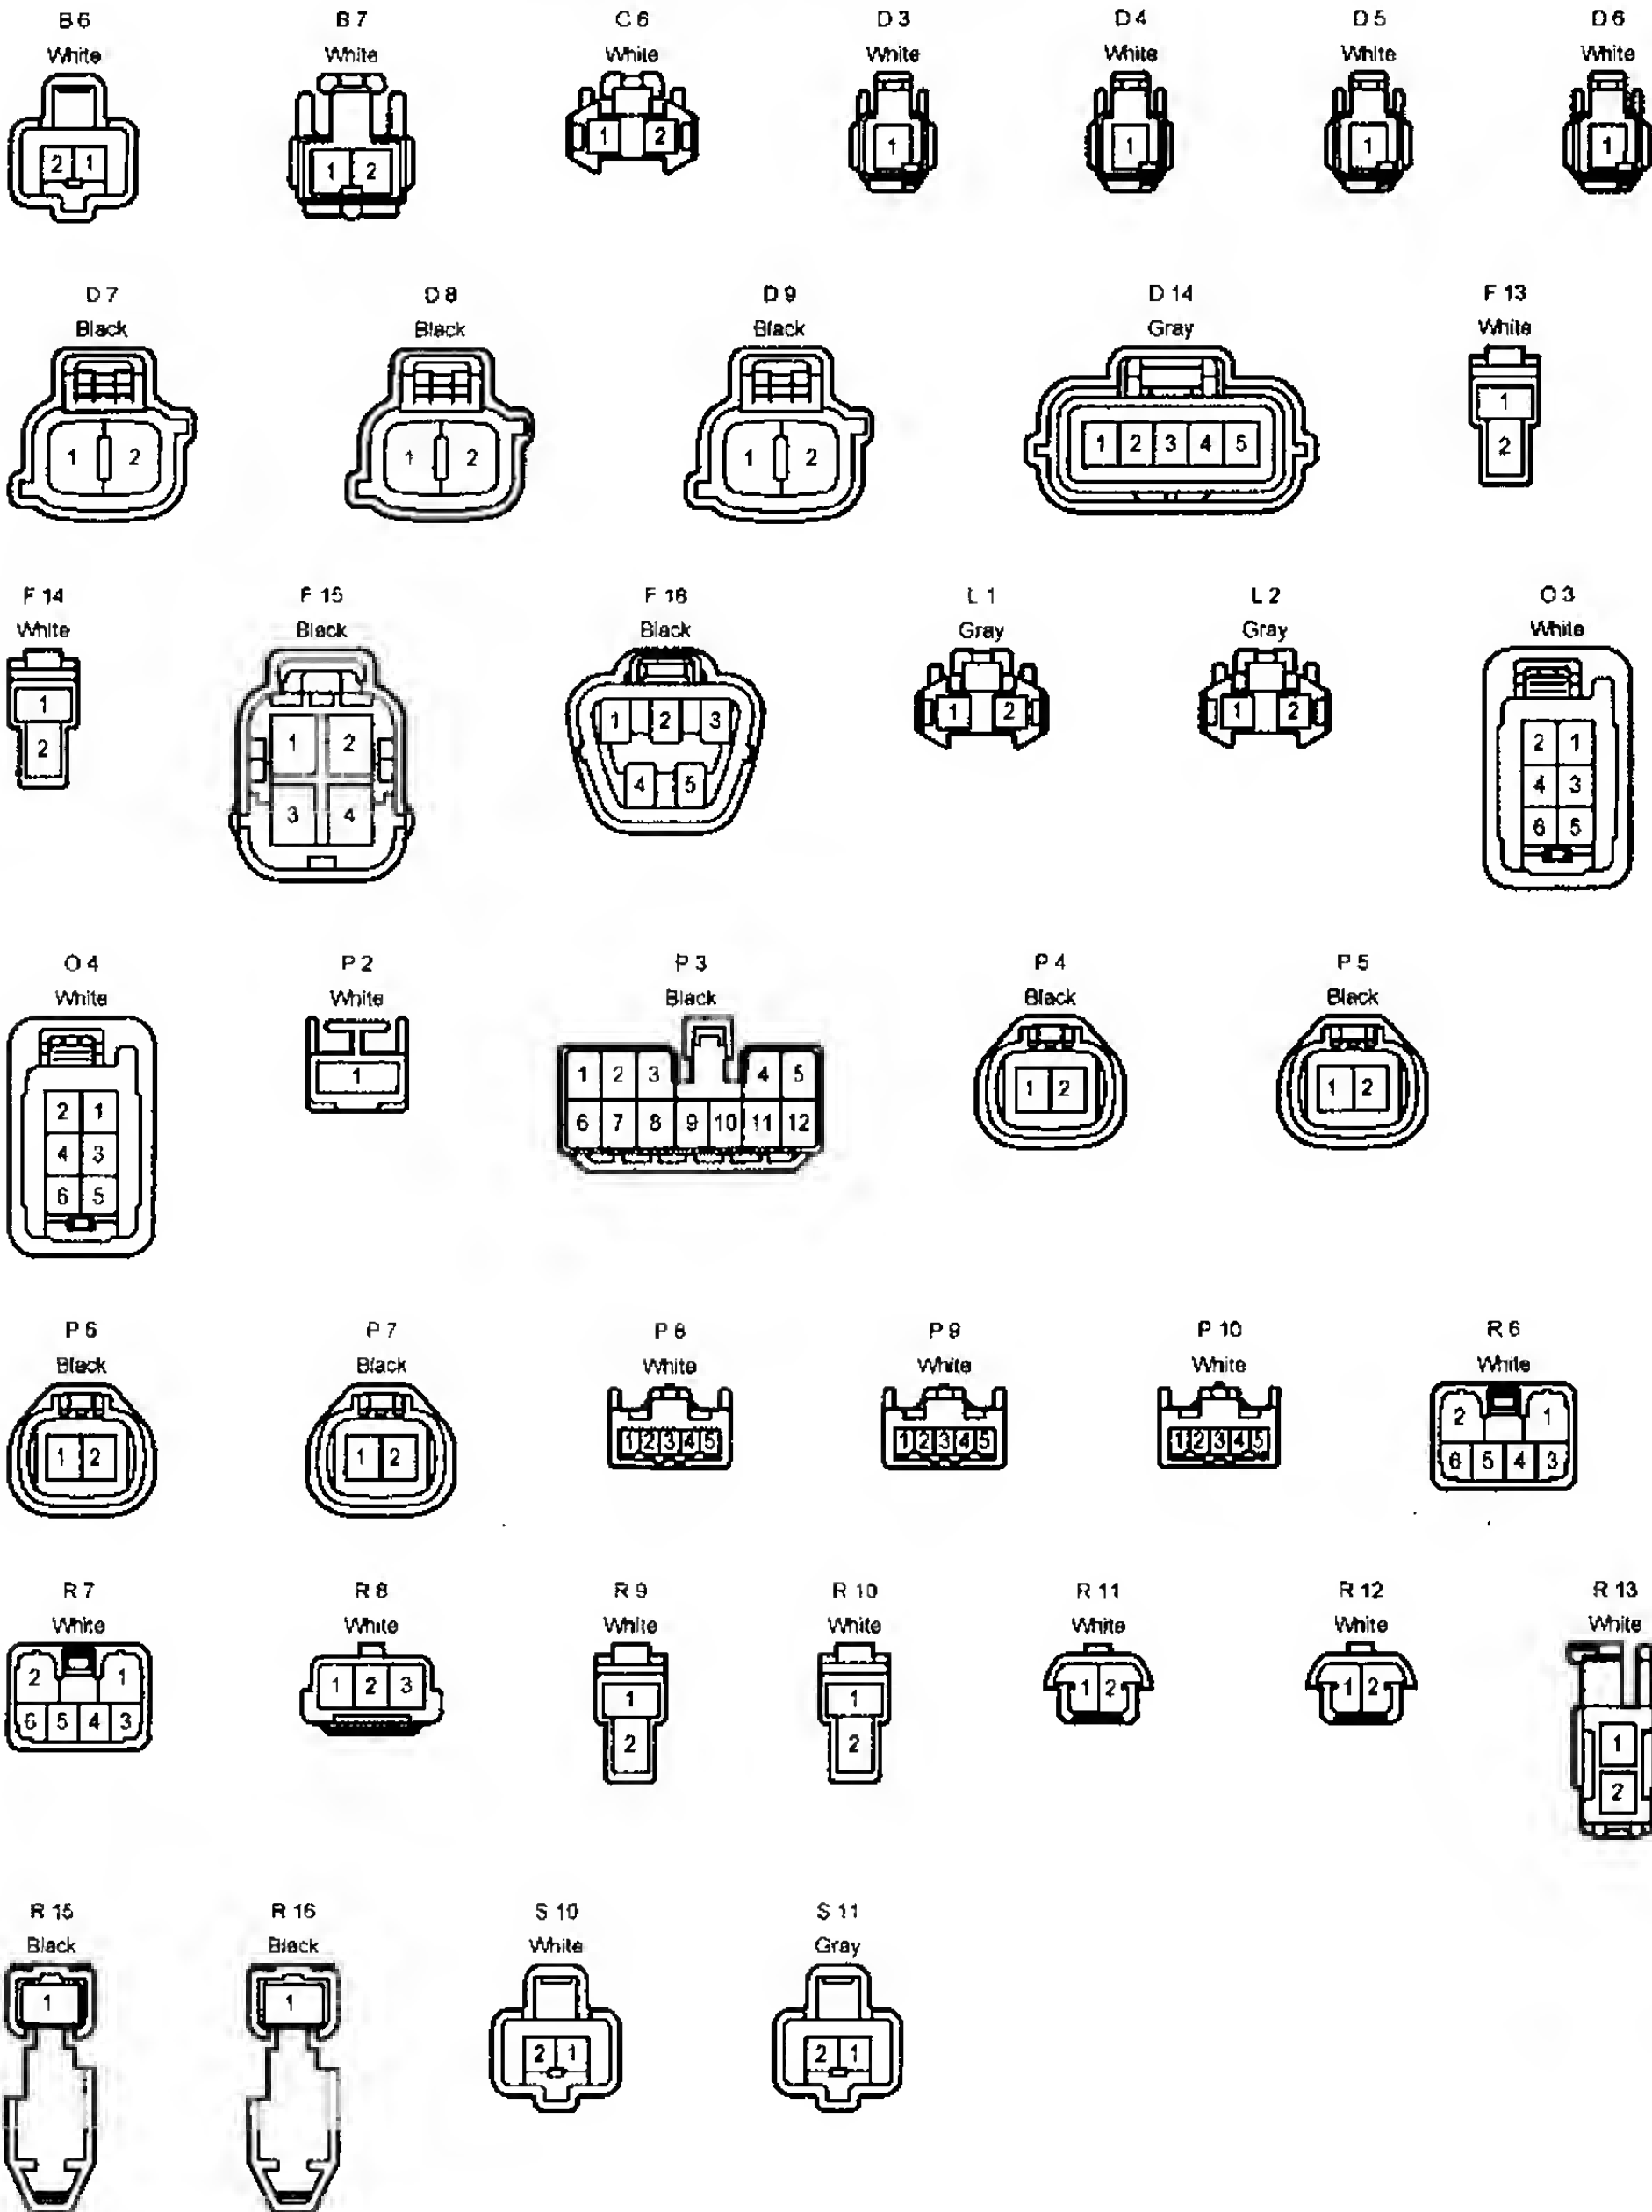

BAB VI


Ground Points in Engine Compartment

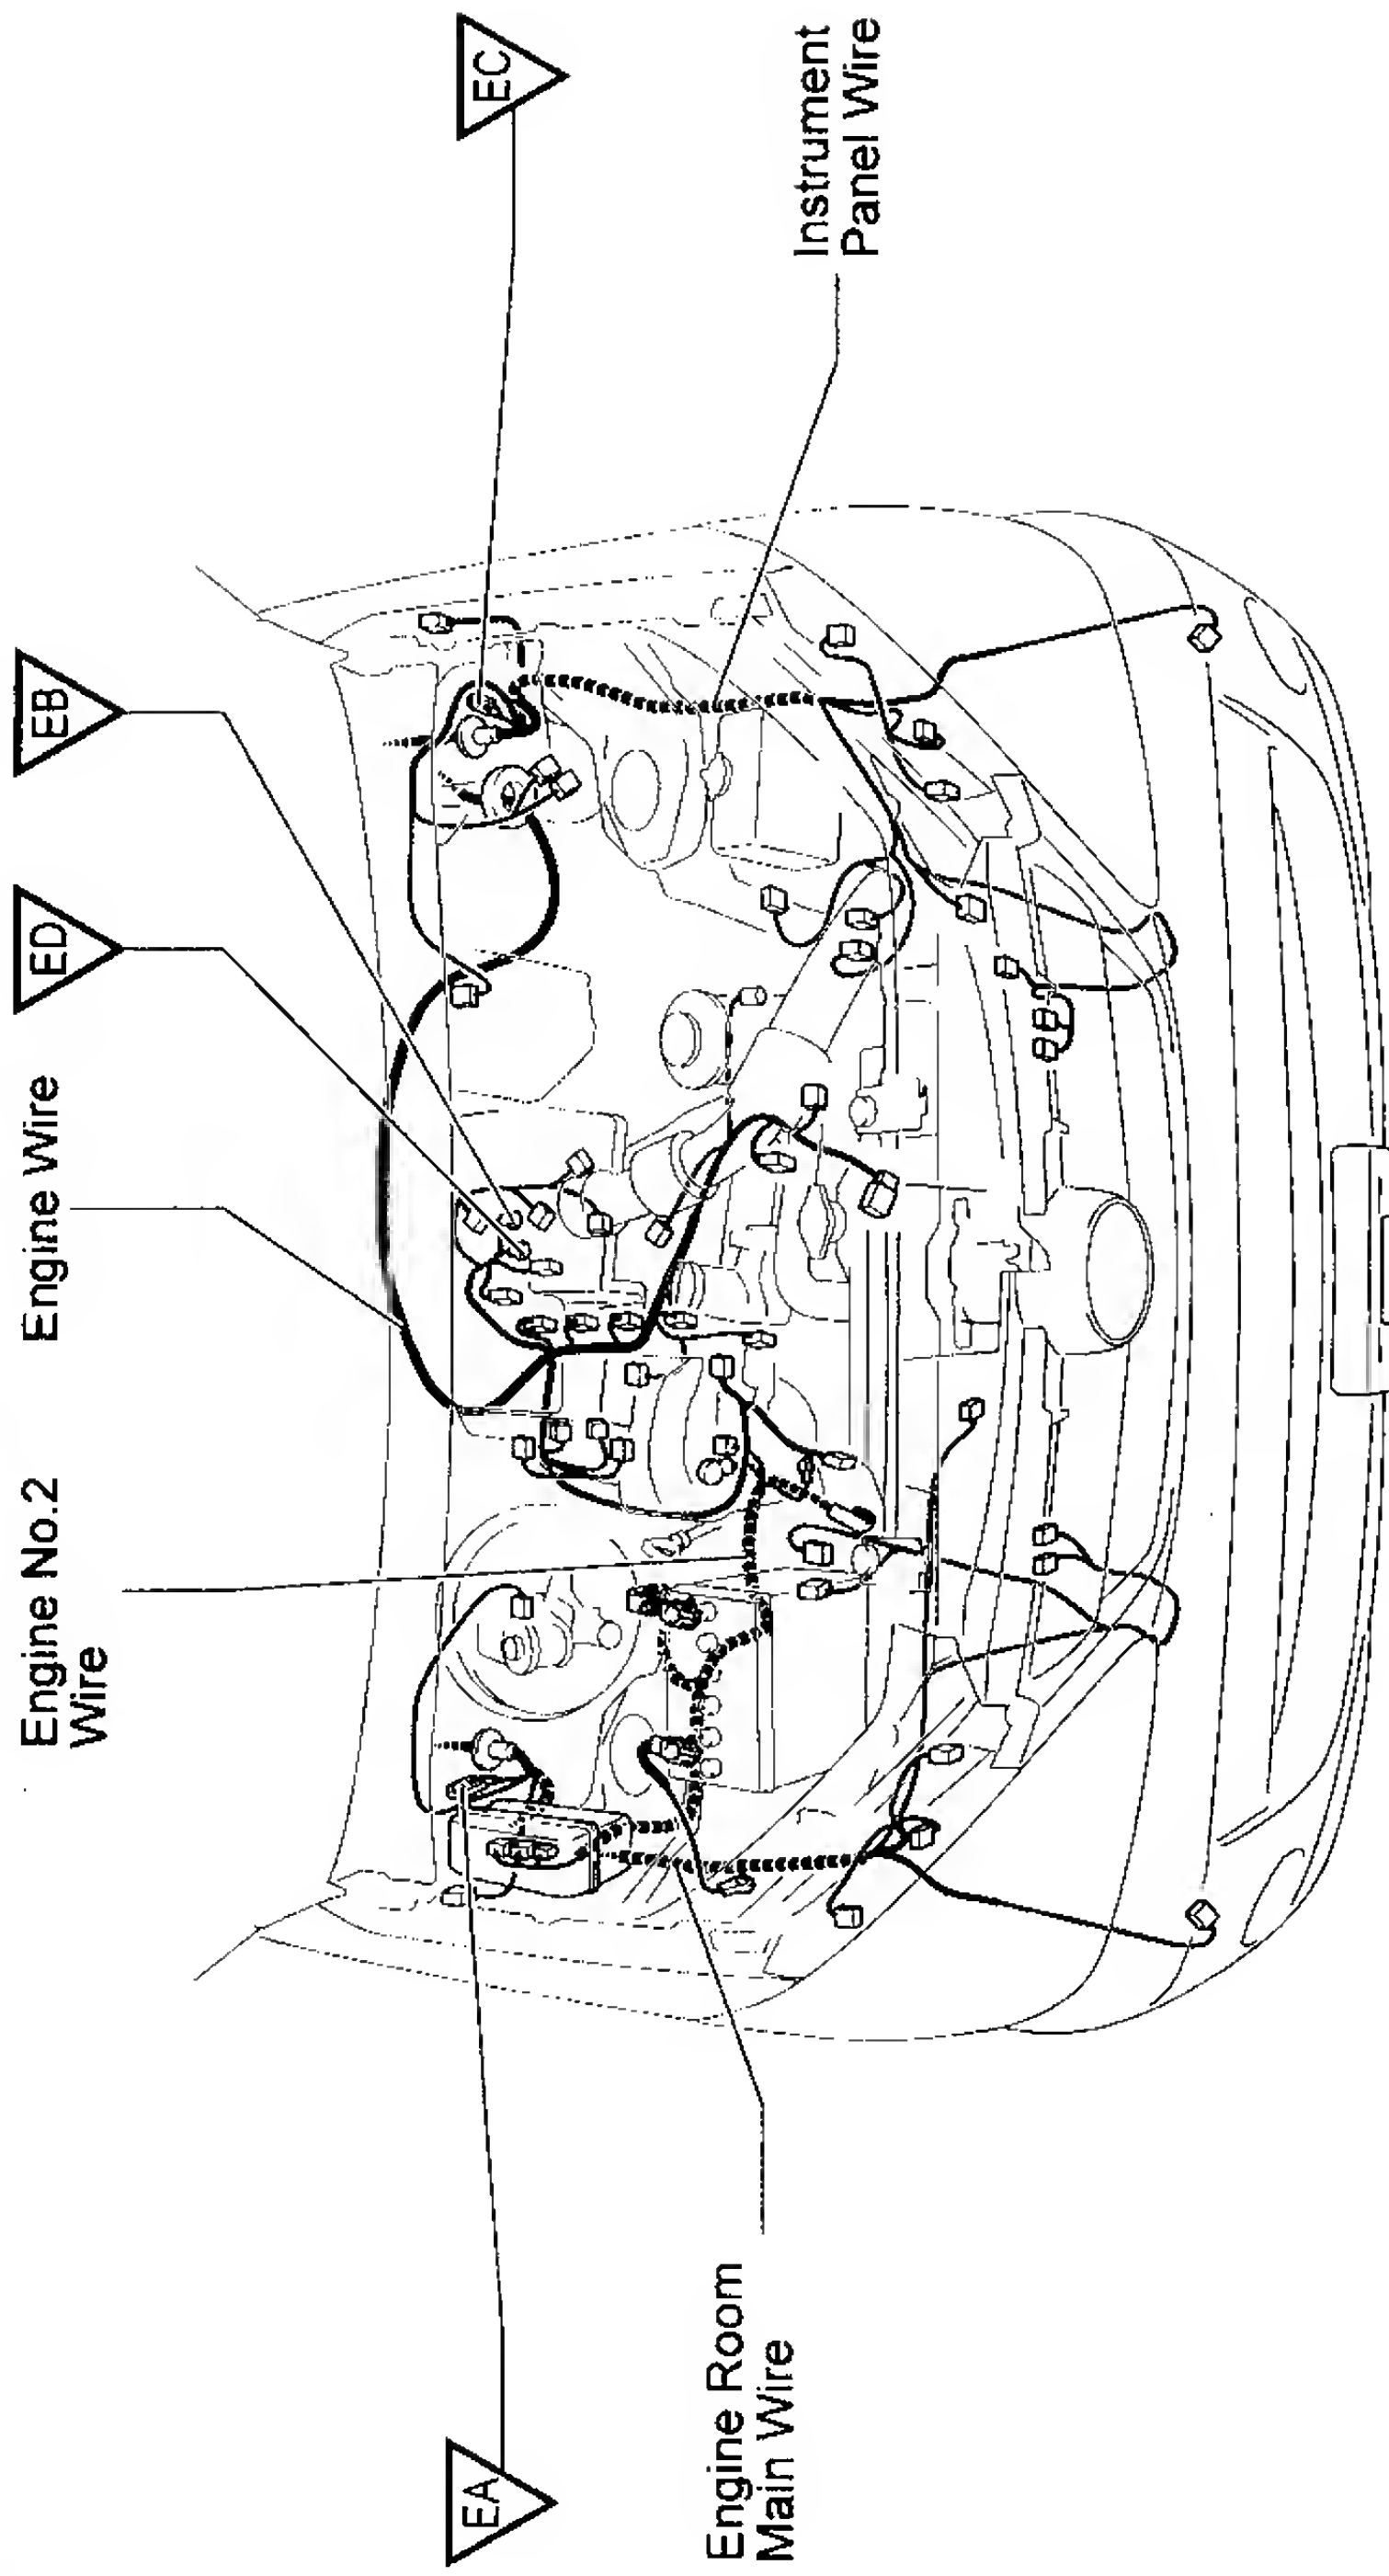

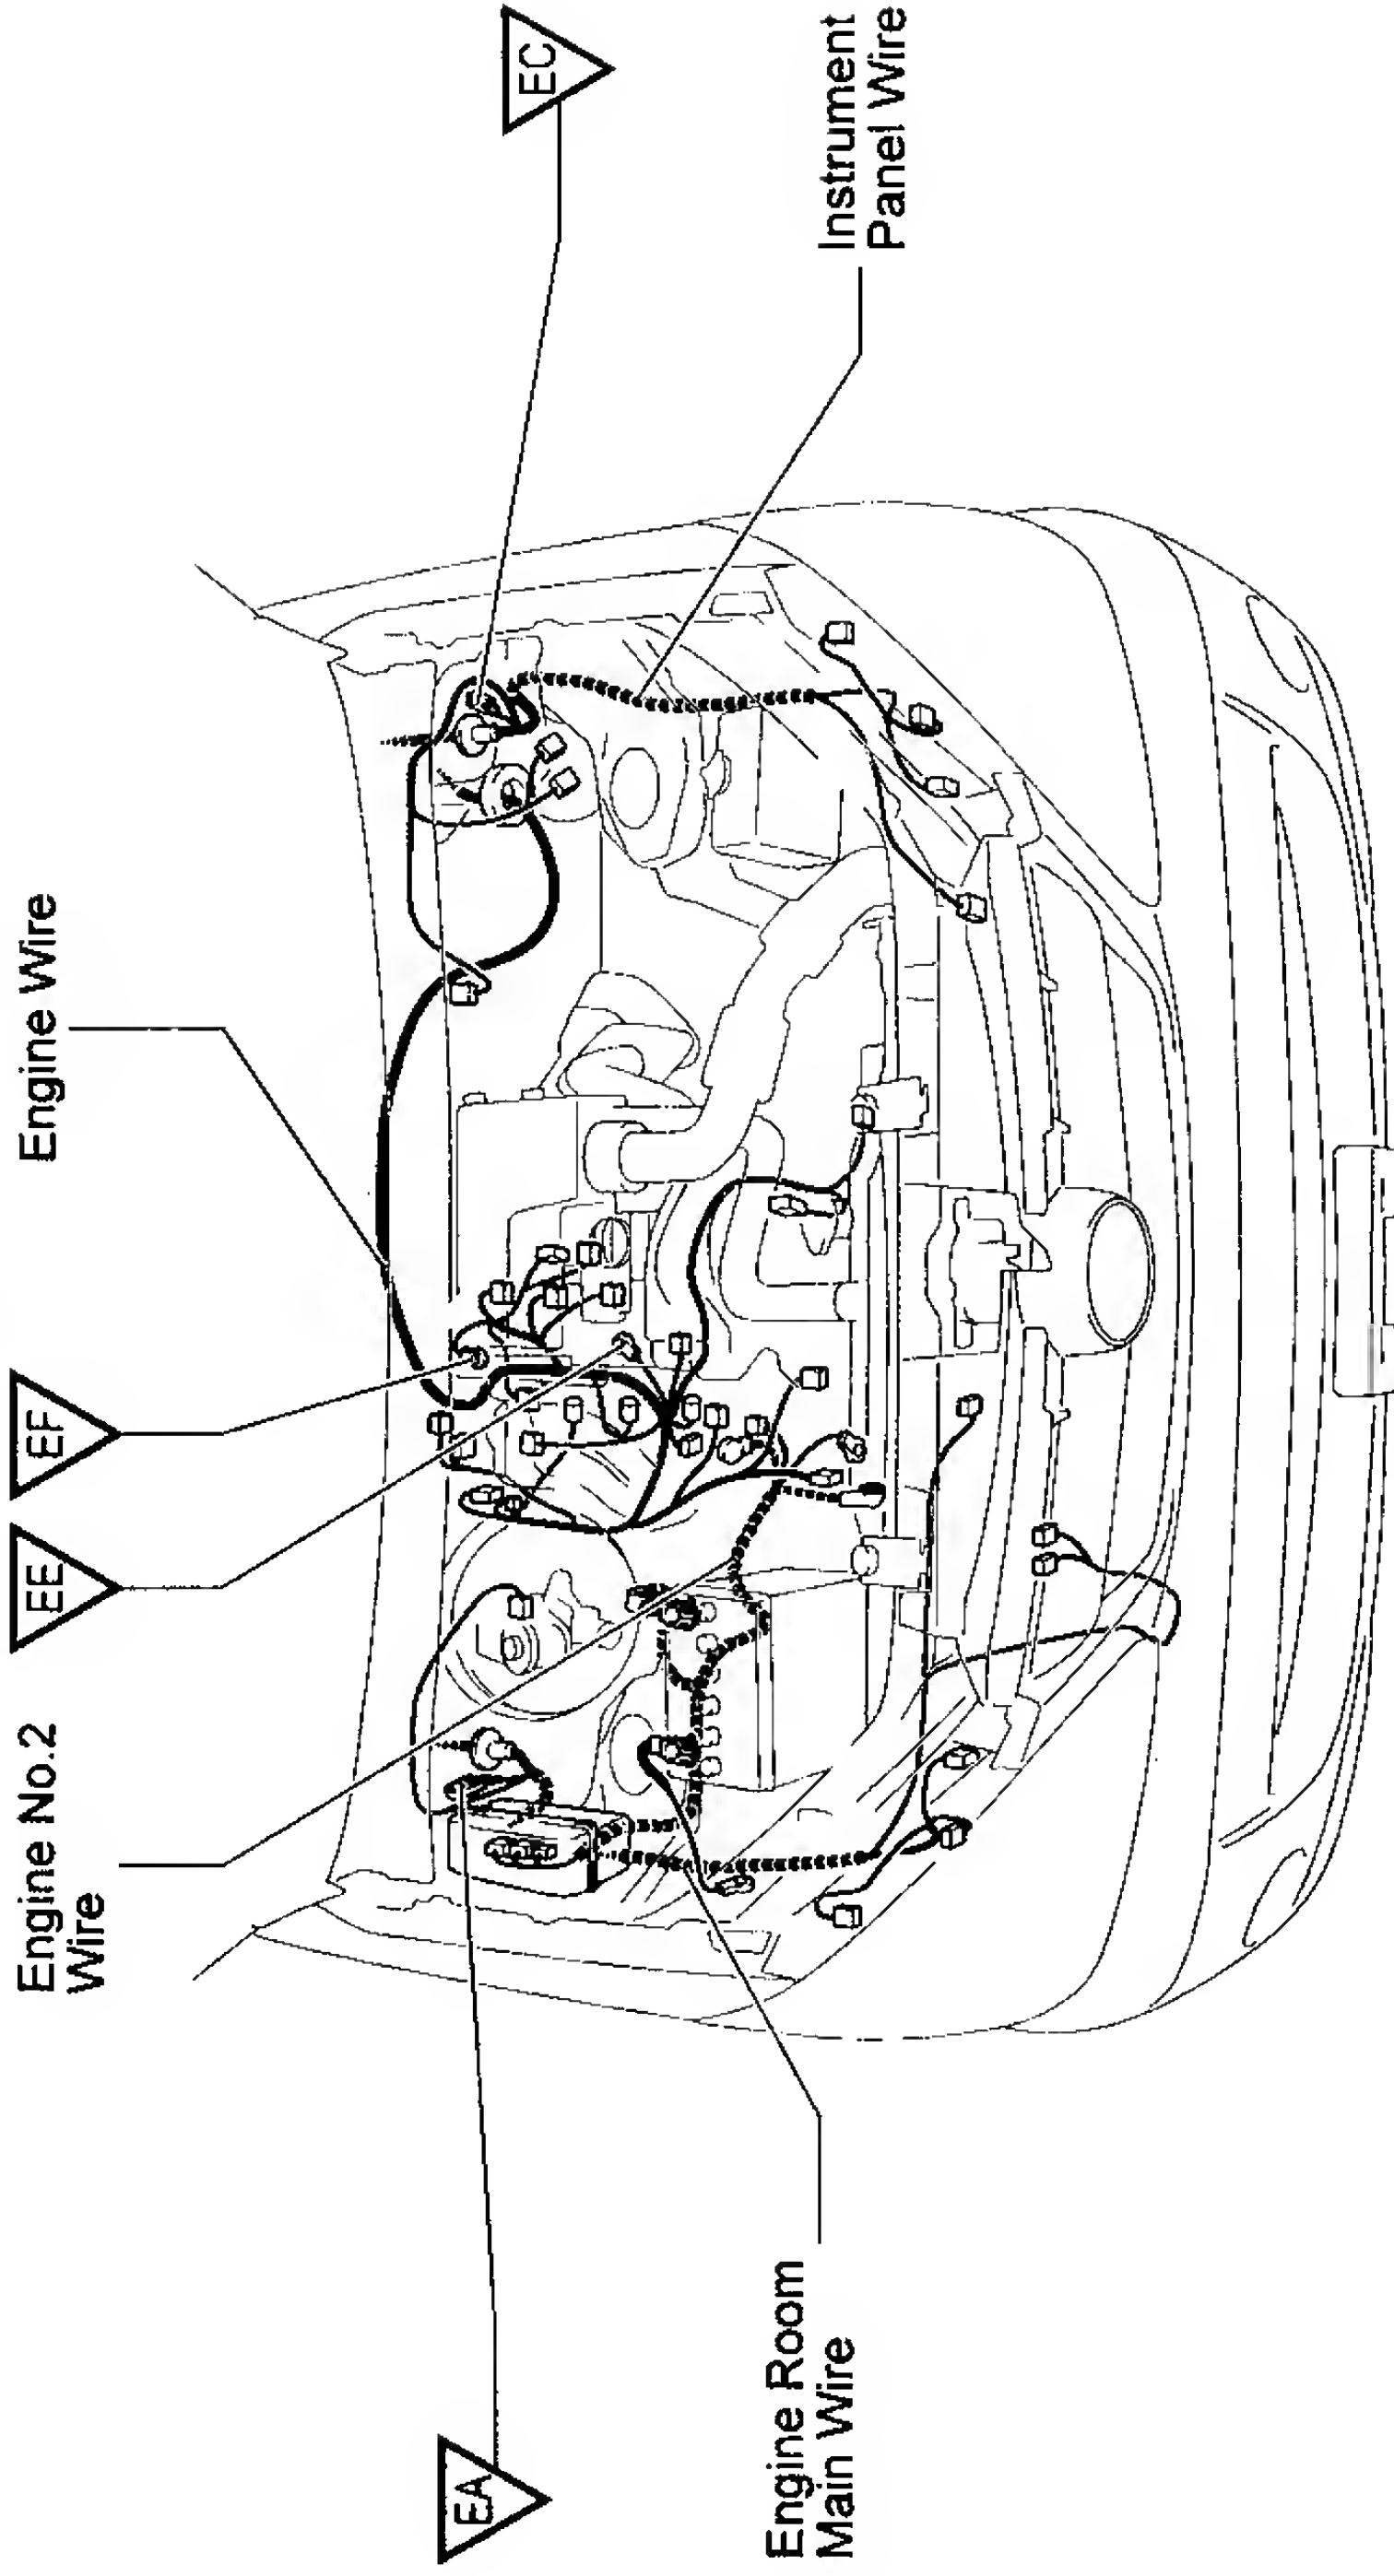


BAB VII


**Wire and Wire,
Ground Points in
Instrument Panel**

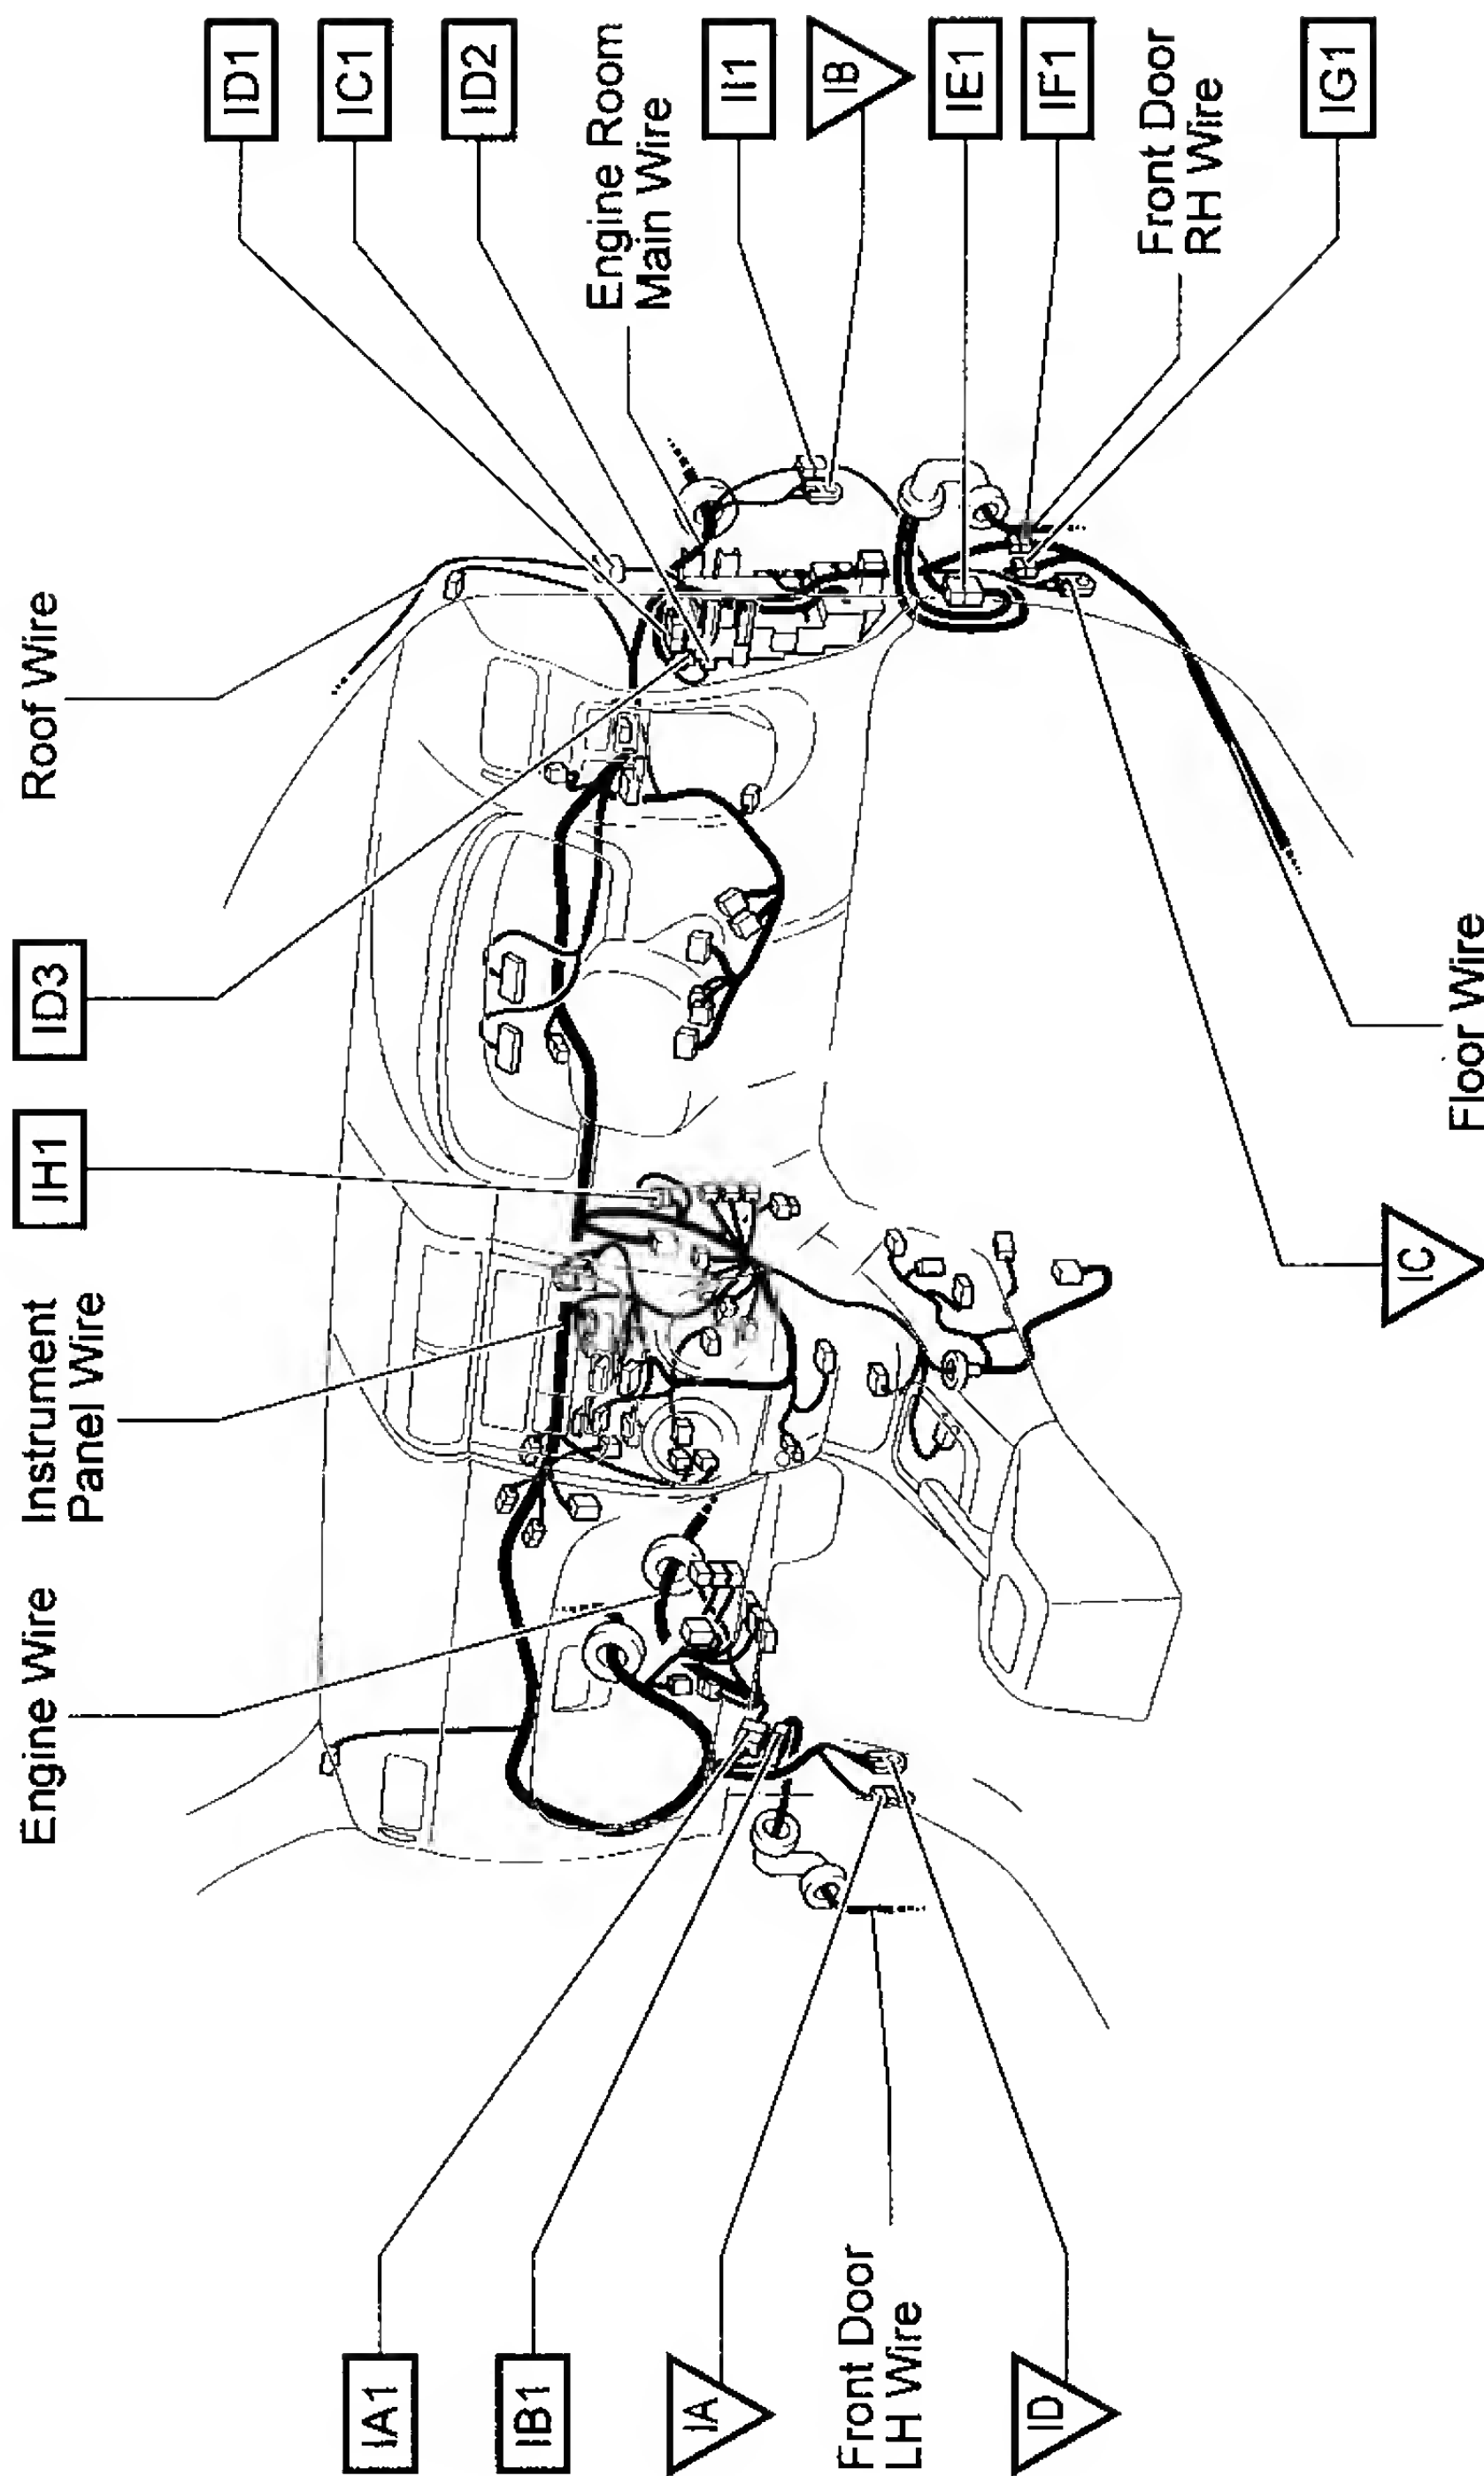

Wire and Wire , Ground Points in Instrument Panel <From Aug. 2006 Production w/o Heater>

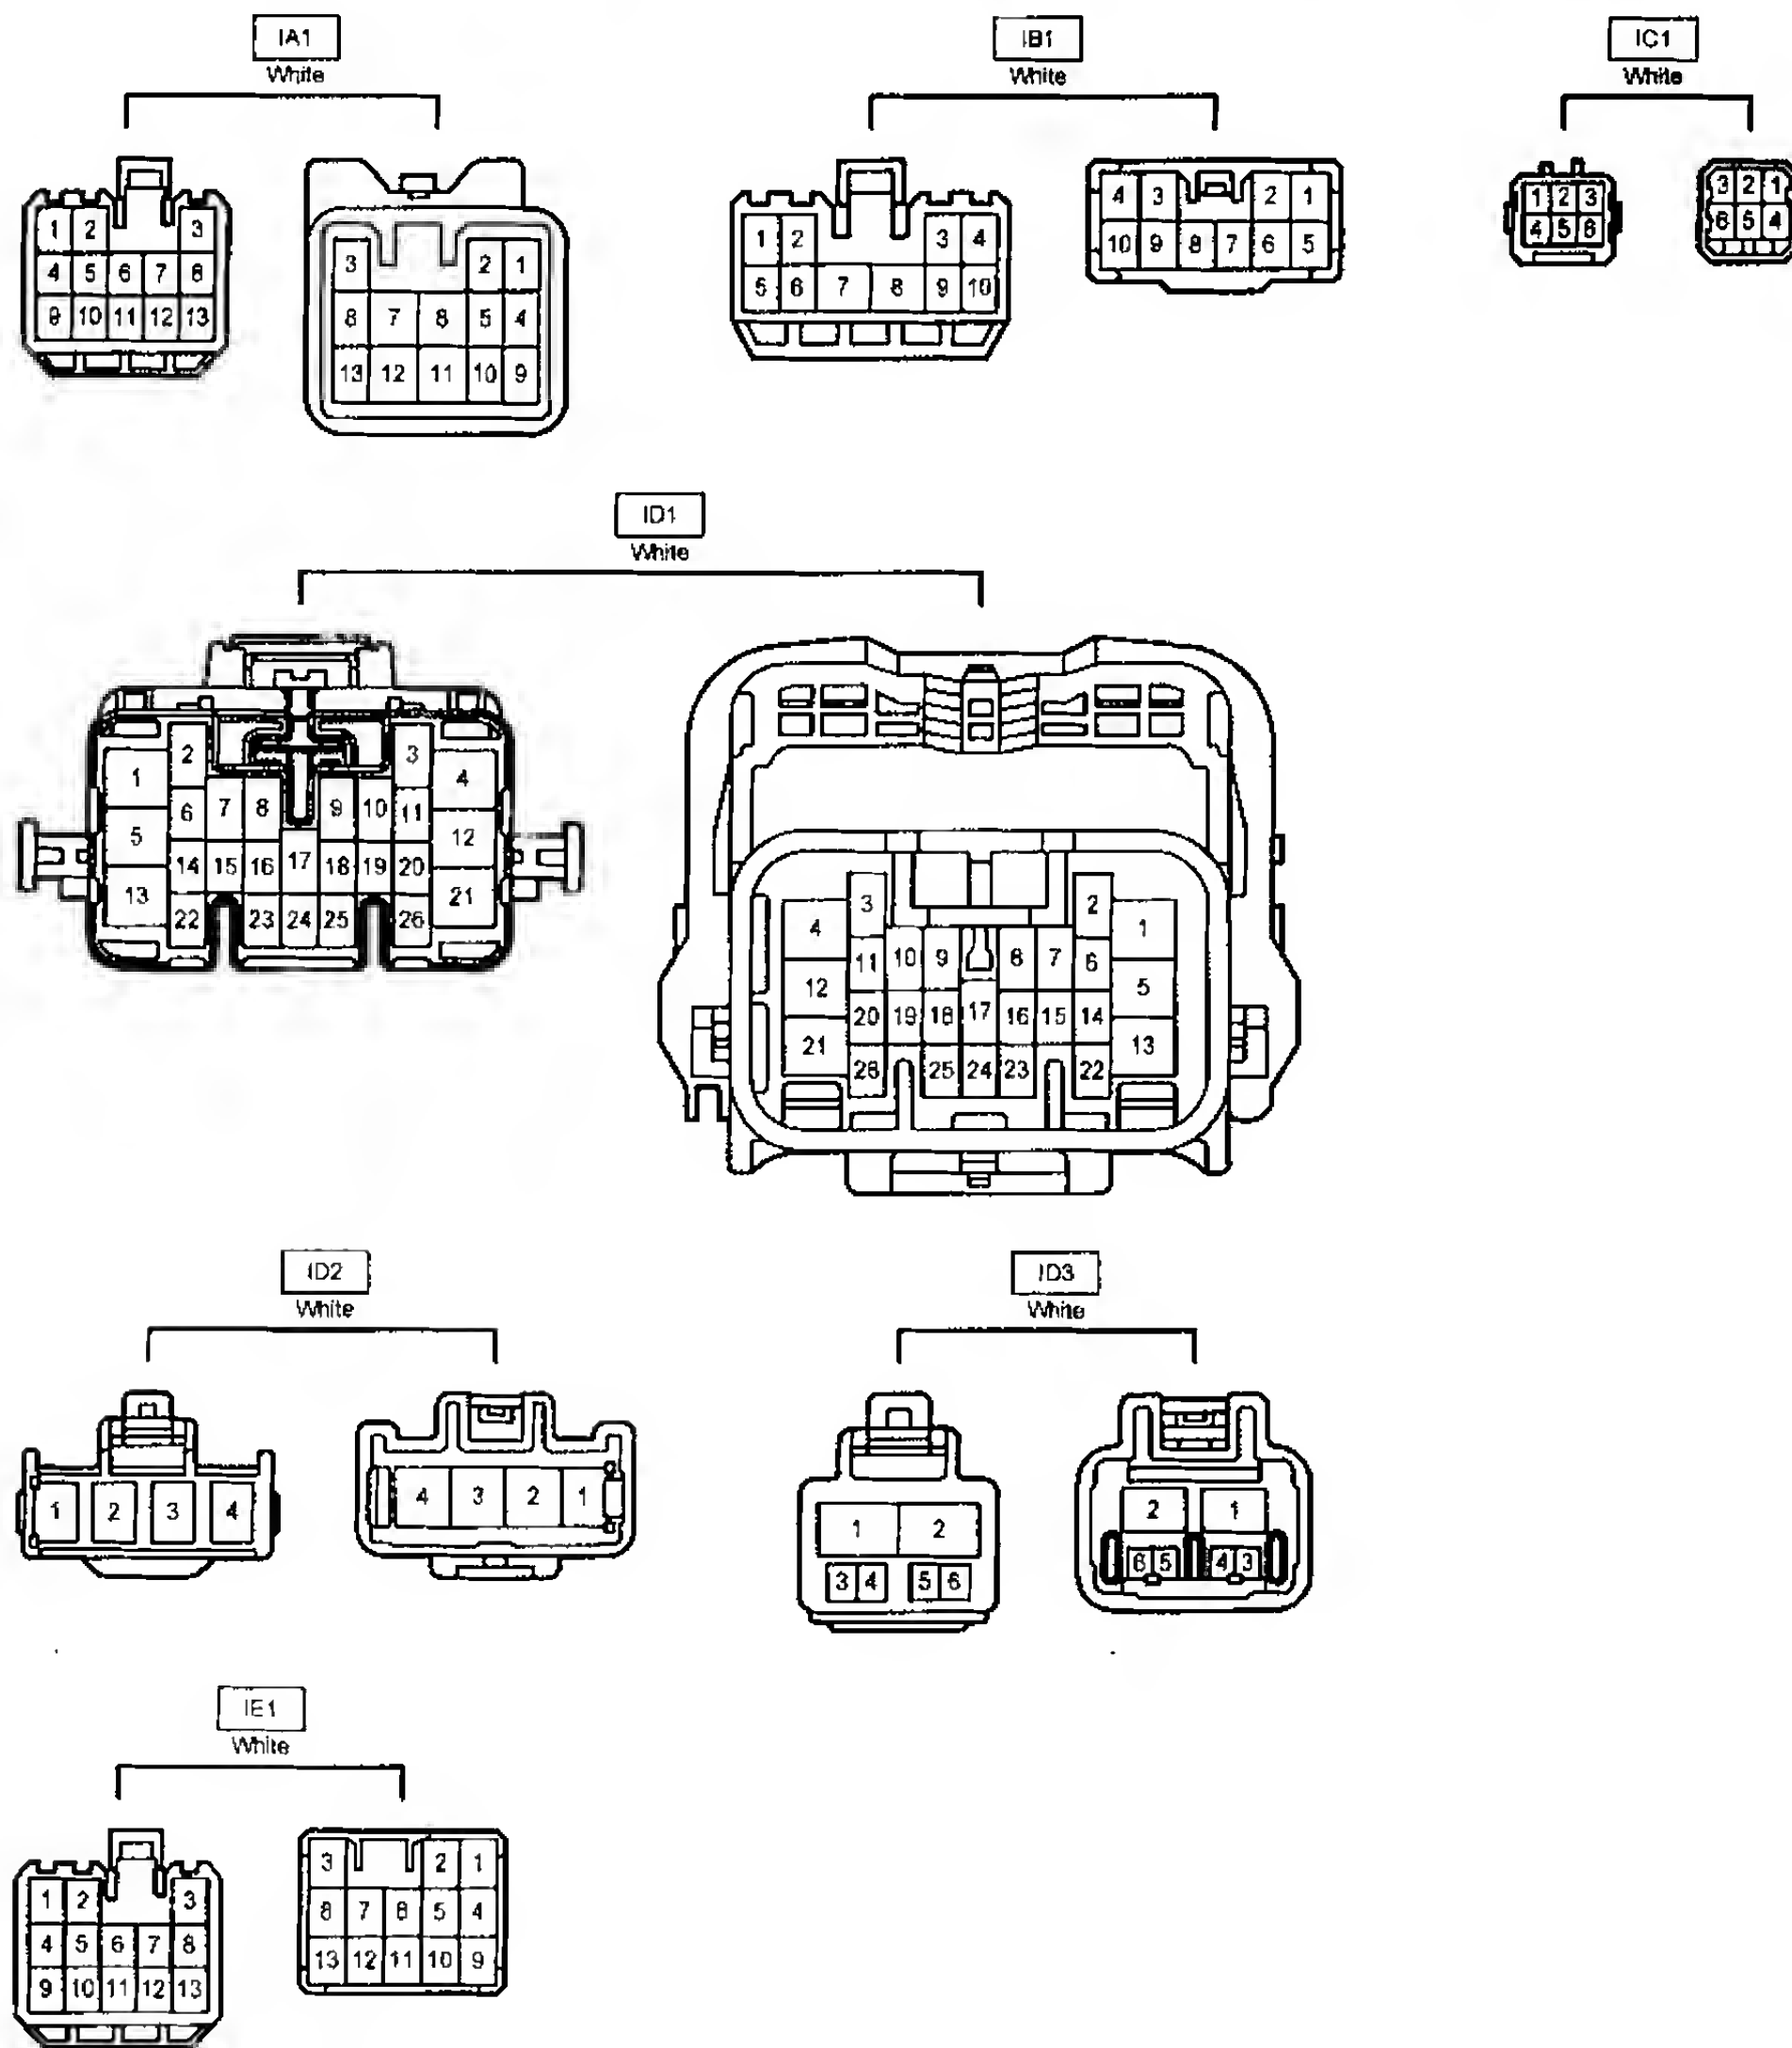


Wire and Wire , Ground Points in Instrument Panel <From Aug. 2006 Production w/o Heater>







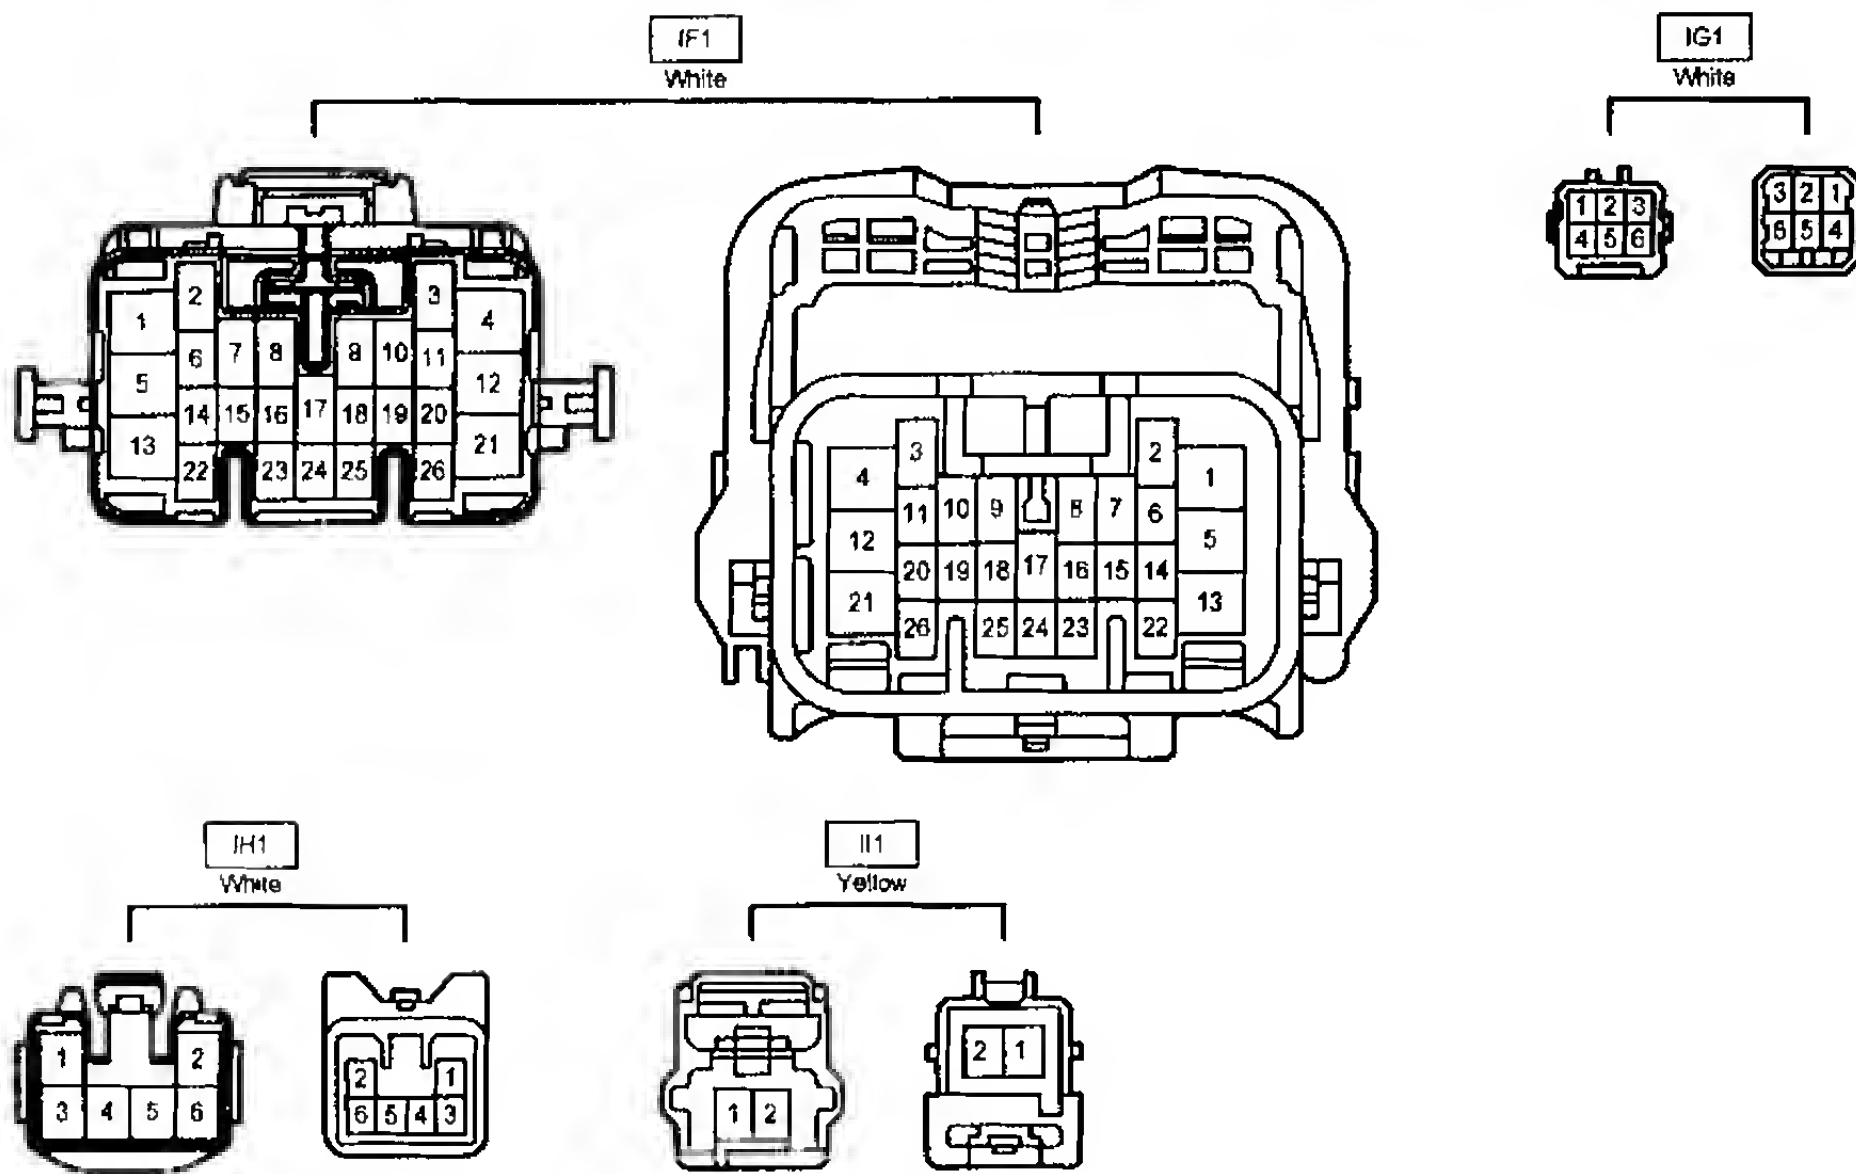


BAB VIII

**Wire and Wire,
Ground Points in
Body**

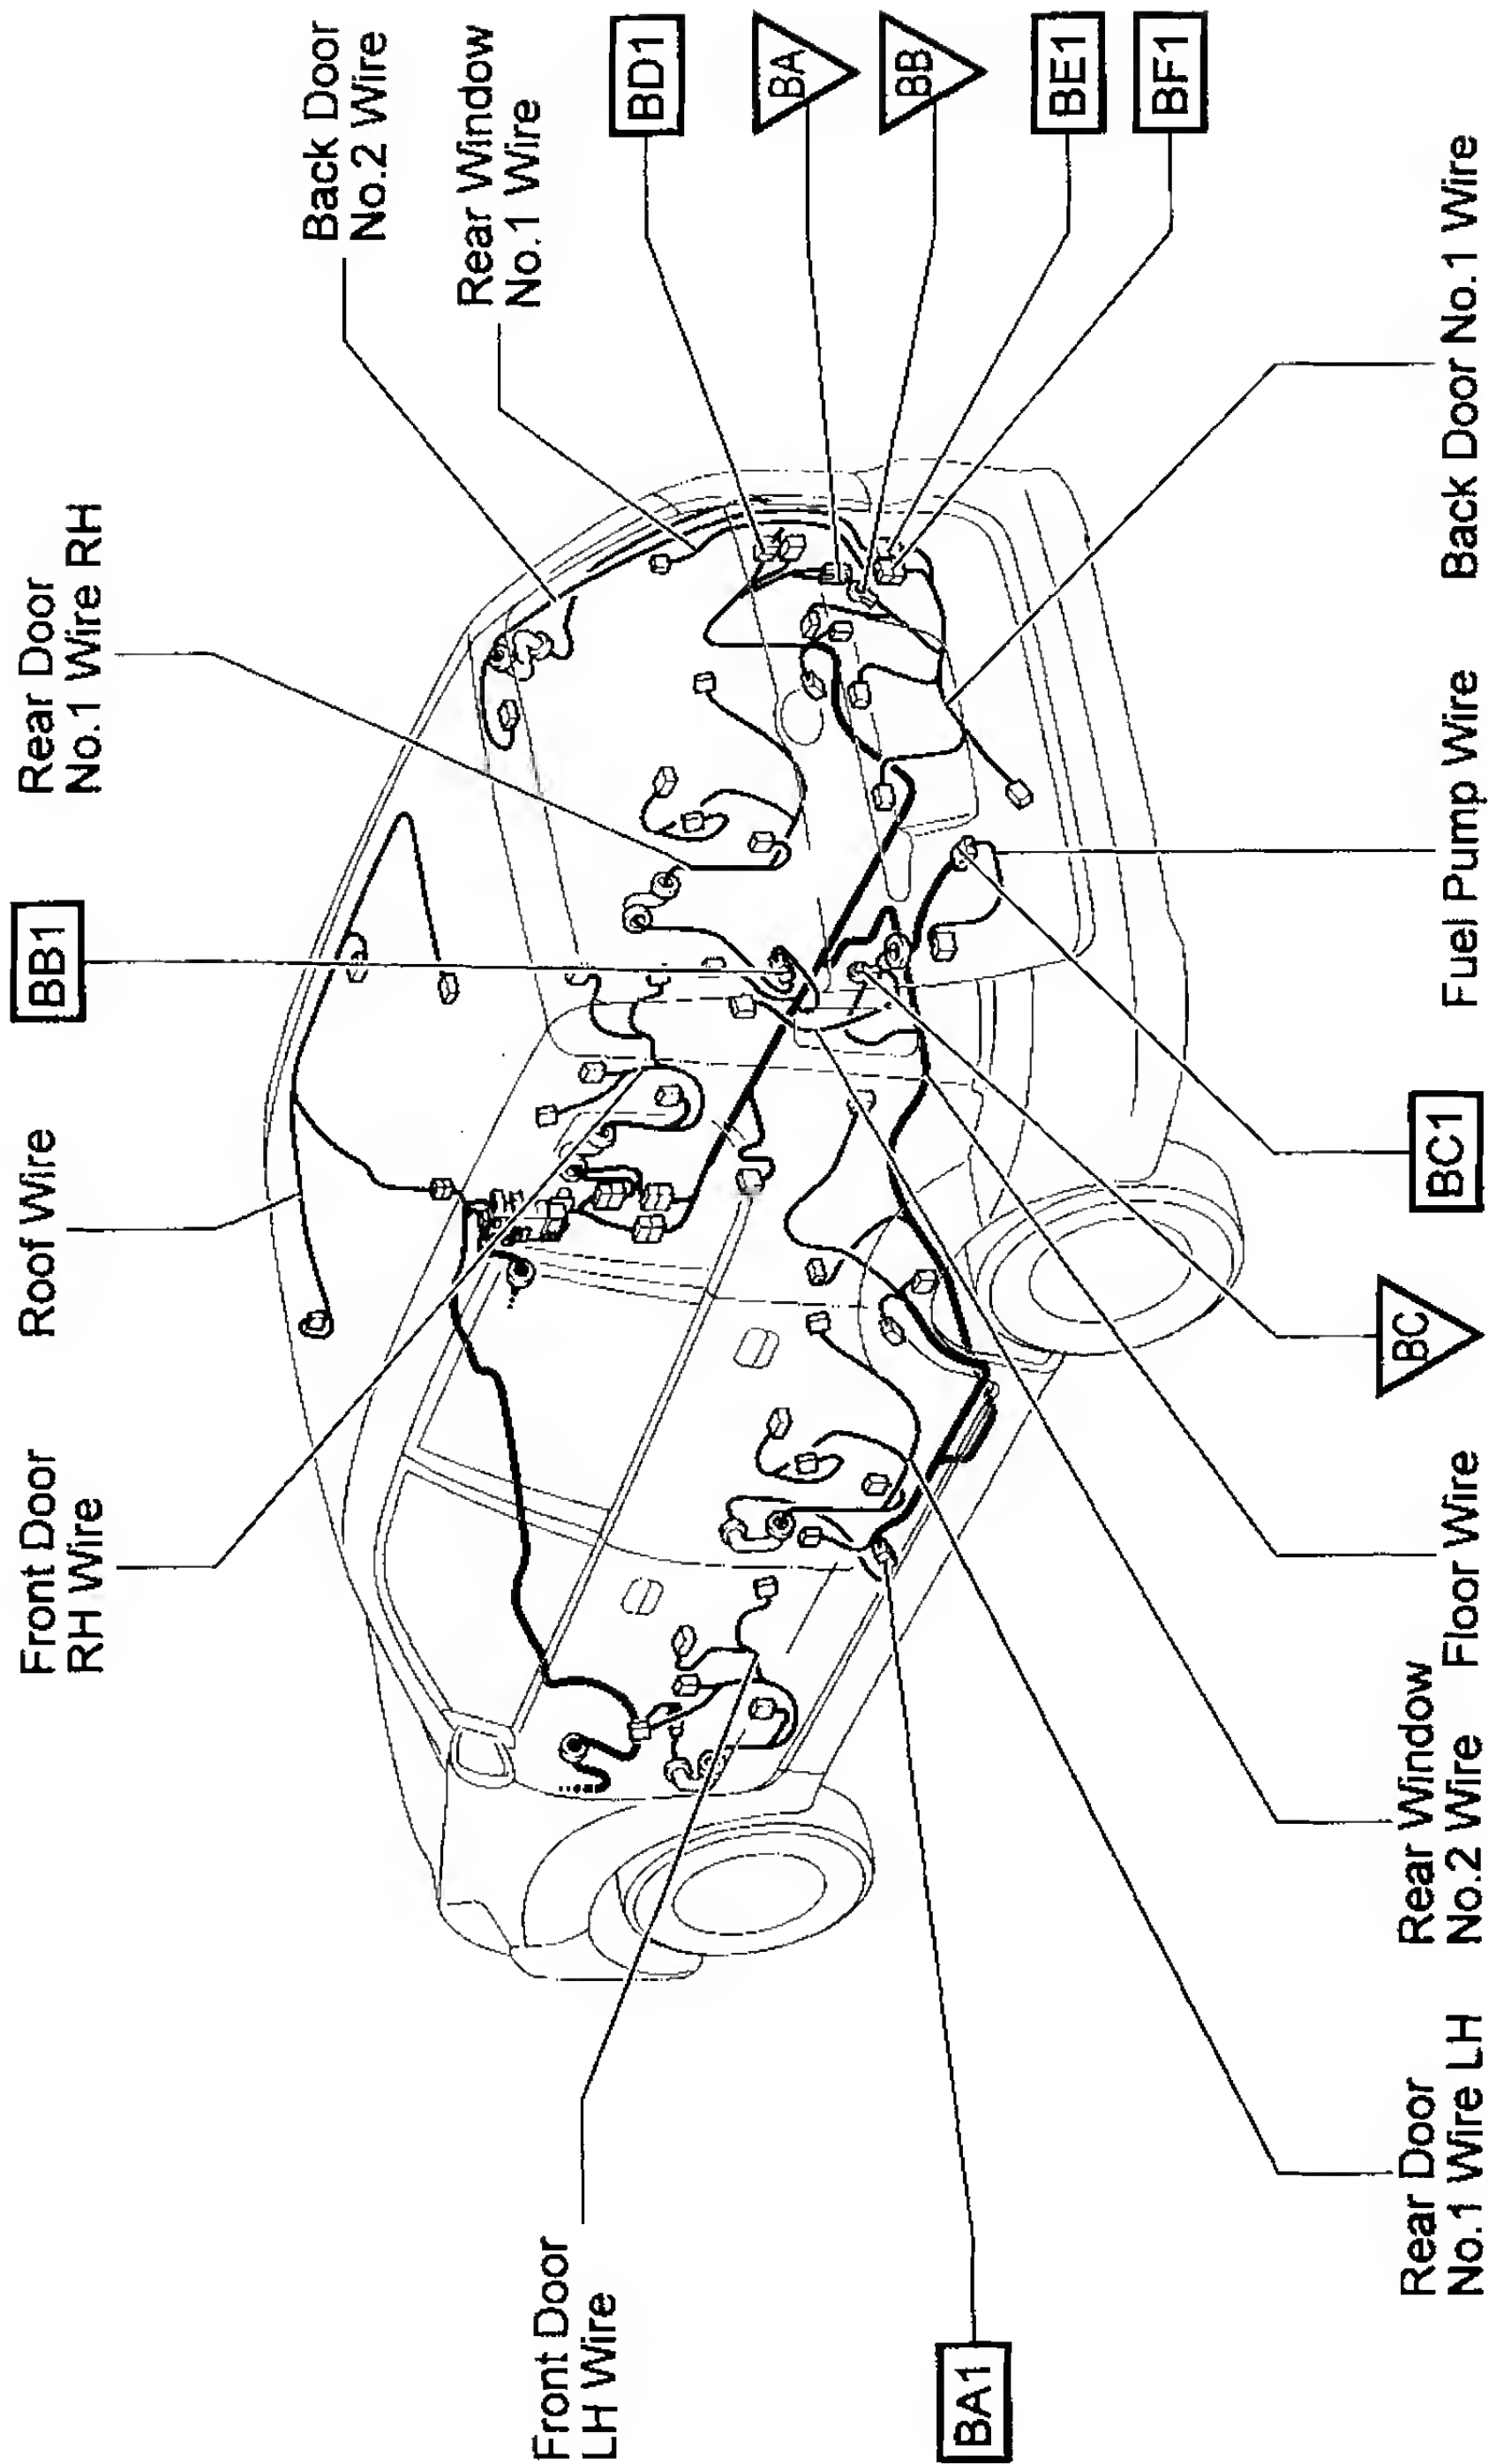


Wire and Wire , Ground Points in Body <From Aug. 2006 Production>

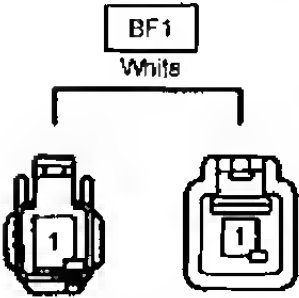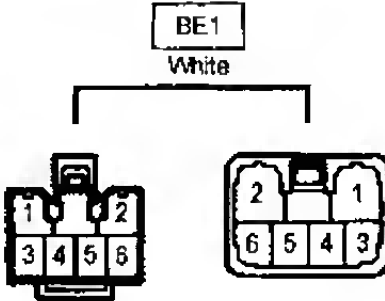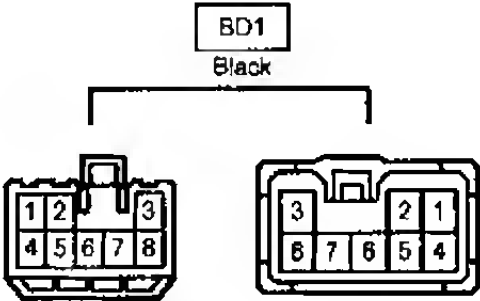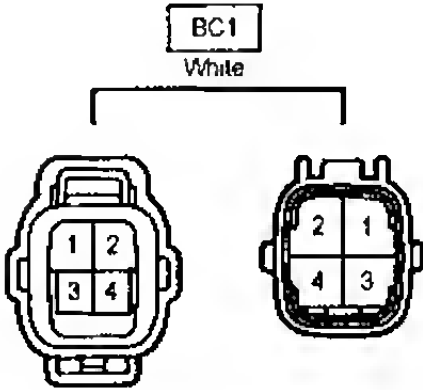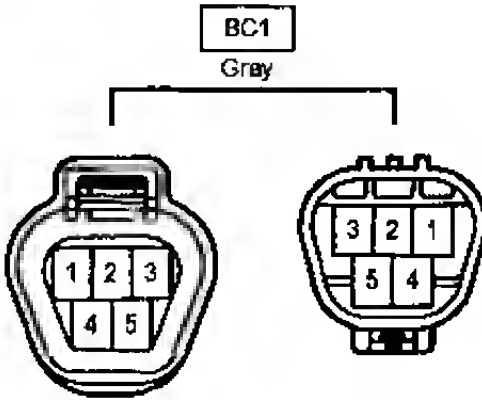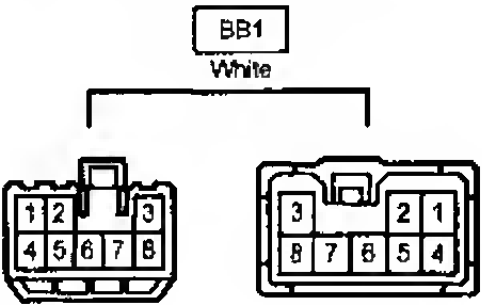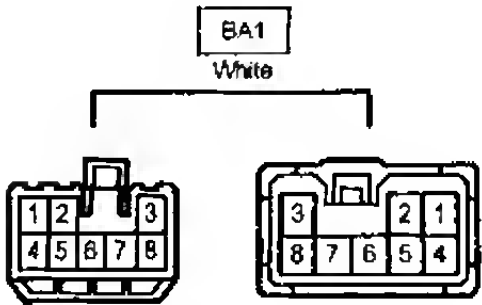

BAB IX

Overall Electrical Wiring Diagram

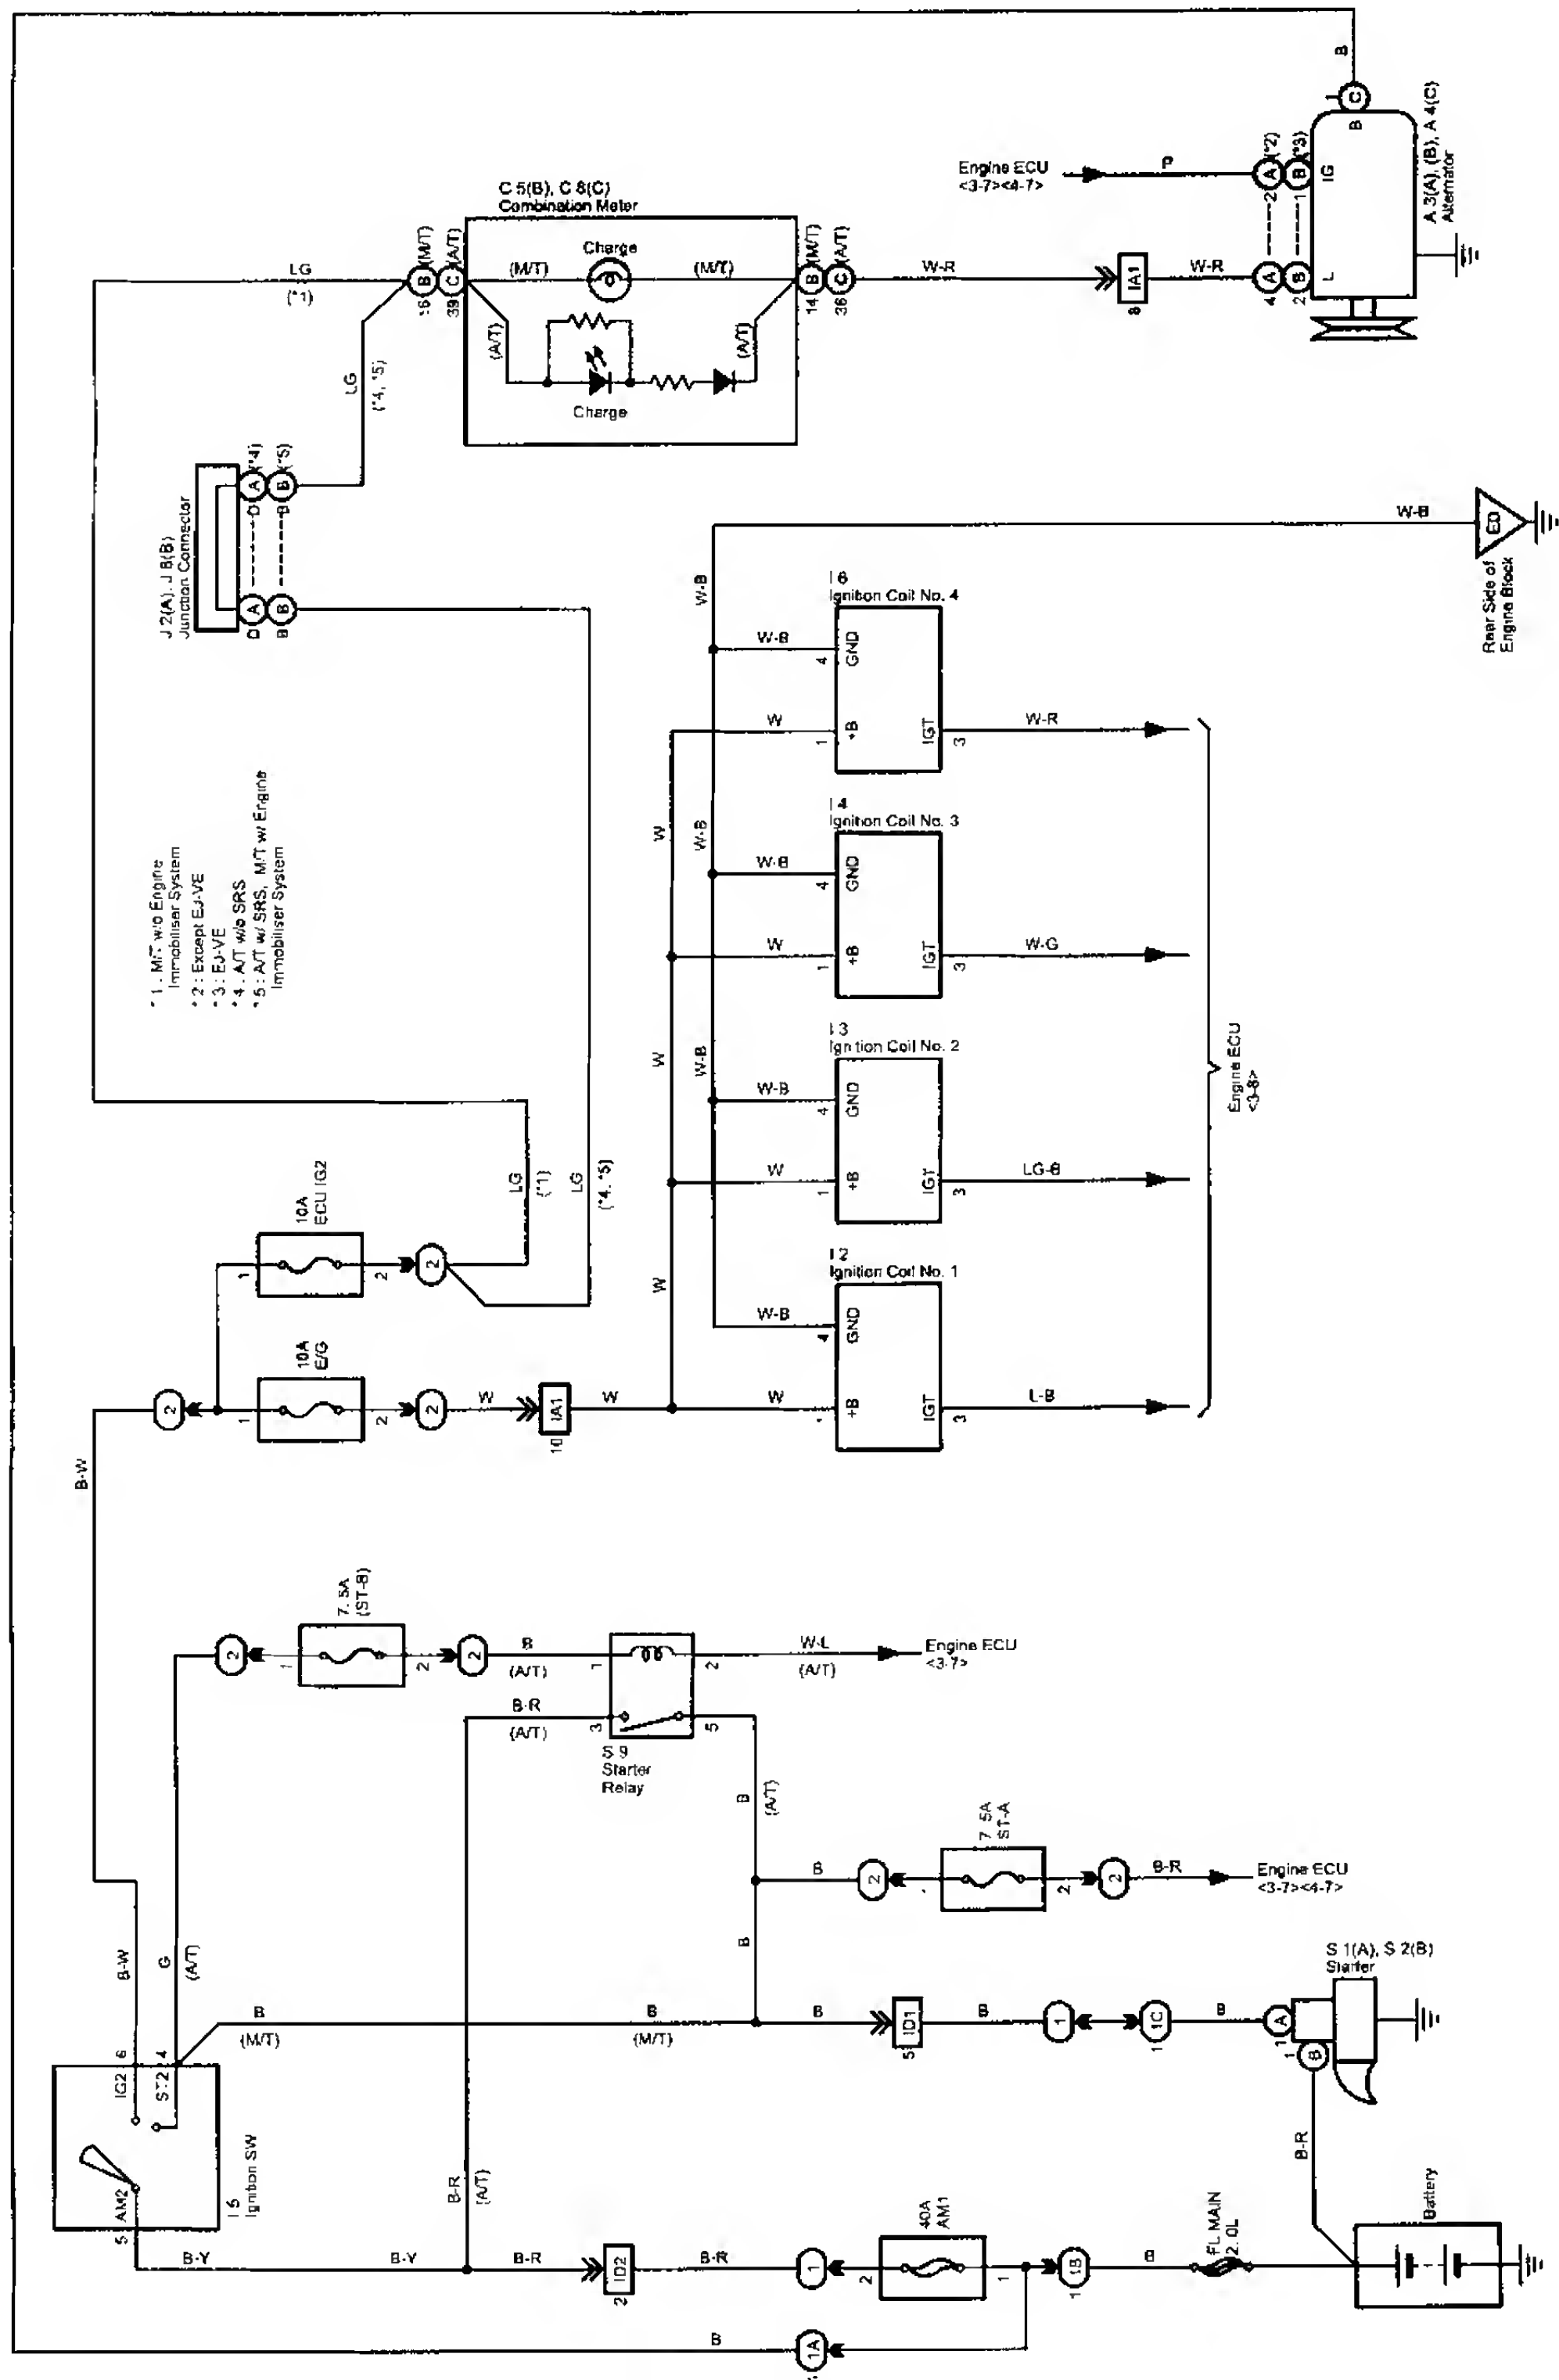


Power Source Ignition (EJ-VE)

4

3

2

1

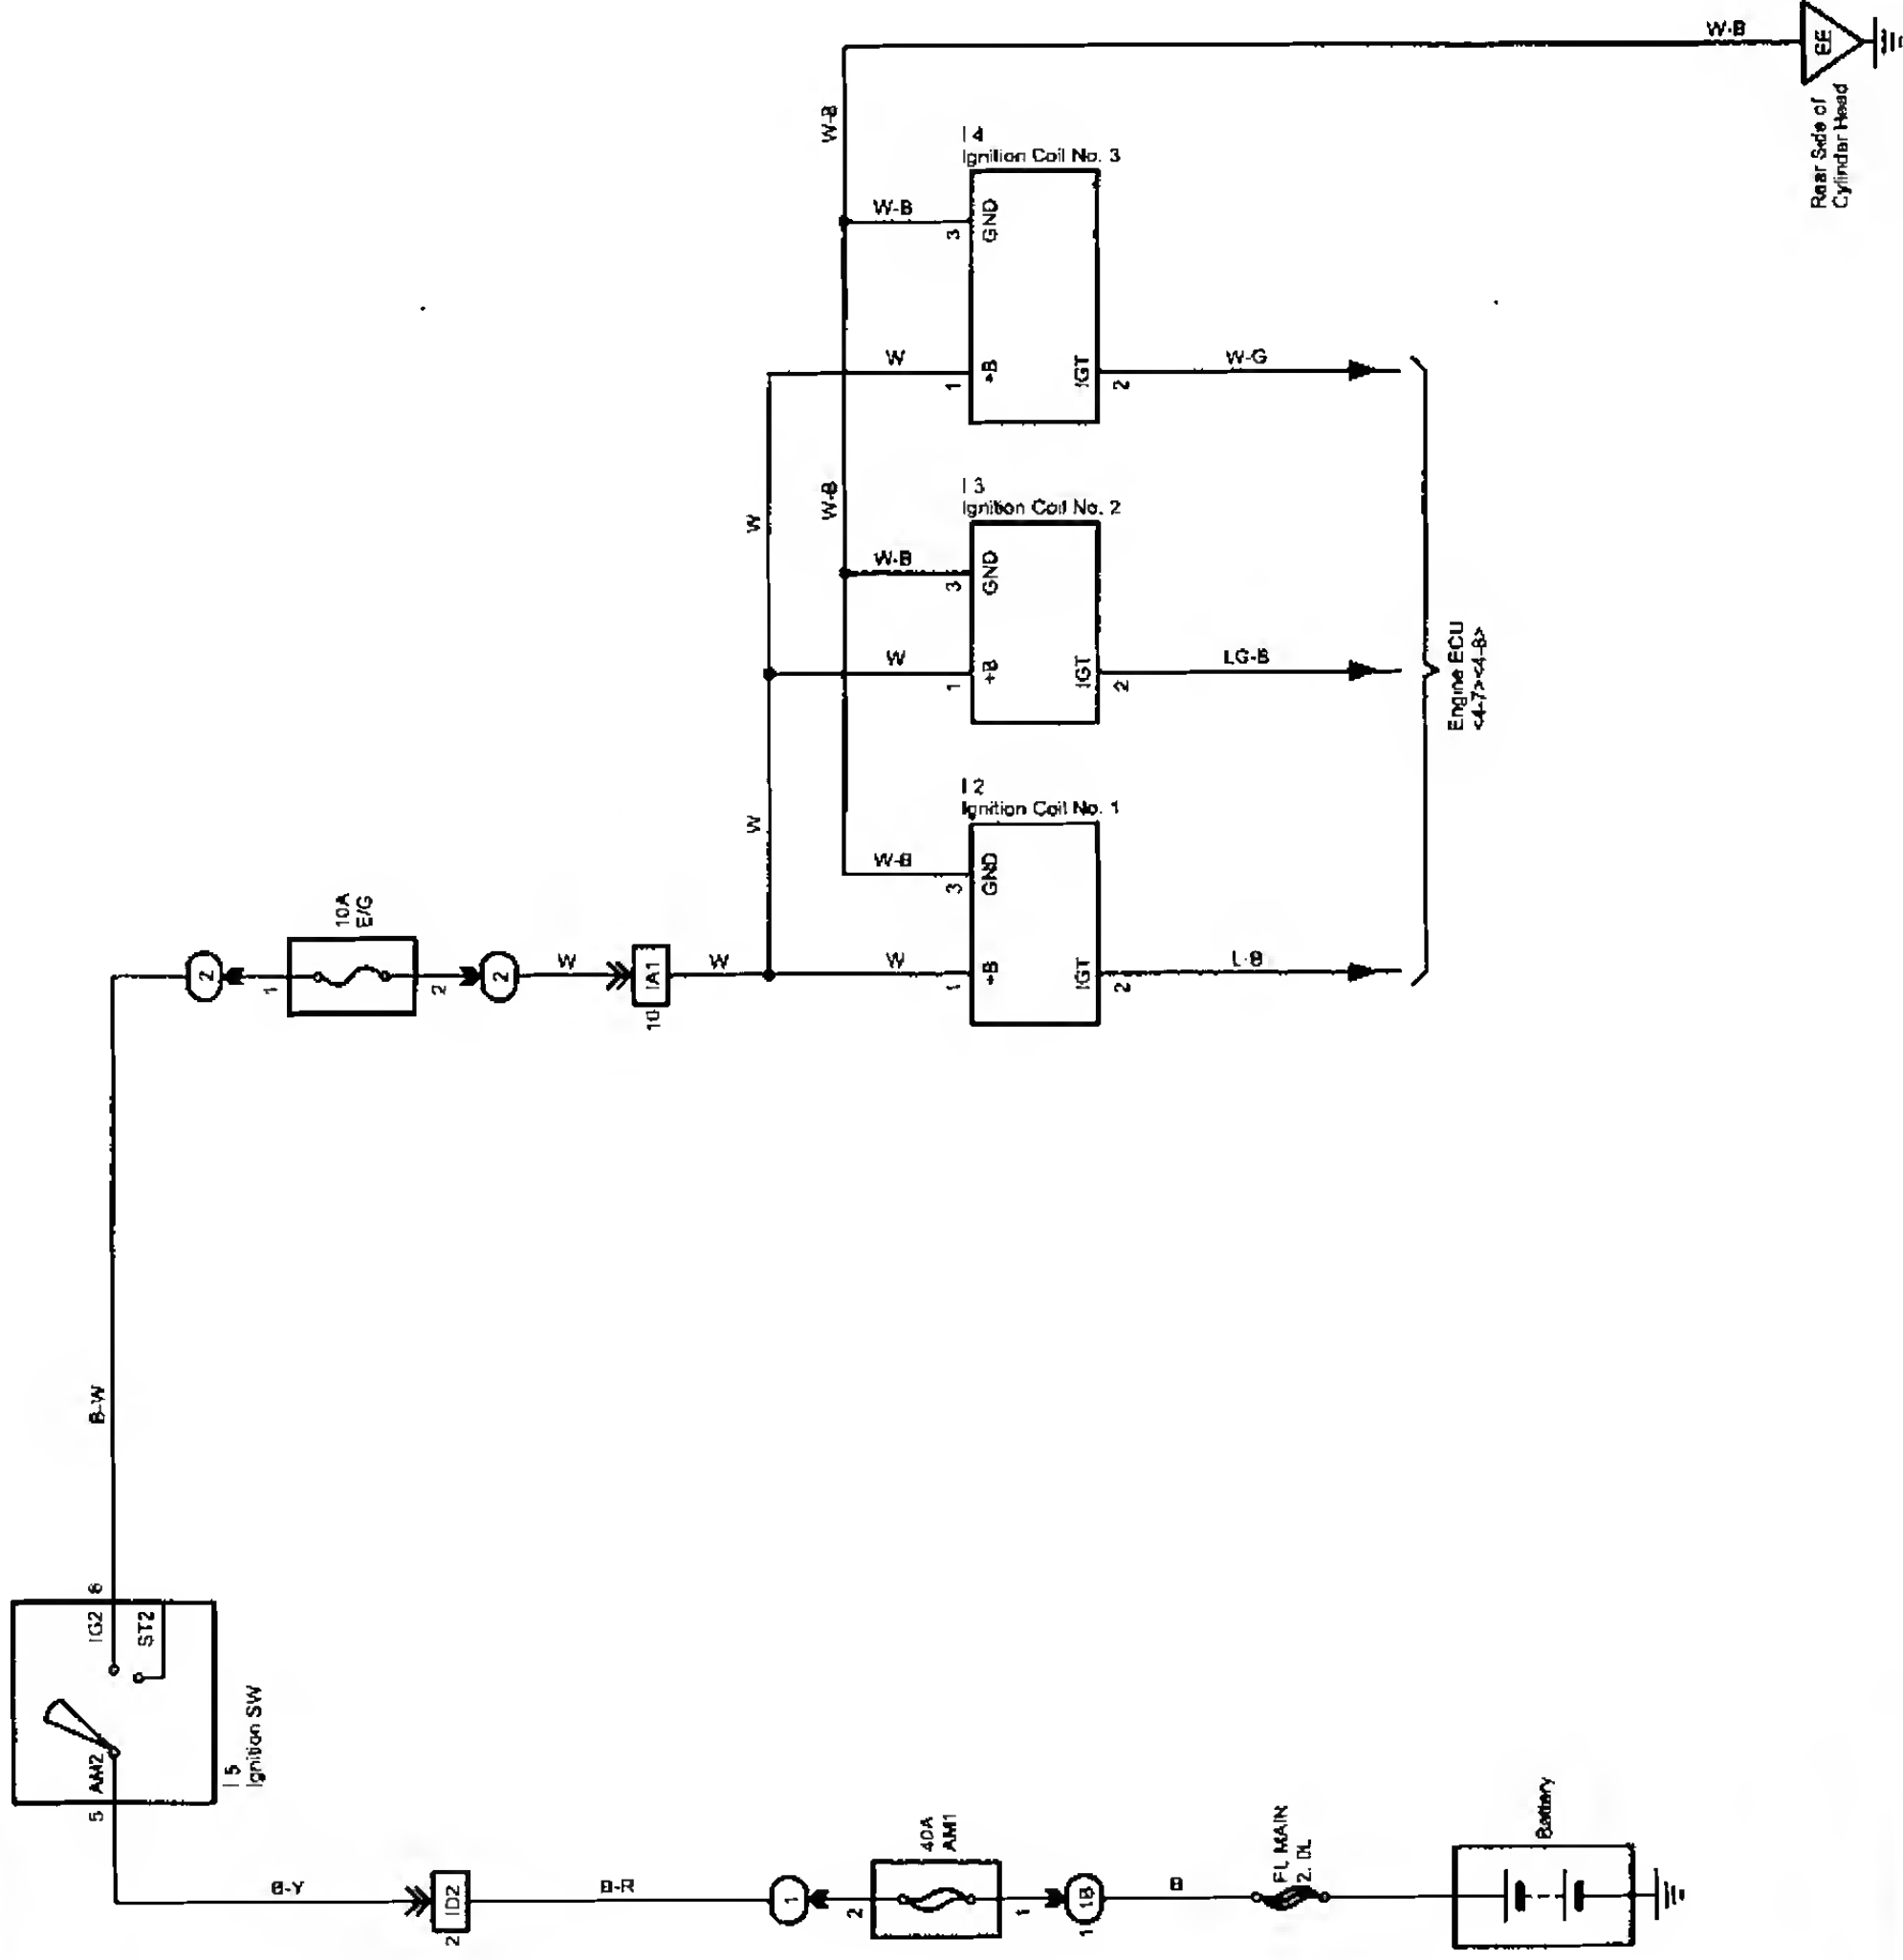


9 10 11 12

B-R(*5)


LG(*5)

V(*5)

- *3 : Thailand
- *4 : Shielded
- *5 : w/ Engine Immobiliser System

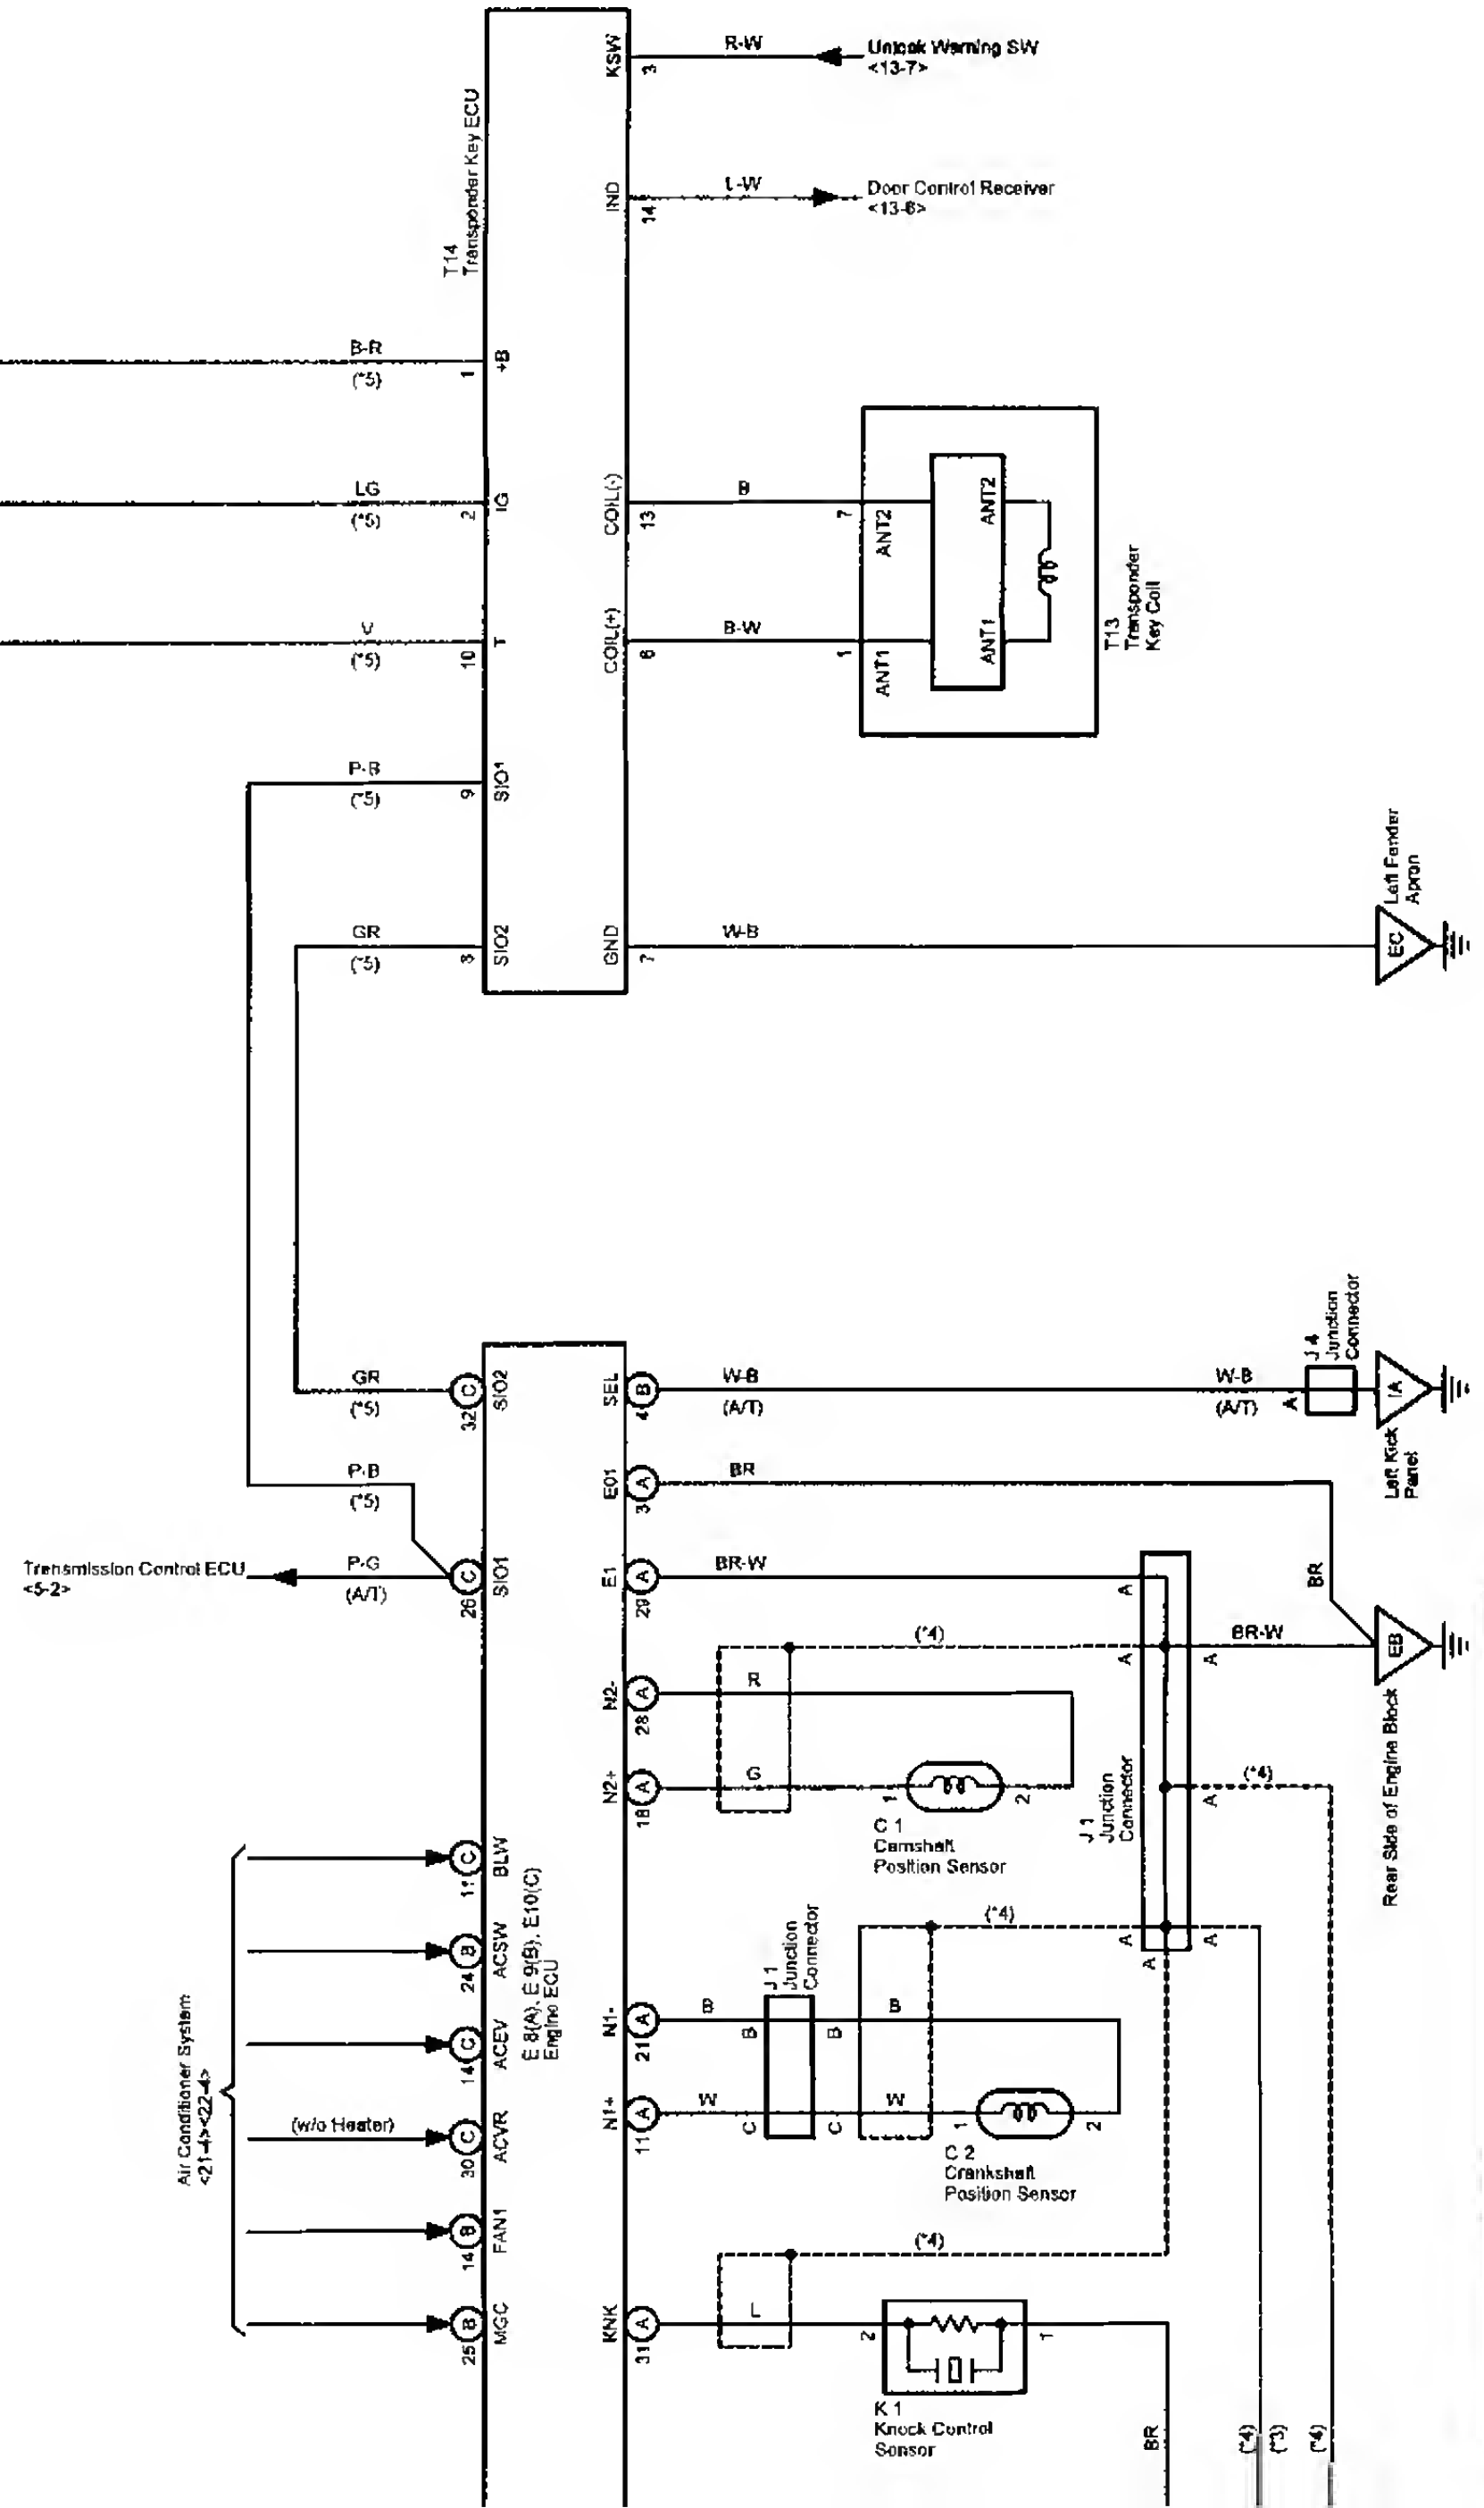

Power Source

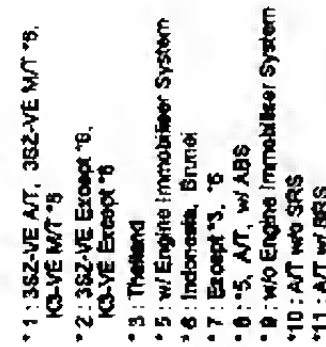

Engine Control (EJ-VE)


*3 : Shielded

5

6

7


8

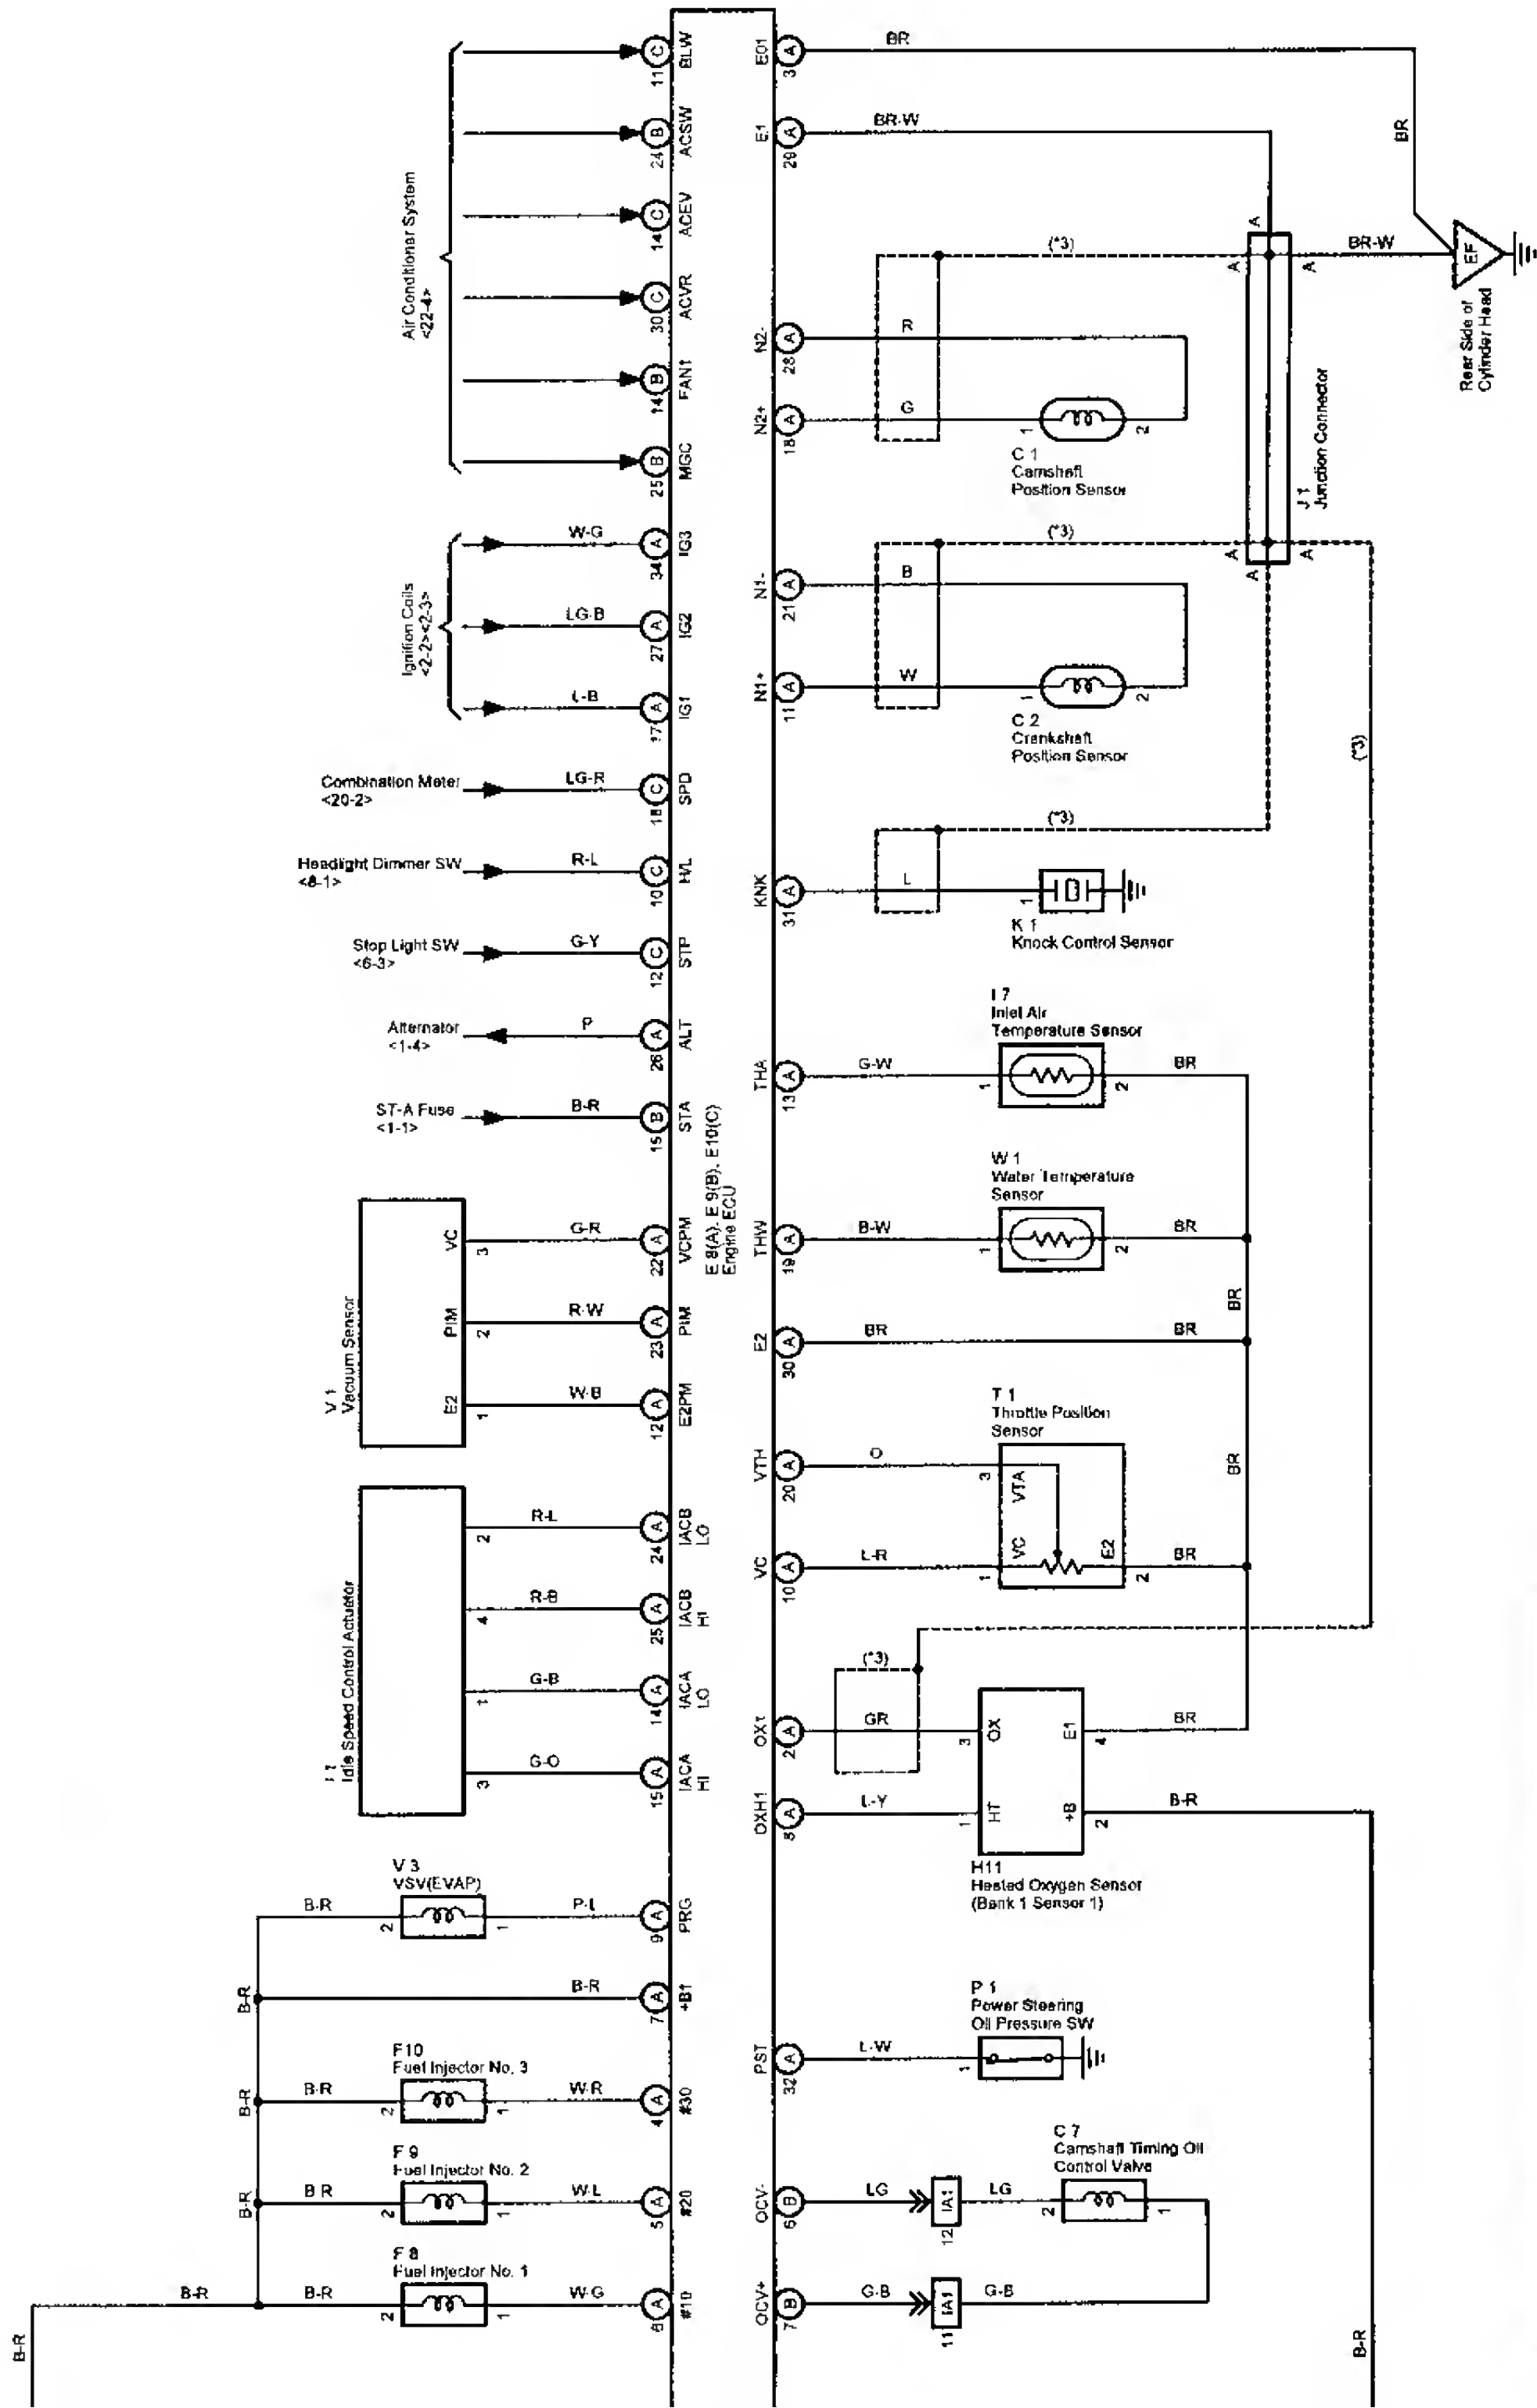

Power Source

ECT and A/T Indicator (From Aug. 2006 Production)

* 1 : Shielded

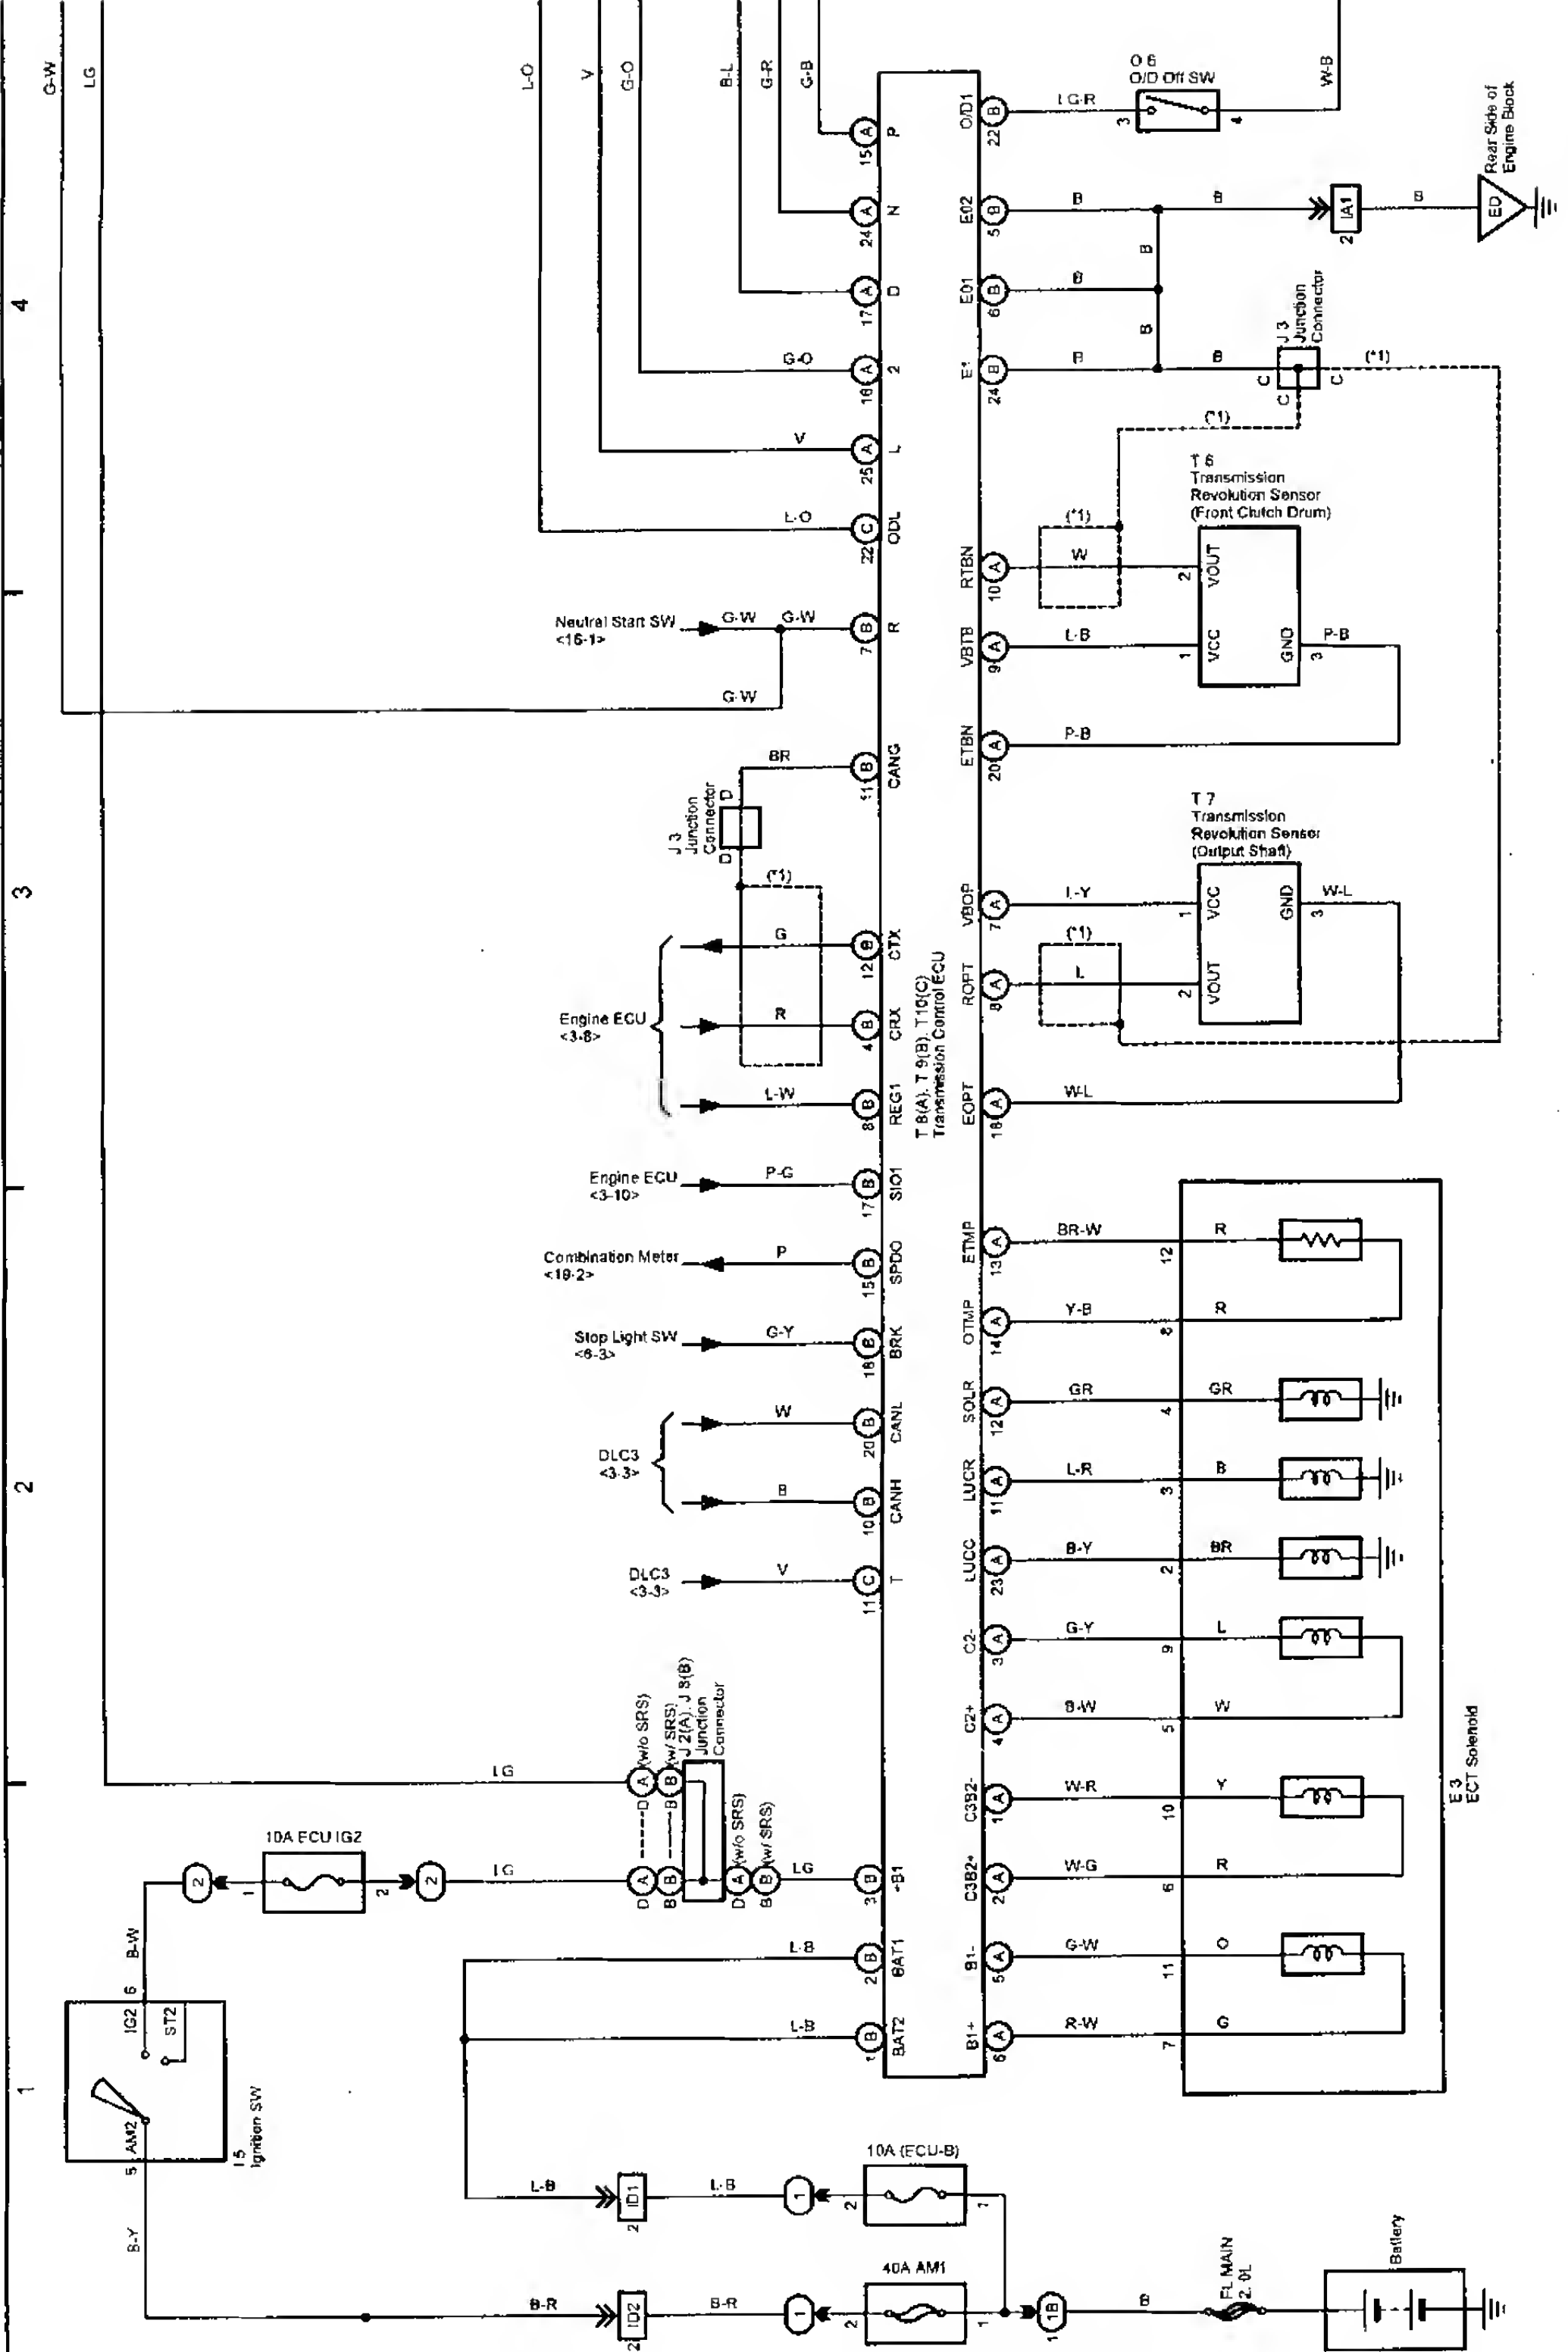


ECT and A/T Indicator (From Aug. 2006 Production)

8

7

6


5

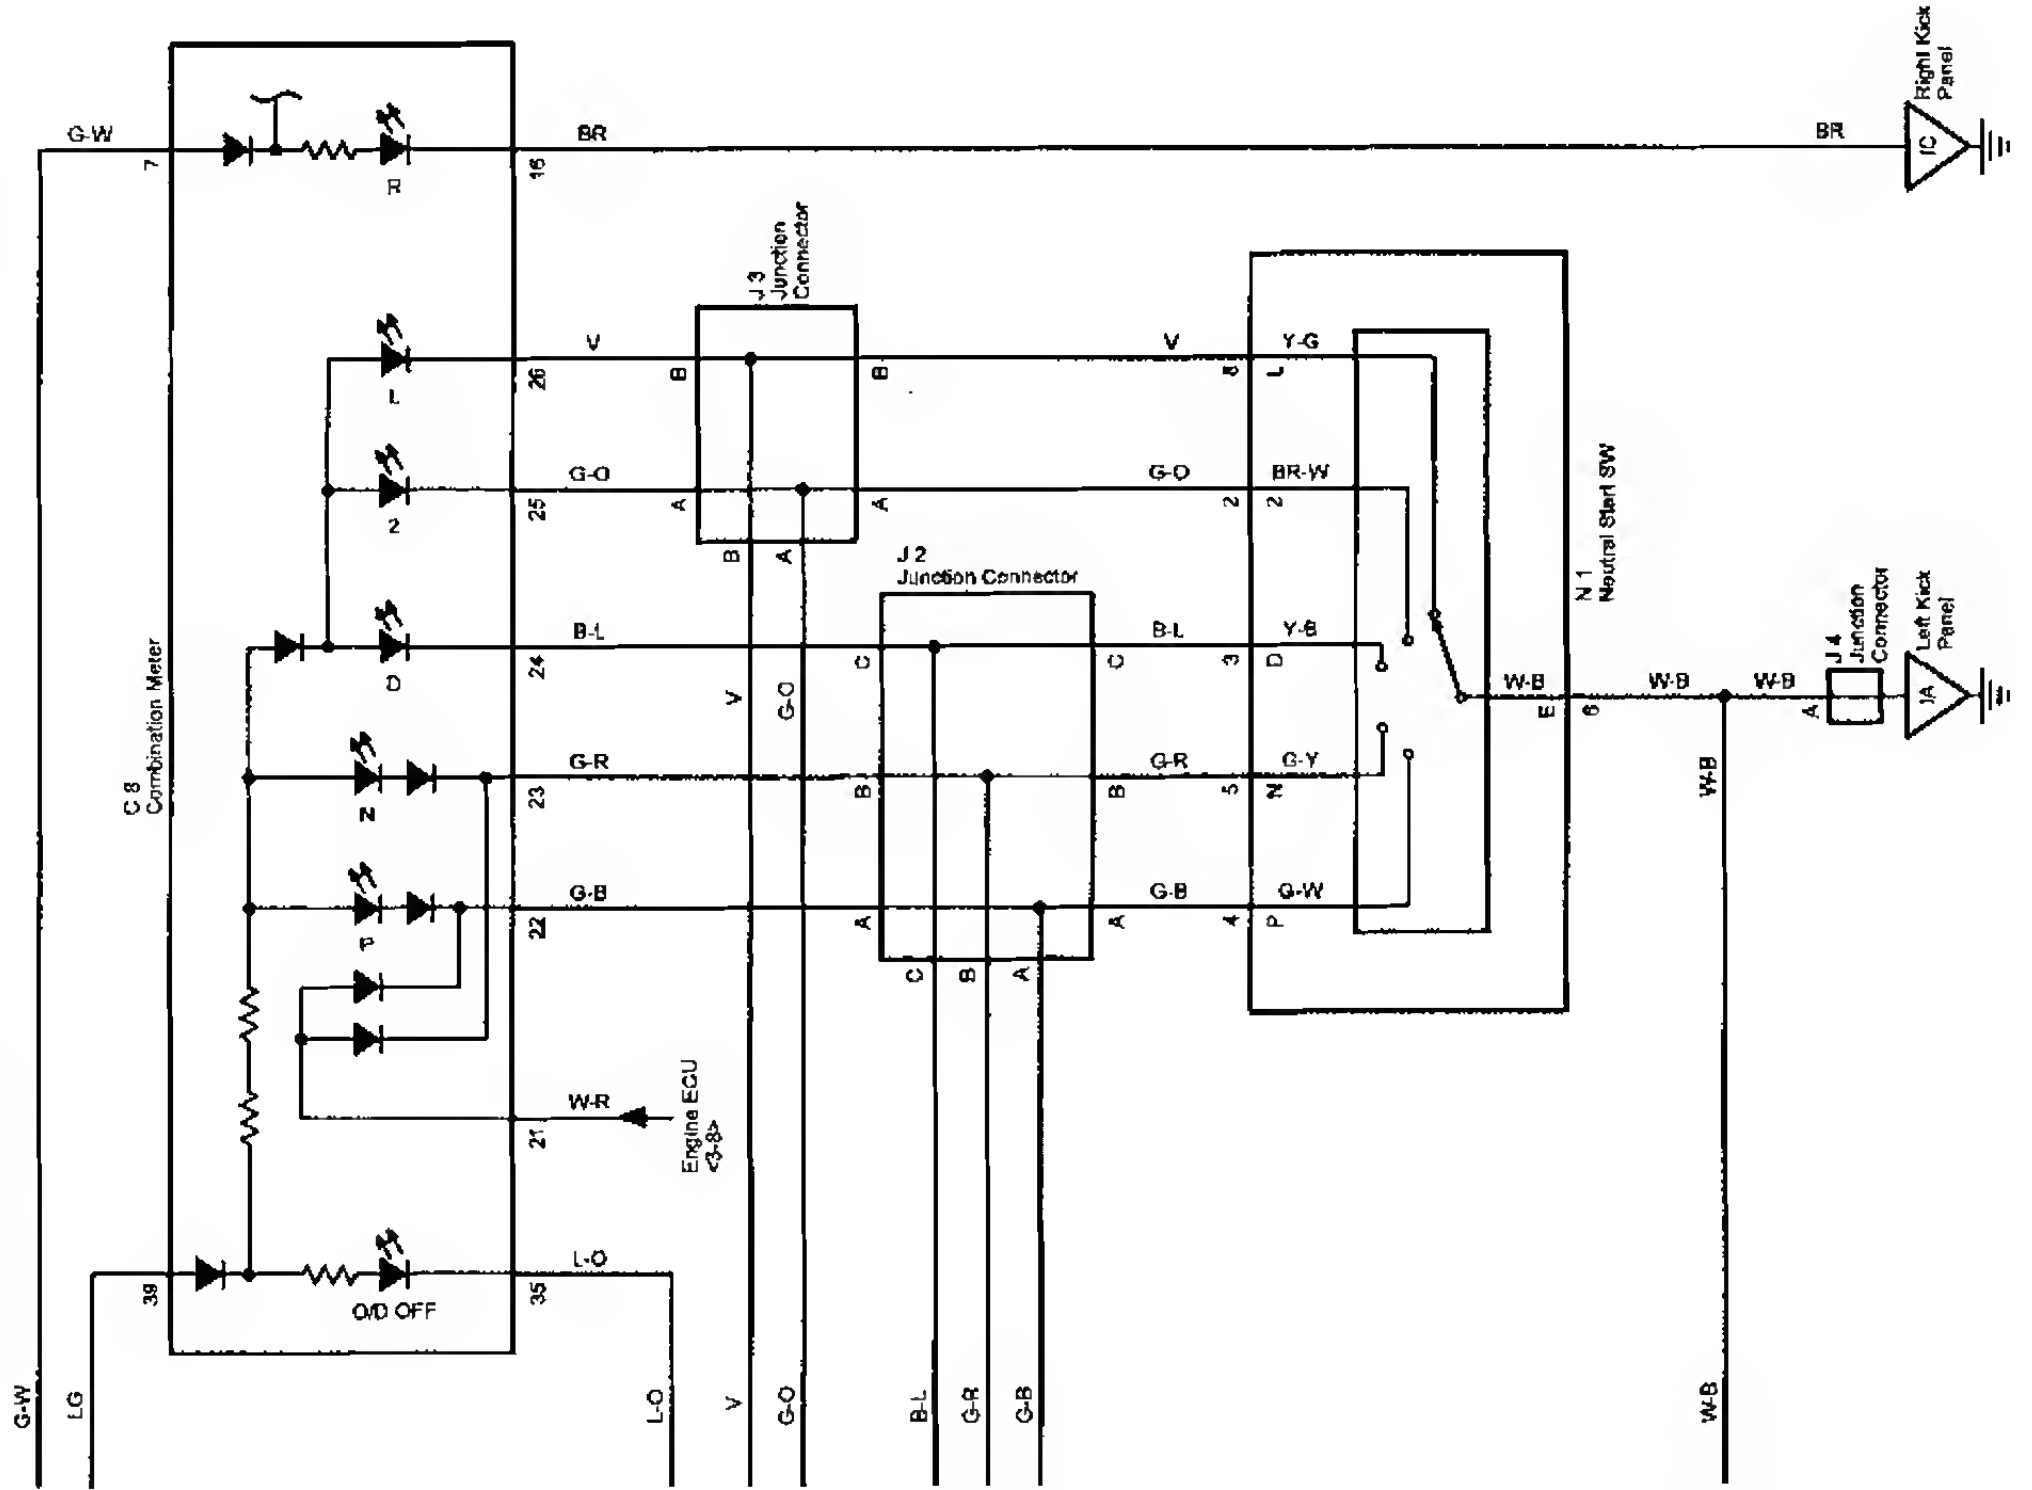

Power Source


Headlight

Stop Light

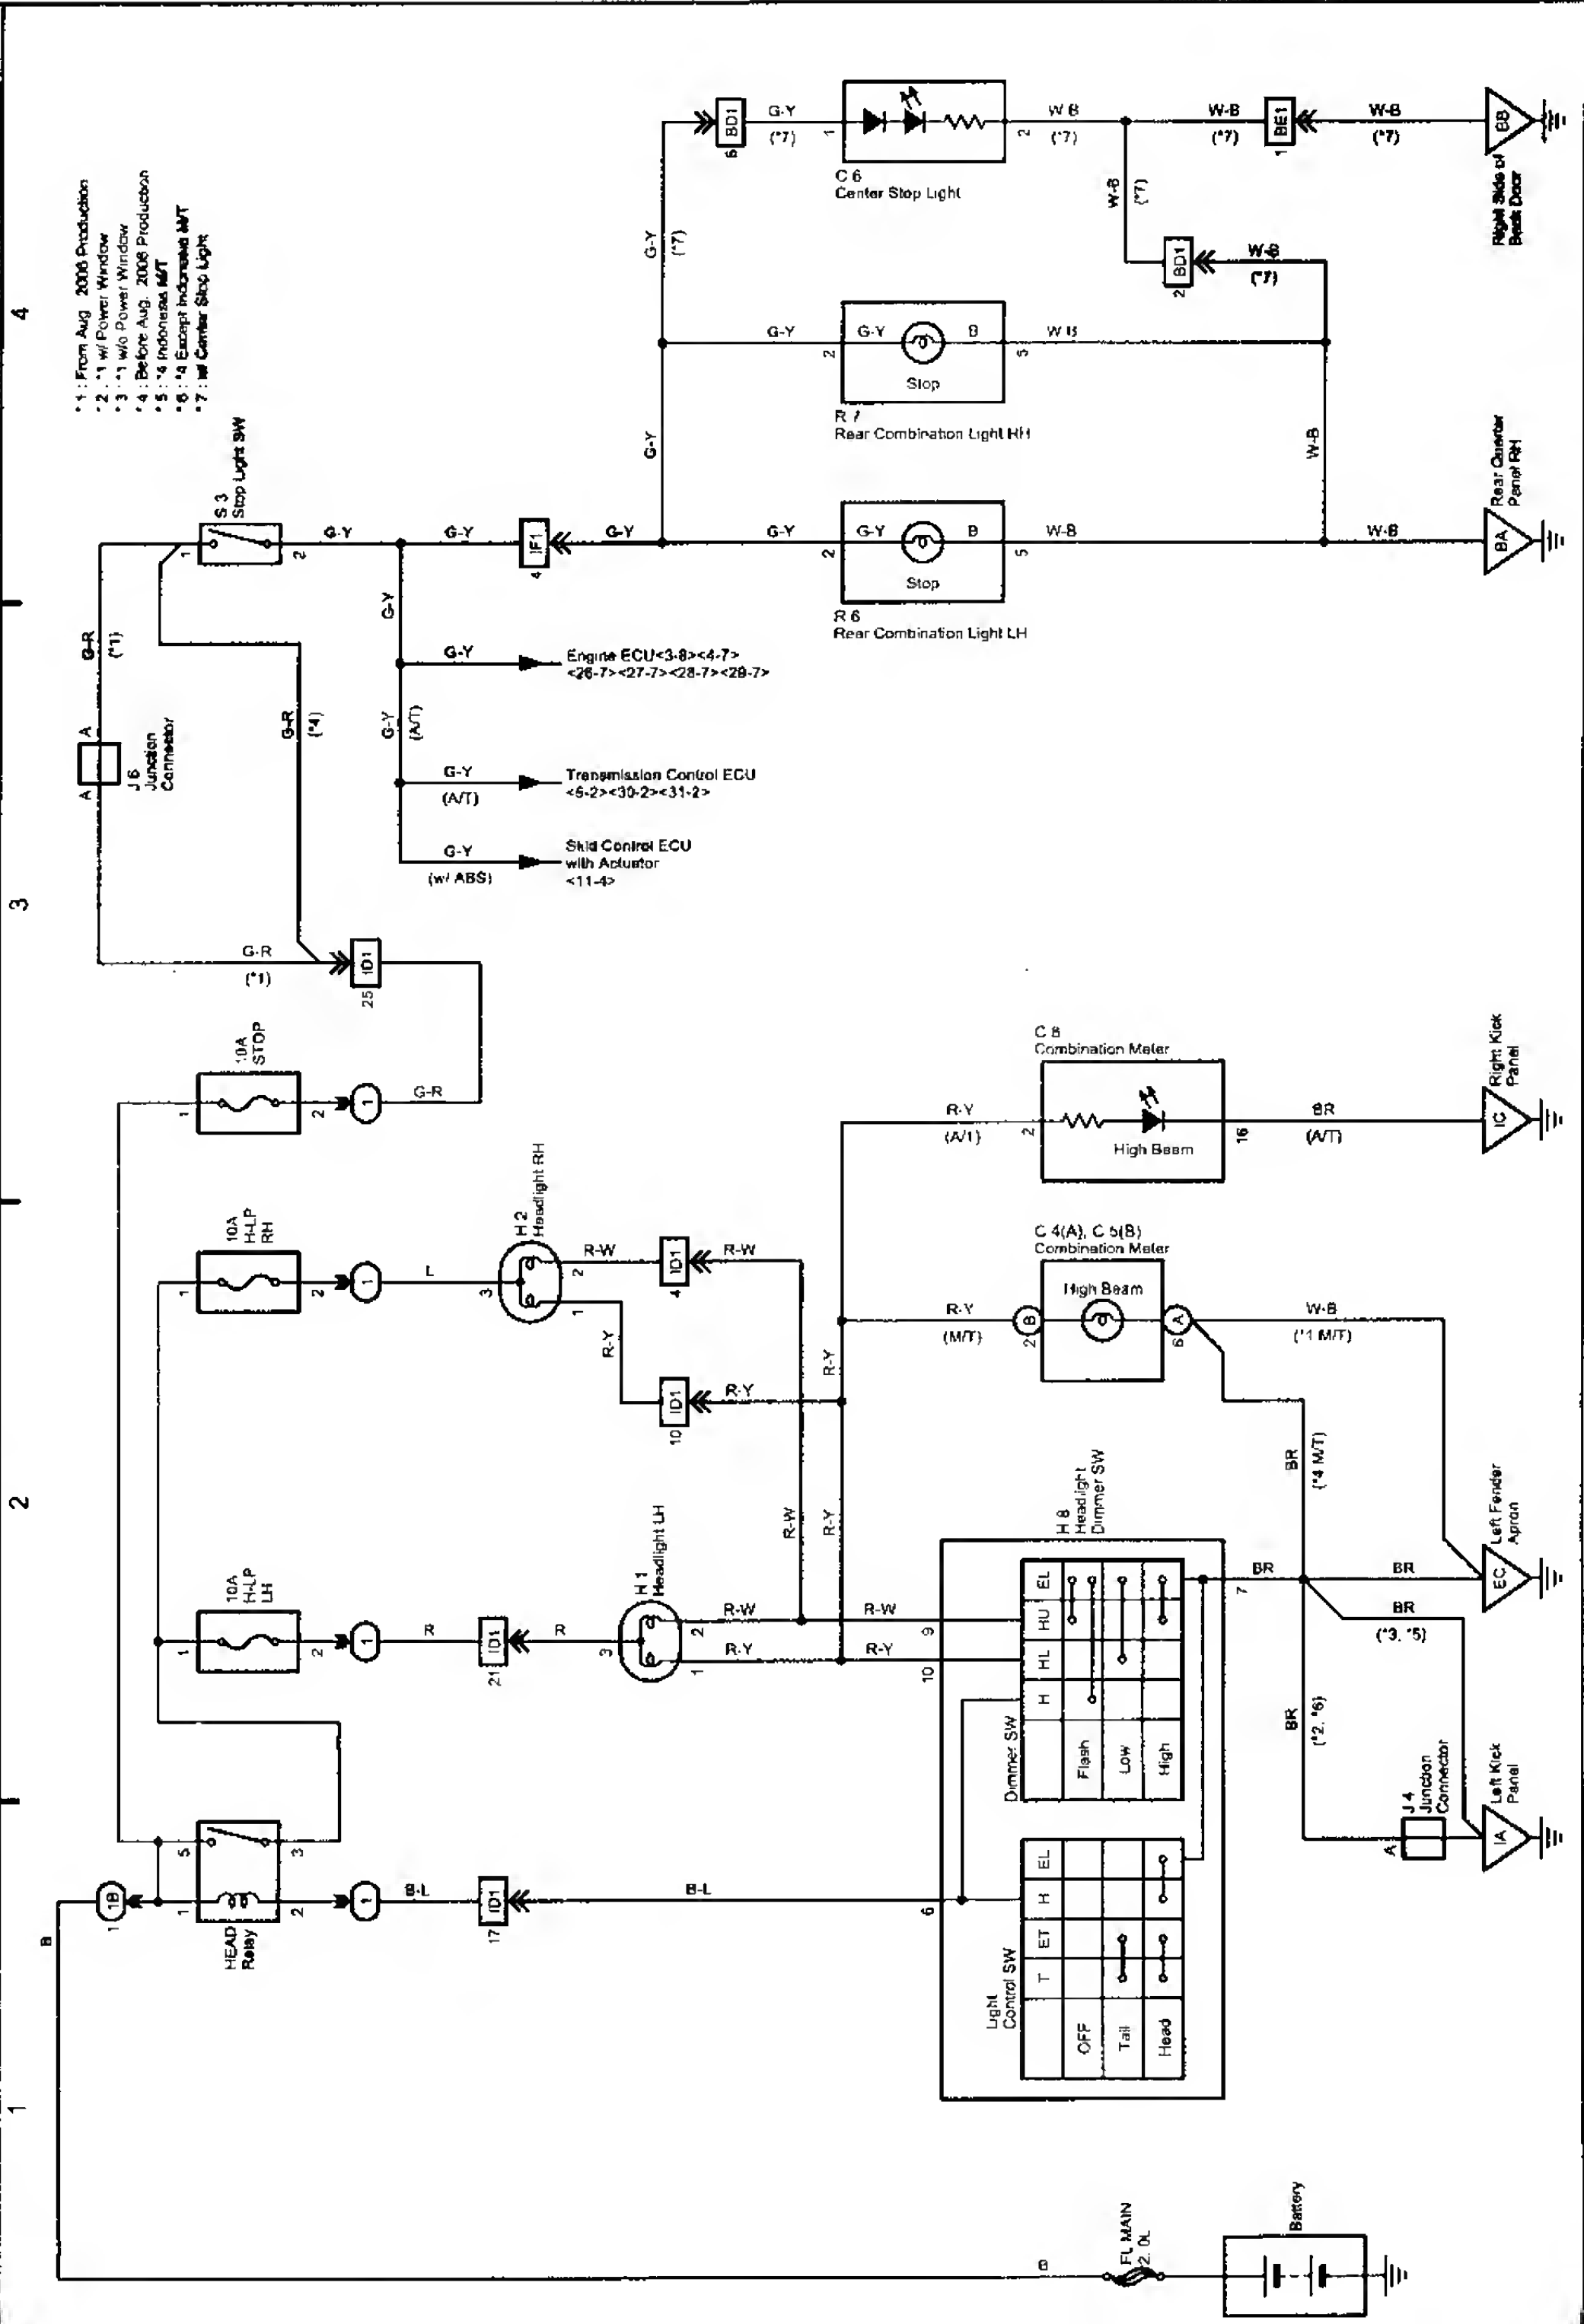

Turn Signal and Hazard Warning Light (From Aug. 2006 Production)


Power Source

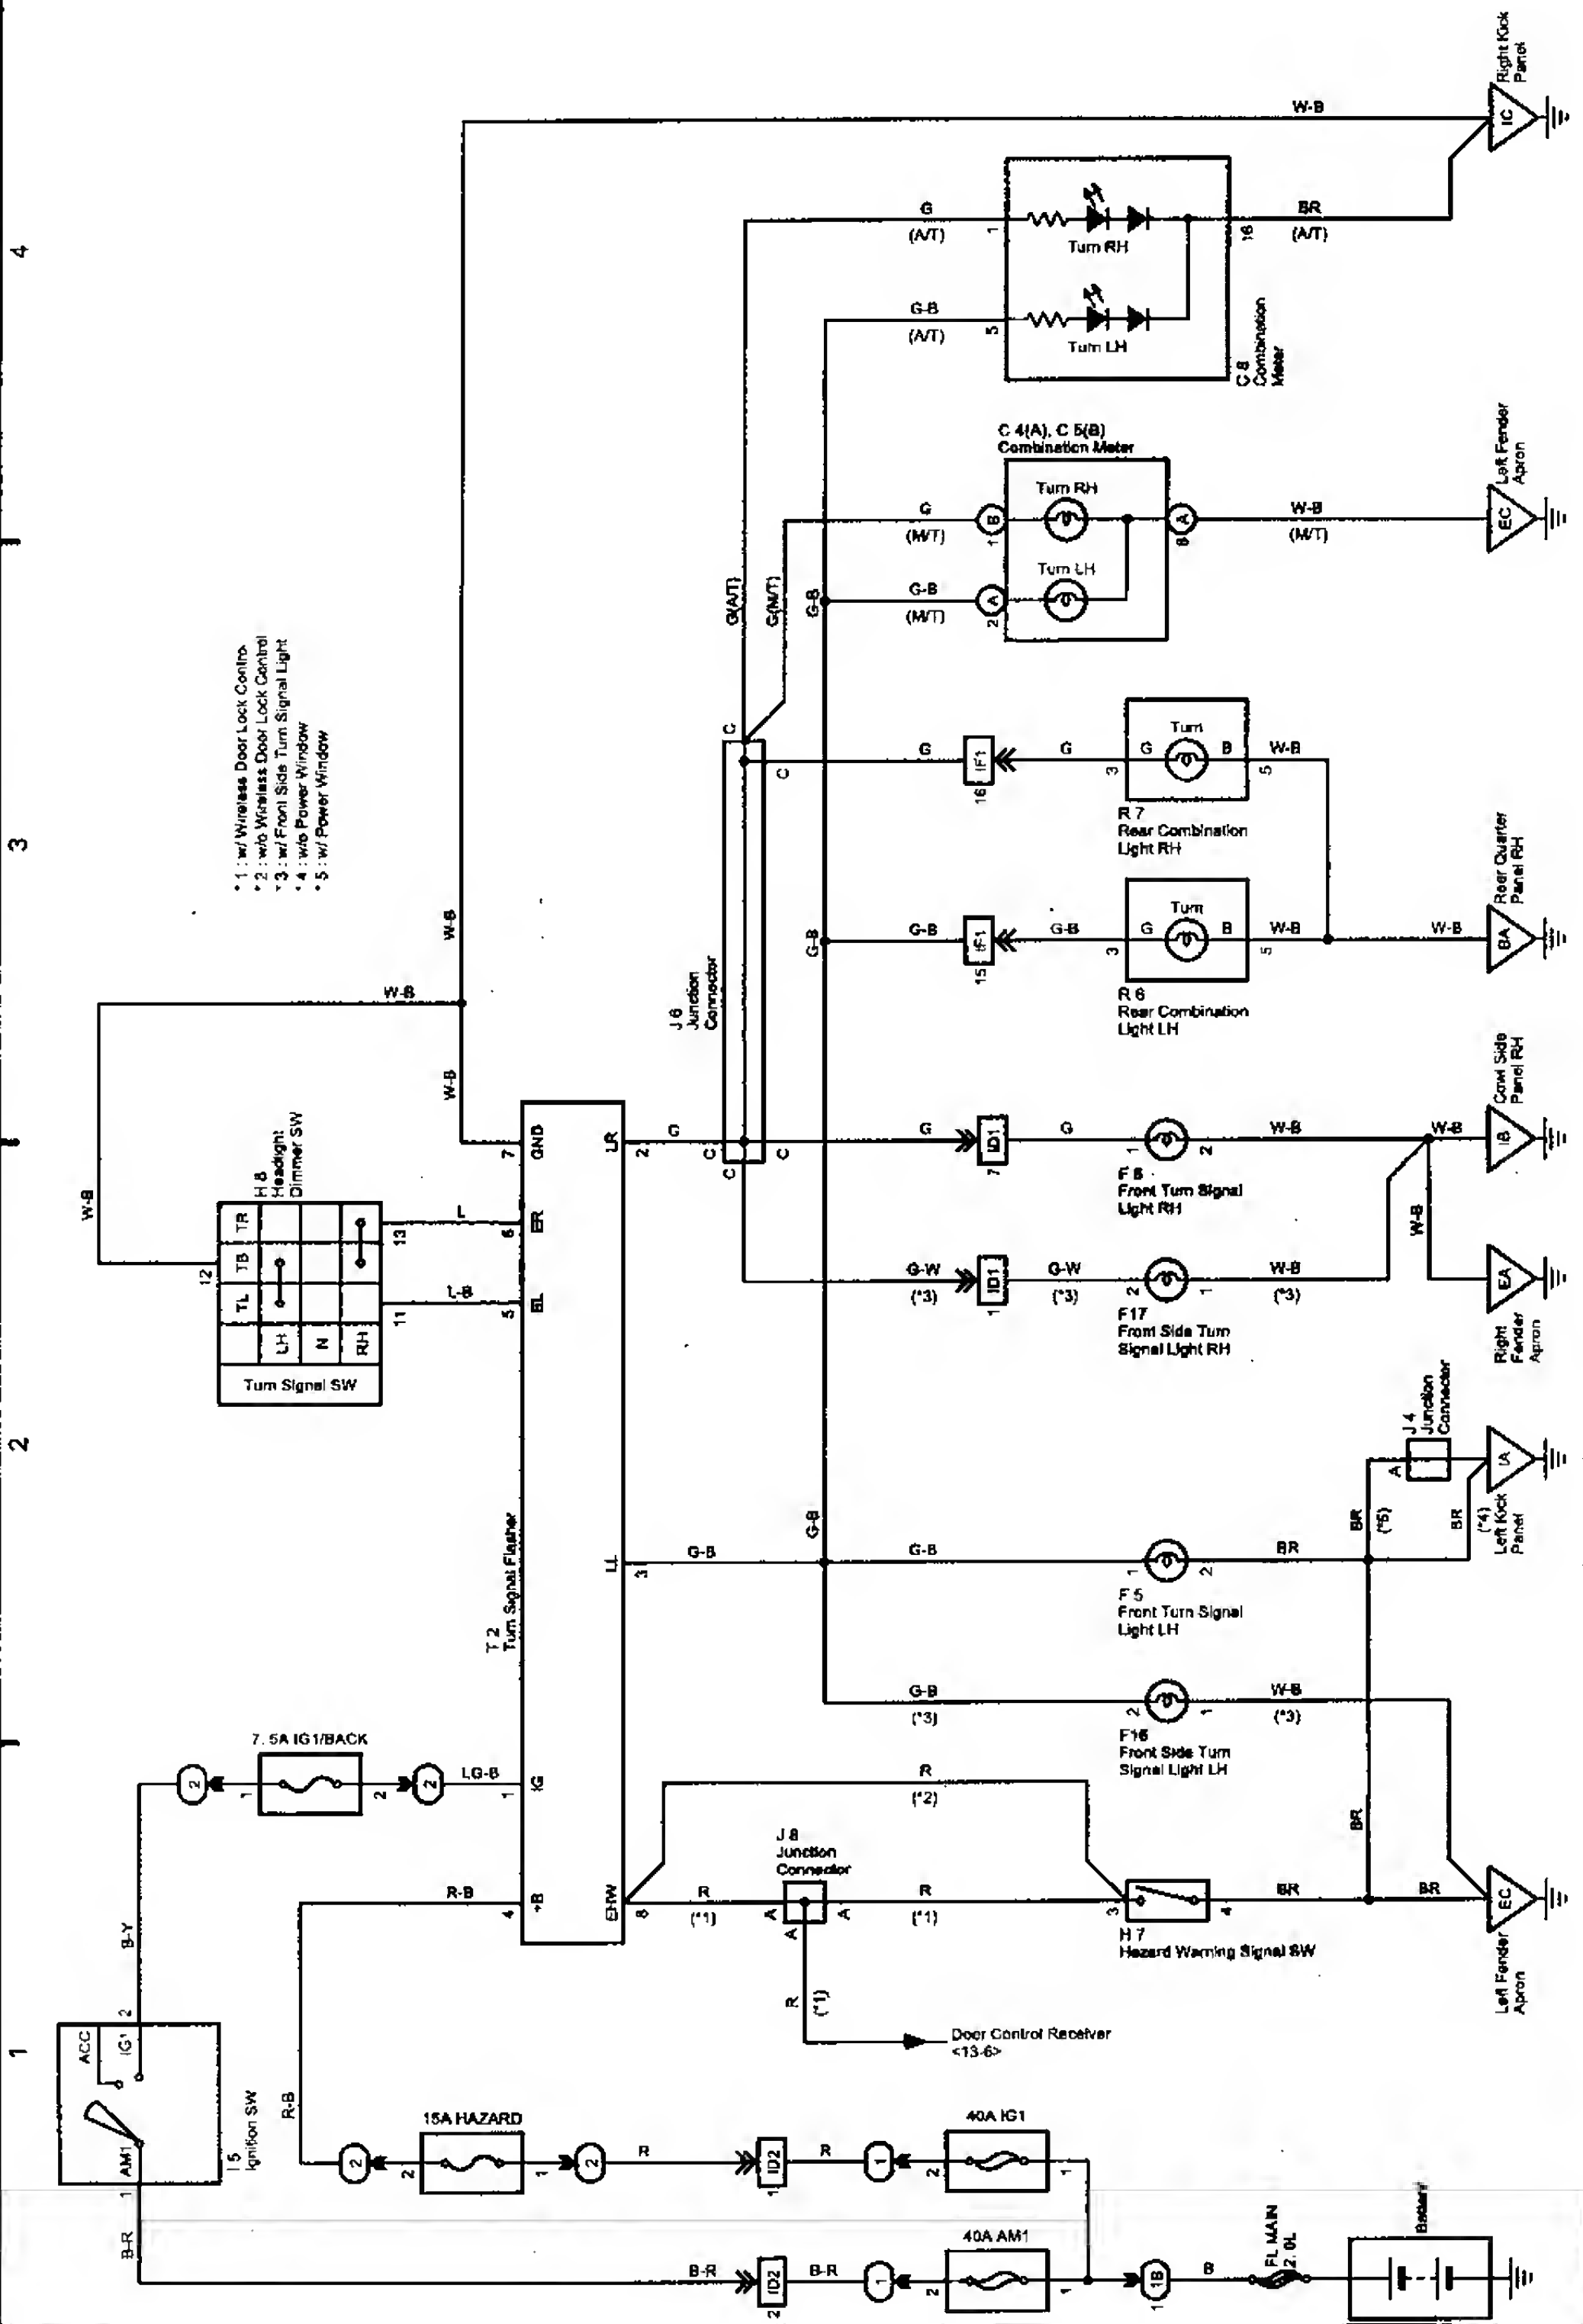

Tailight and Illumination
(From Aug. 2006 Production)

Power Source

- * 1 : Except Indonesia, Brunel
- * 2 : w/ Rear Window Defogger
- * 3 : w/ Clock
- * 4 : w/ Ash Receptacle Light
- * 5 : w/o Power Window
- * 6 : w/ Power Window
- * 7 : w/ Radio Receiver
- * 8 : w/ Heater
- * 9 : w/o Heater

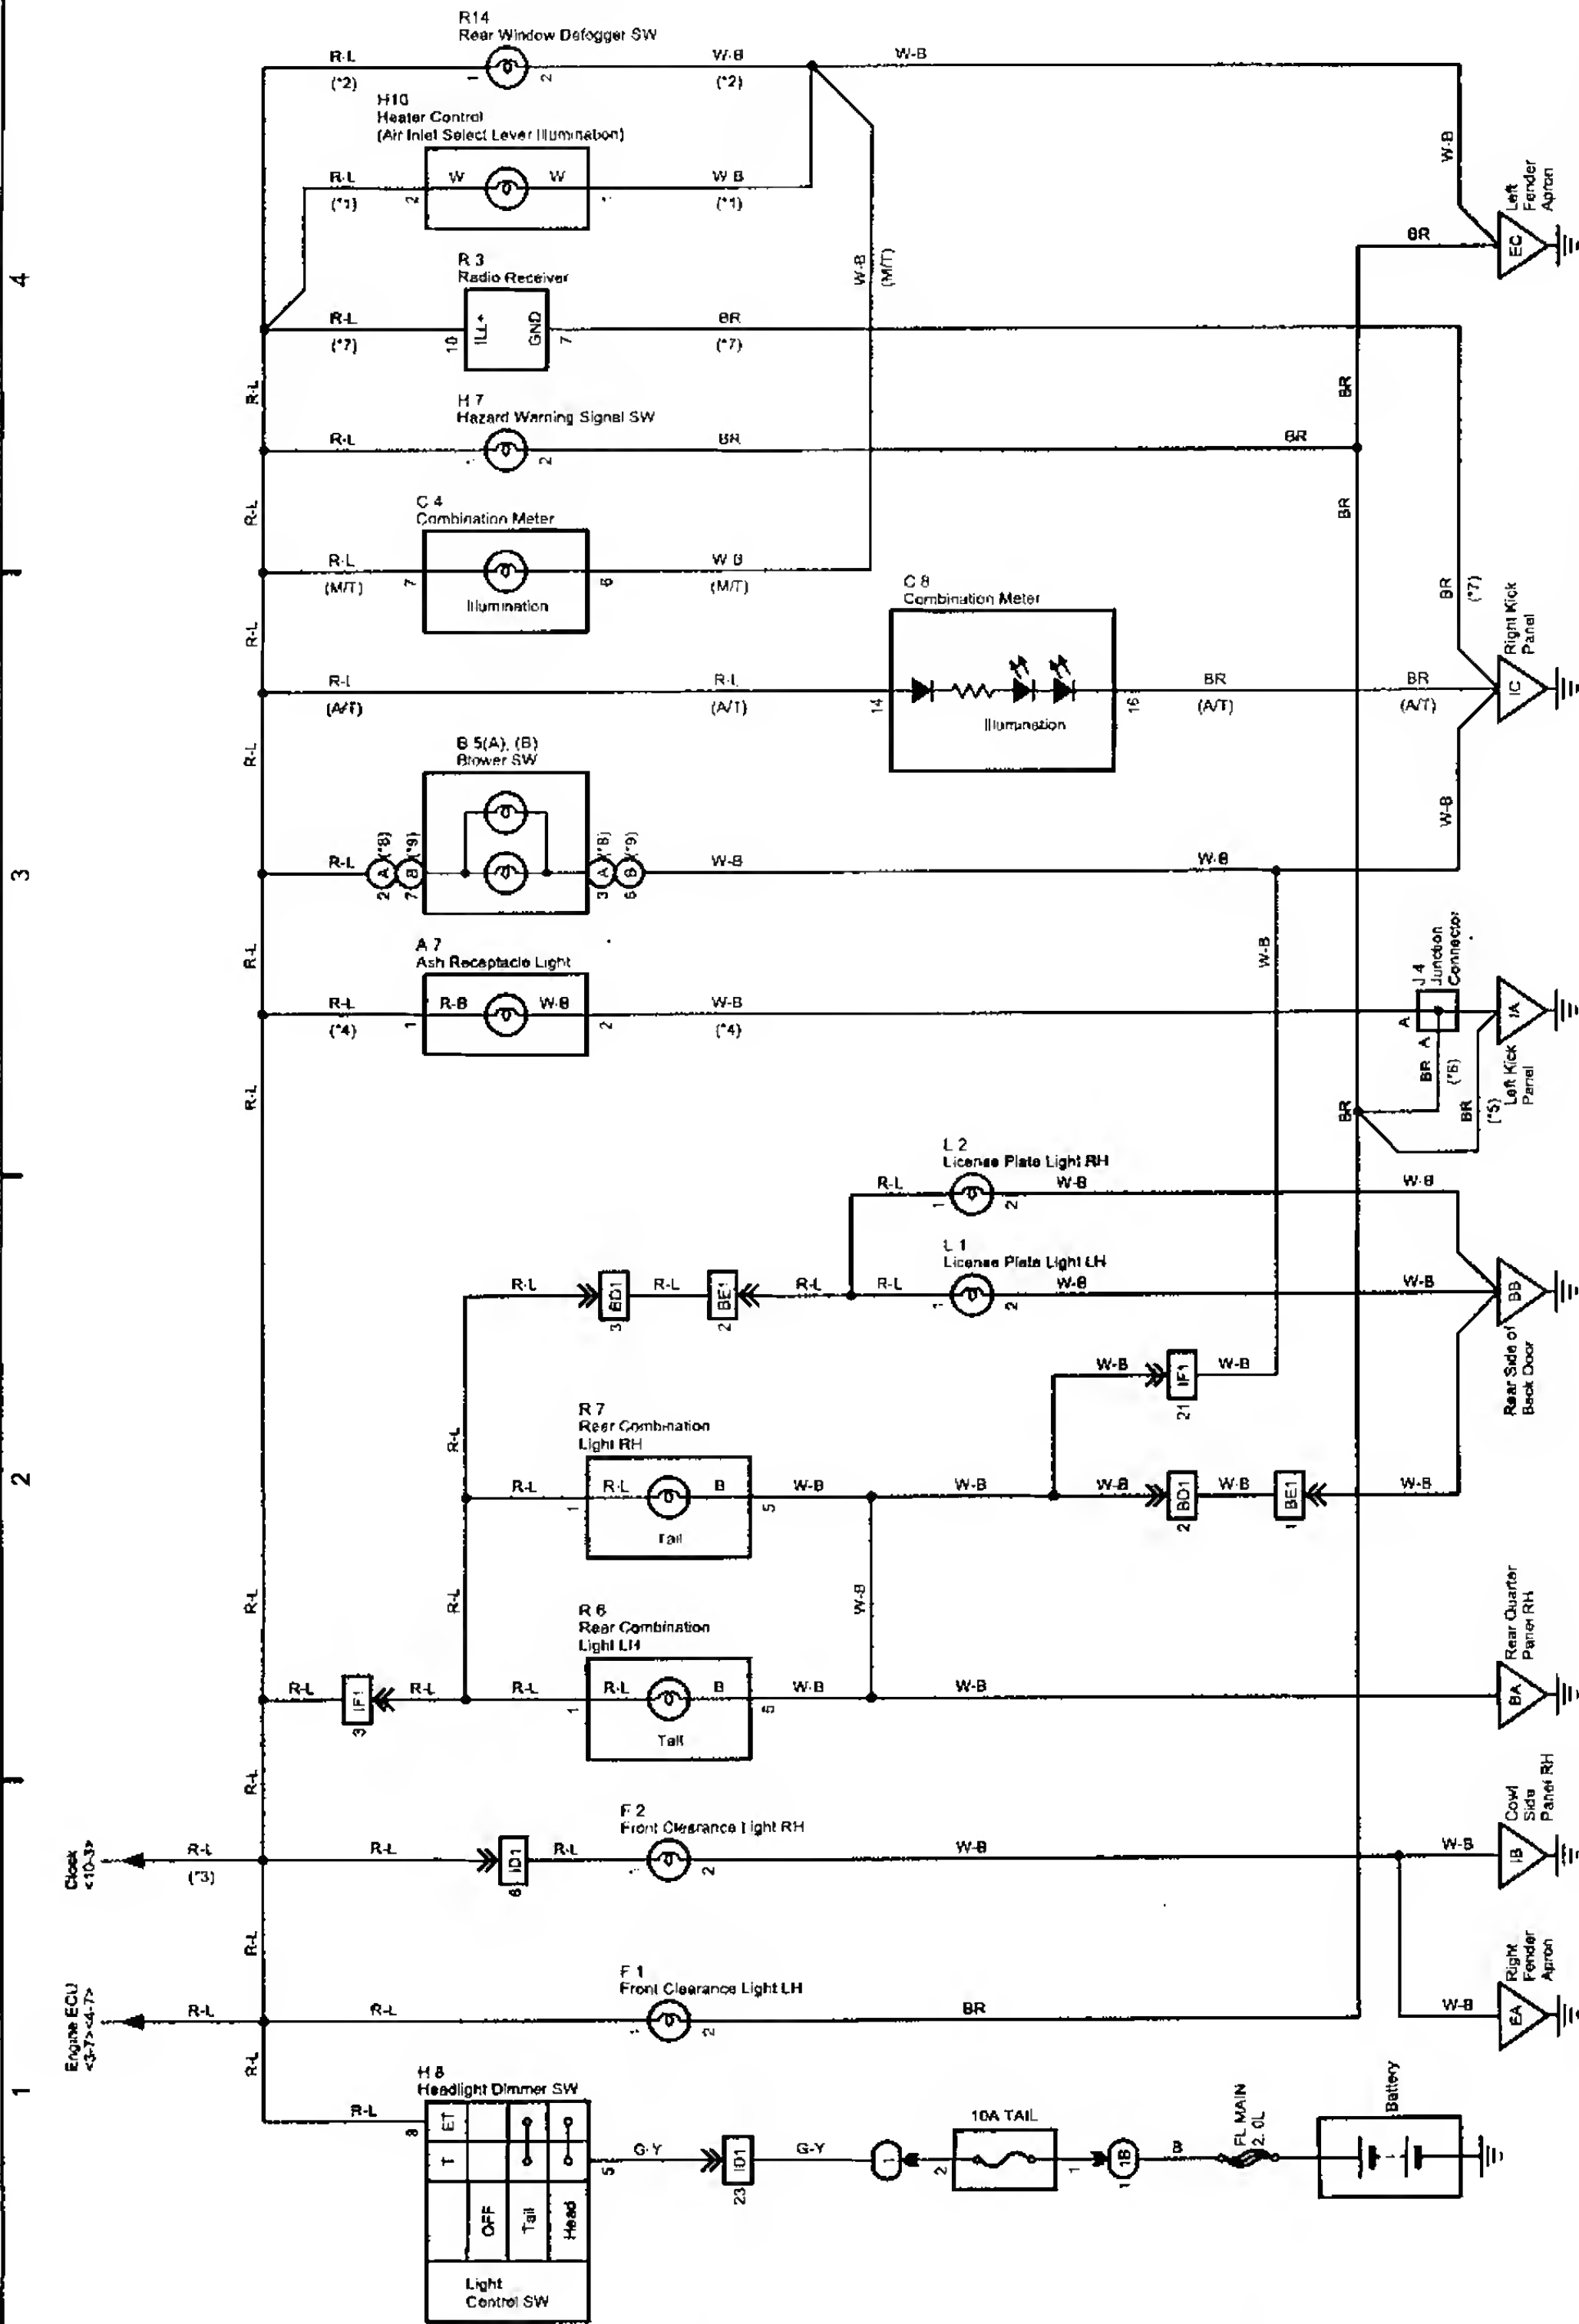

Power Source

Fog Light

Remote Control Mirror


4

3

2

1

- * 1 : From Aug. 2006 Production
- * 2 : Before Aug. 2006 Production
- * 3 : * 2 Indonesia M/T
- * 4 : * 2 Except Indonesia M/T

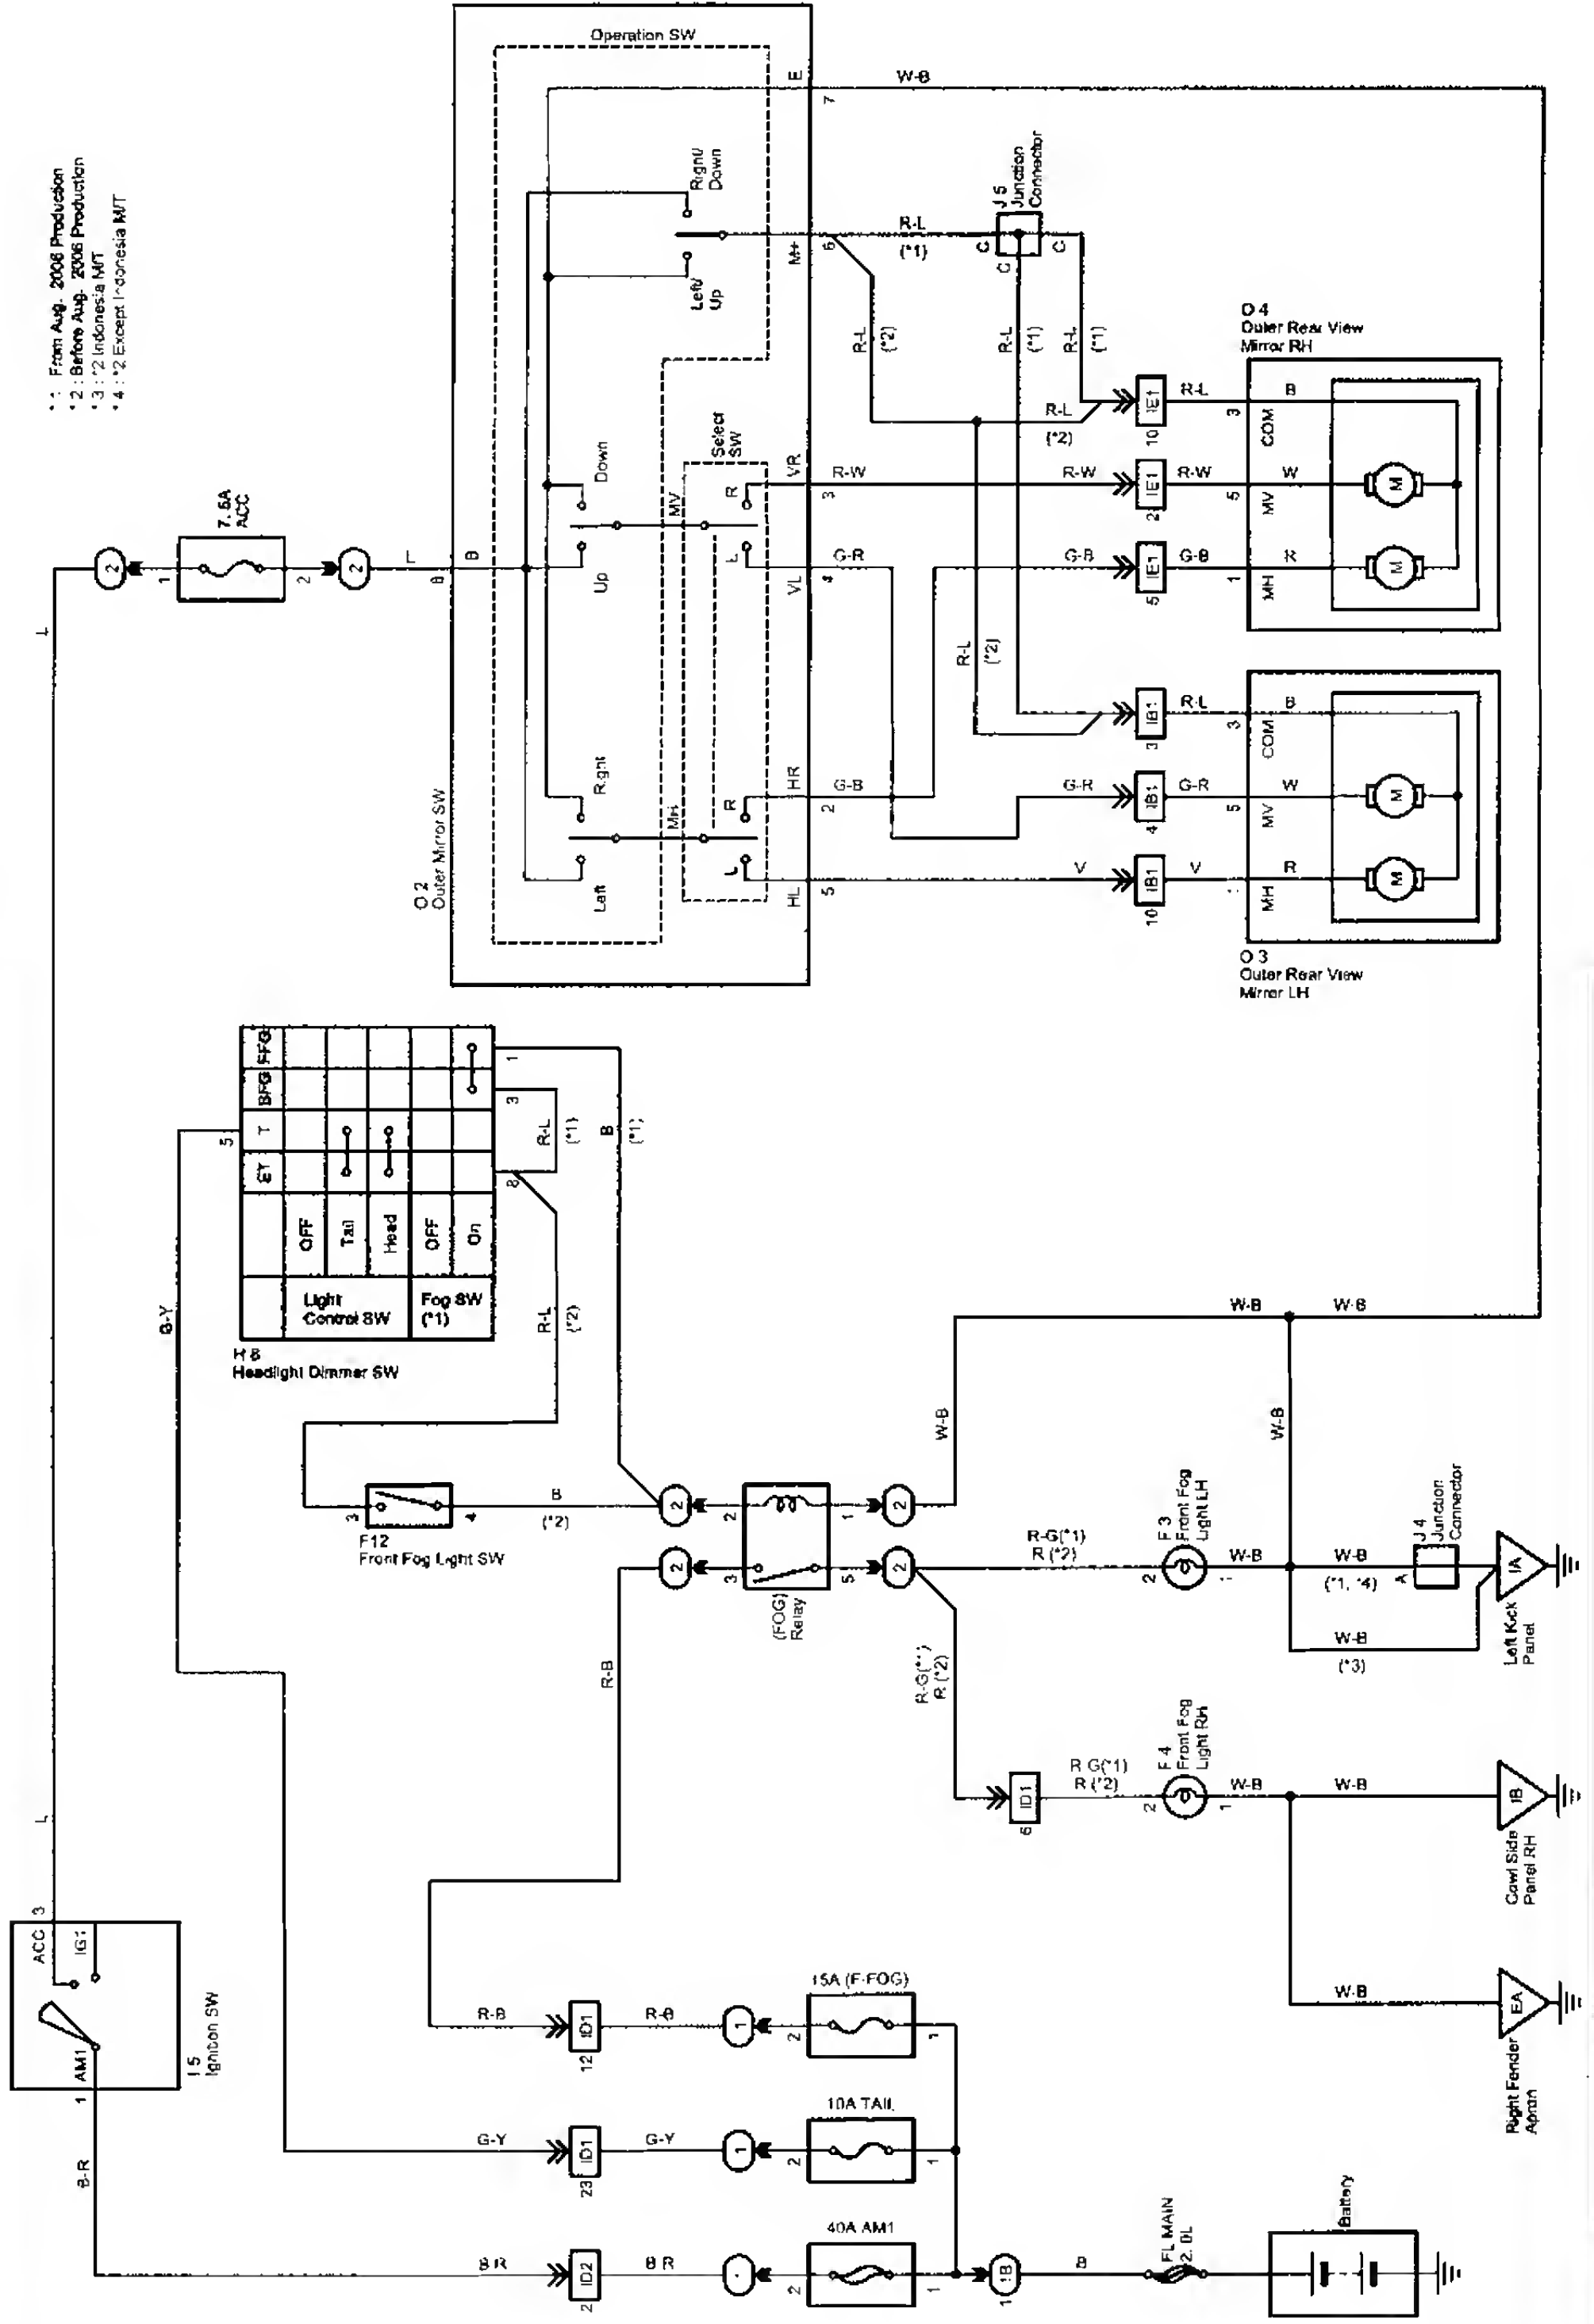



Power Source

Seat Belt Warning

Clock

Horn

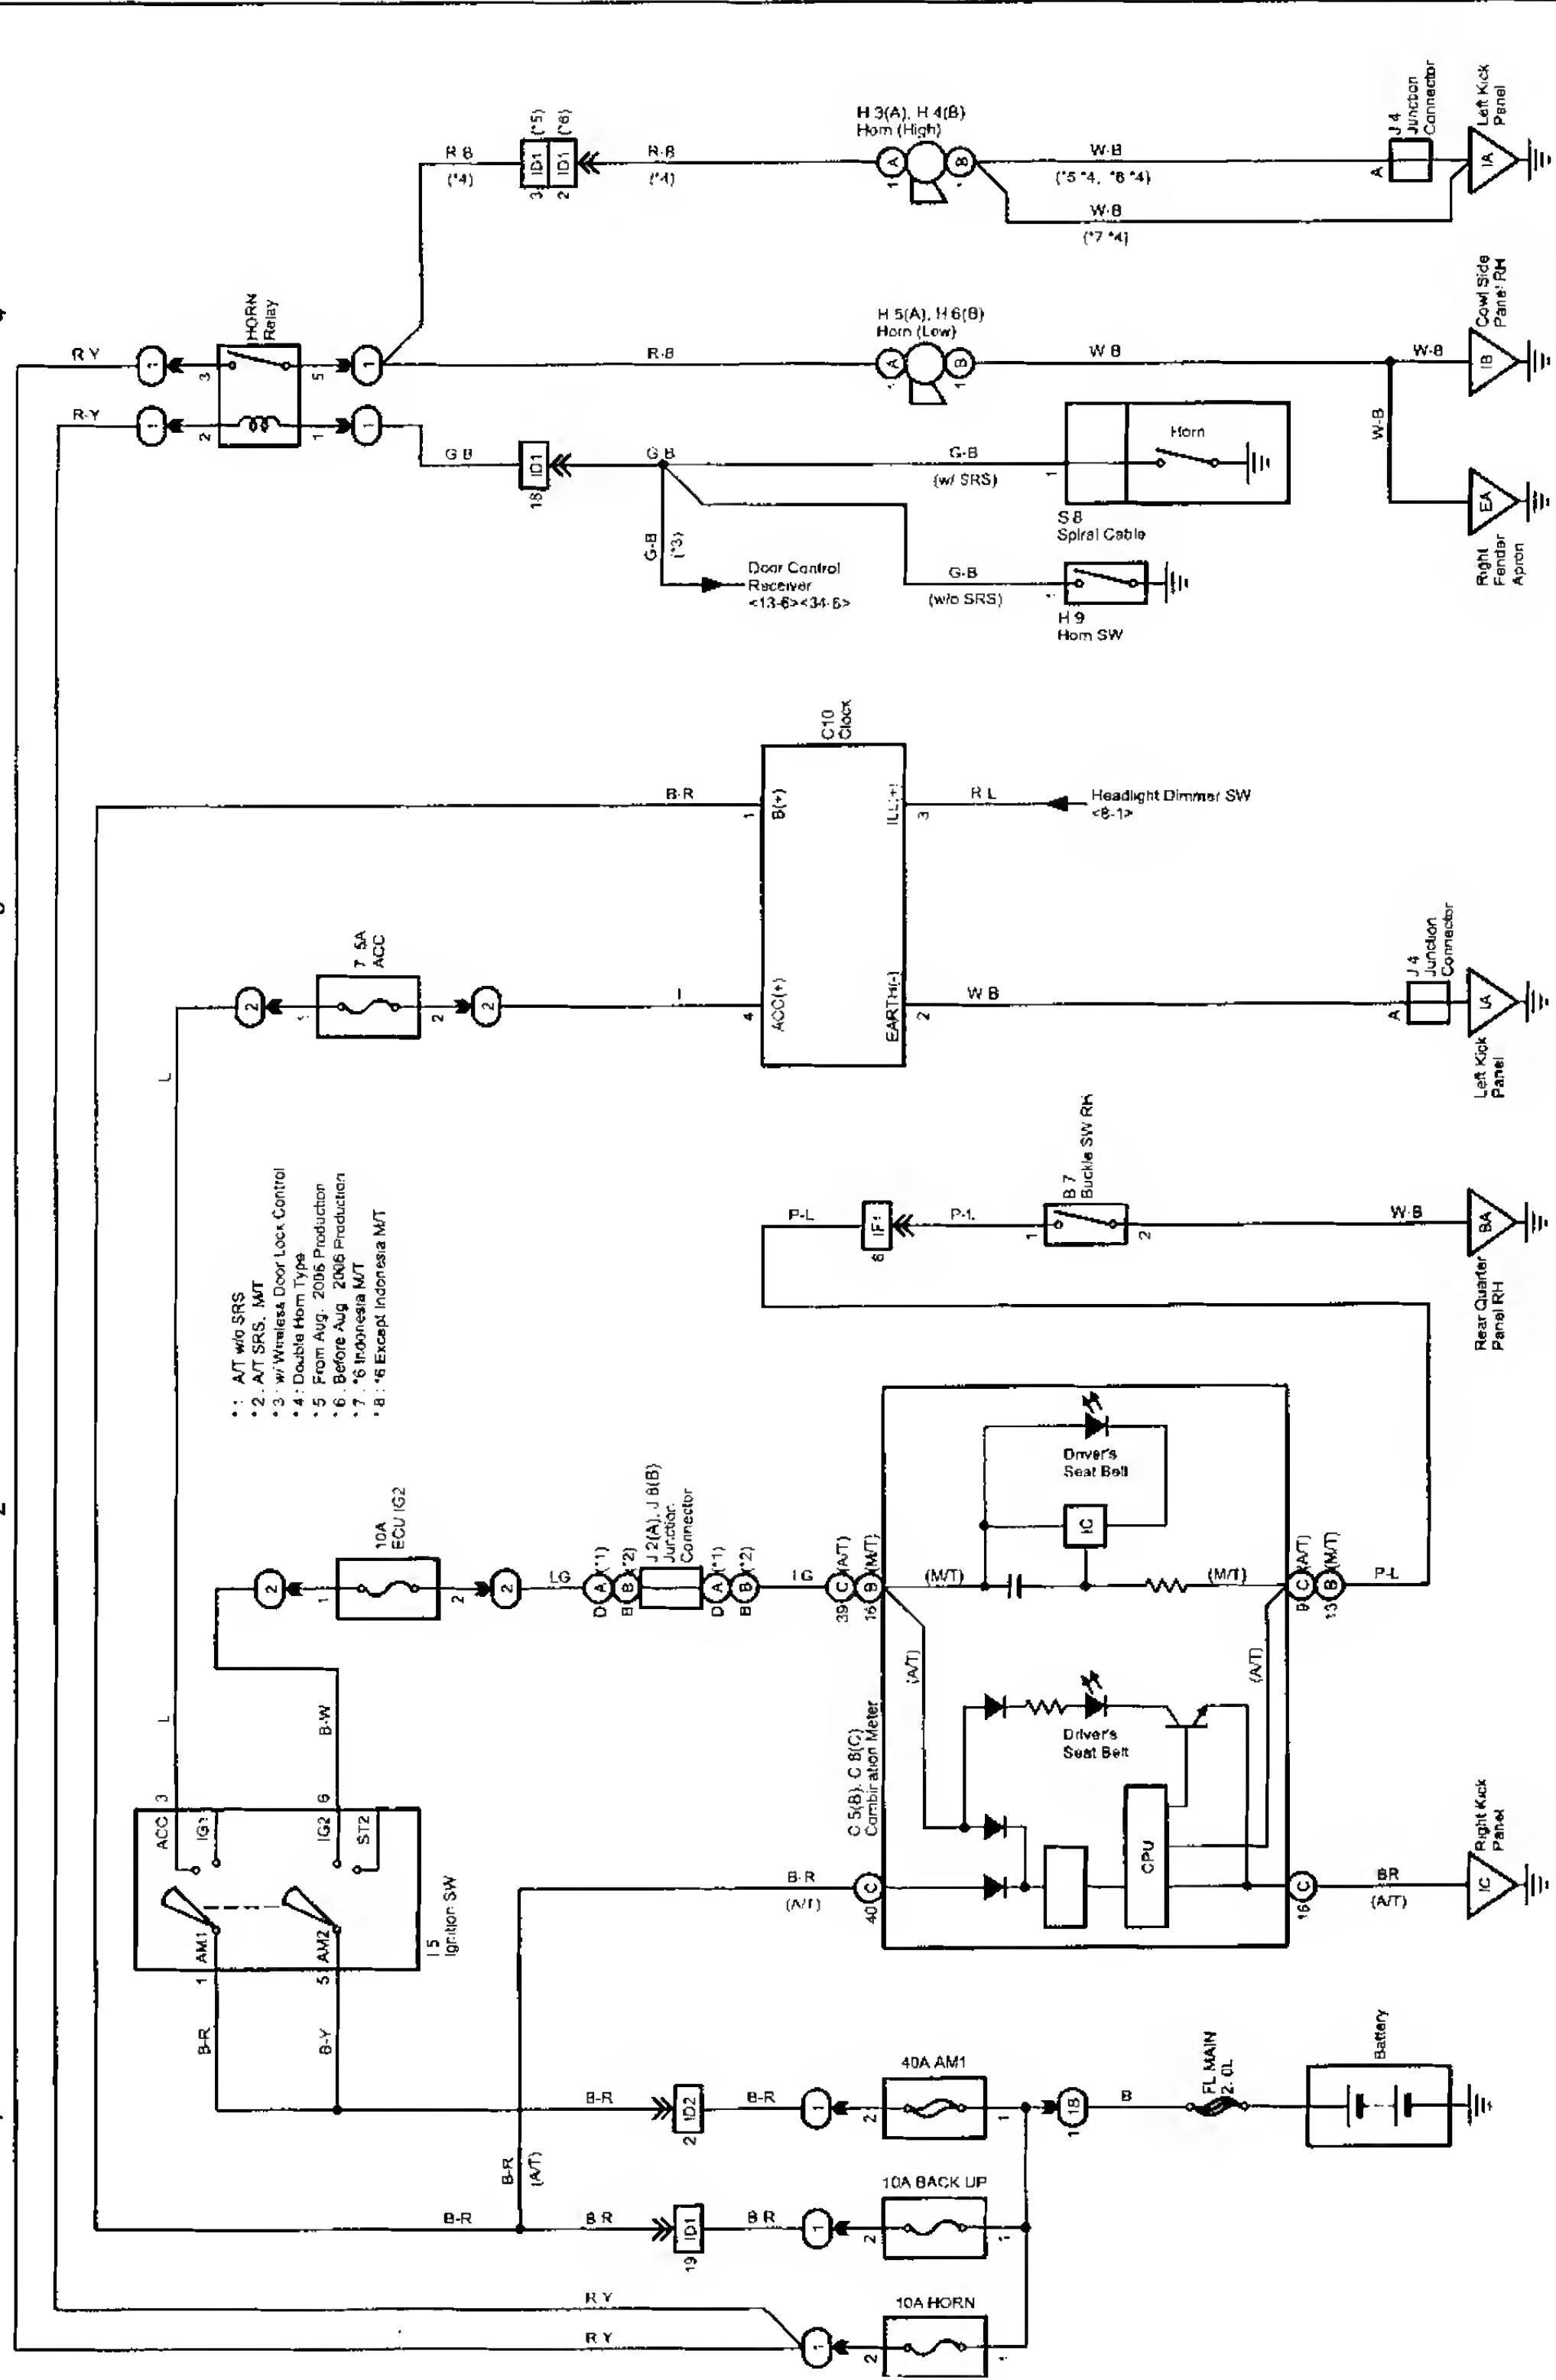

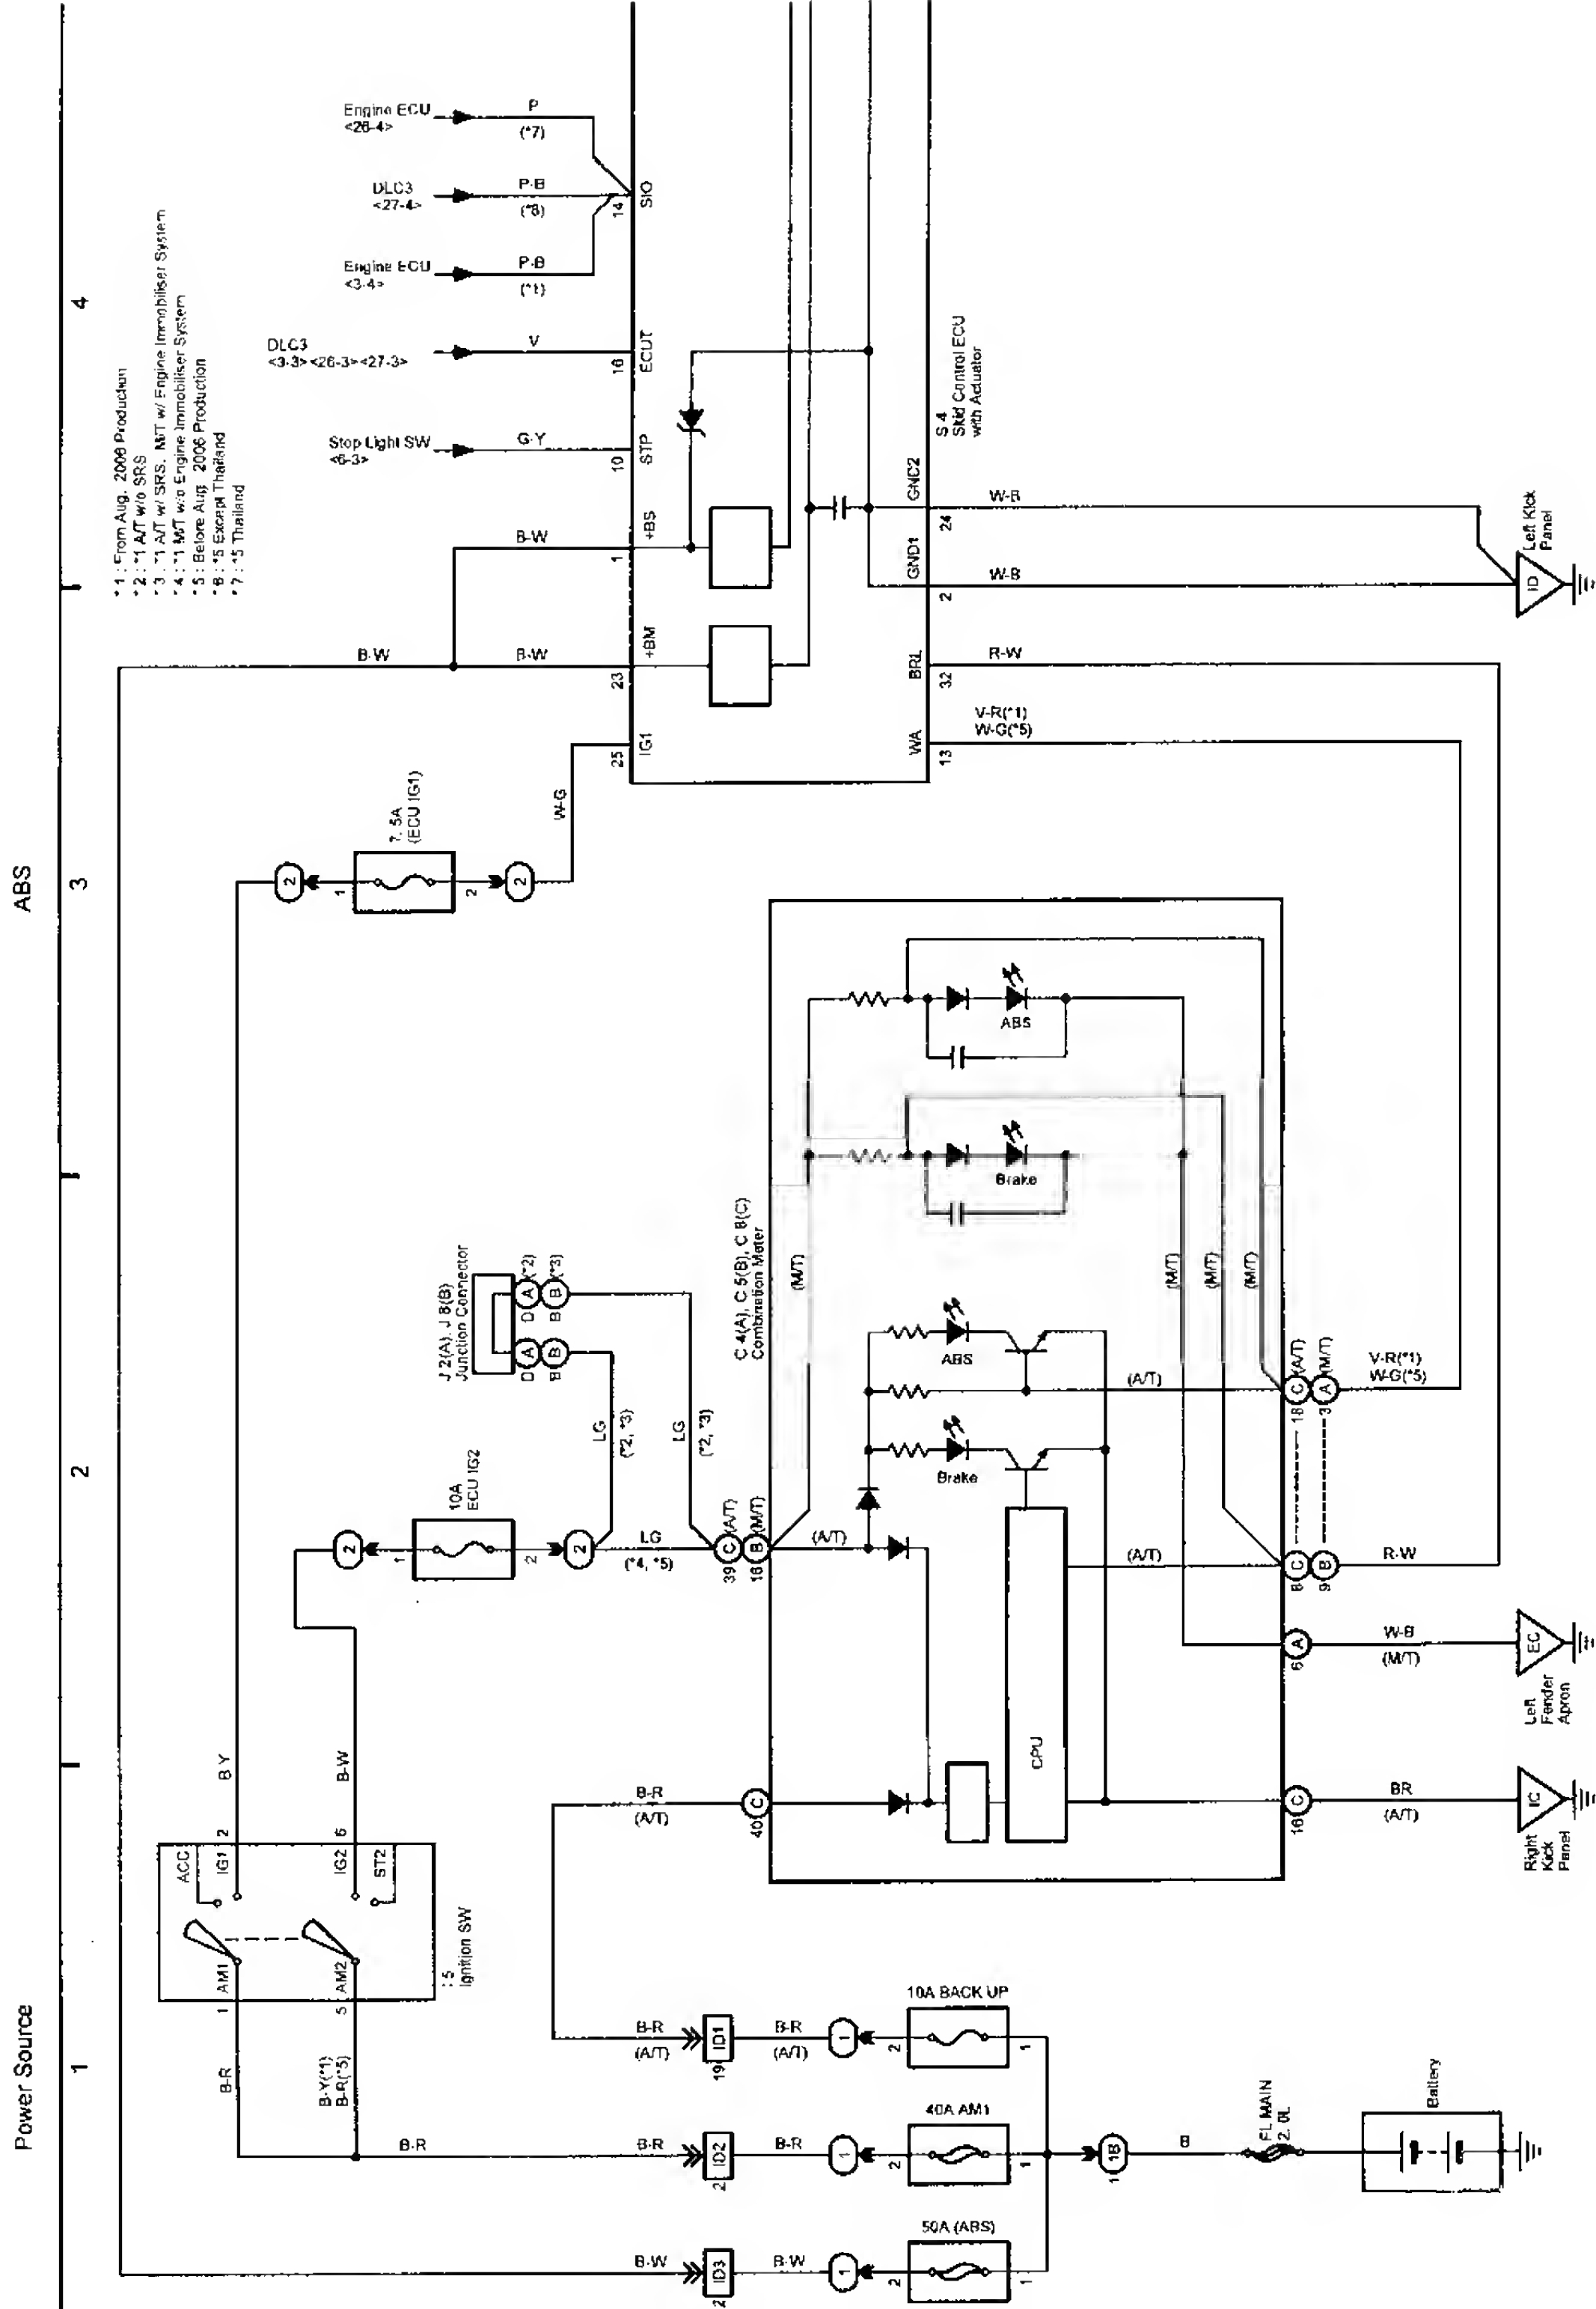

- *1 : From Aug. 2006 Production
- *2 : *1 AT w/o SRS
- *3 : *1 AT w/ SRS, MT w/ Engine Immobiliser System
- *4 : *1 MT w/o Engine Immobiliser System
- *5 : Before Aug. 2006 Production
- *6 : *5 Except Thailand
- *7 : *5 Thailand


ABS

8


7

6

5

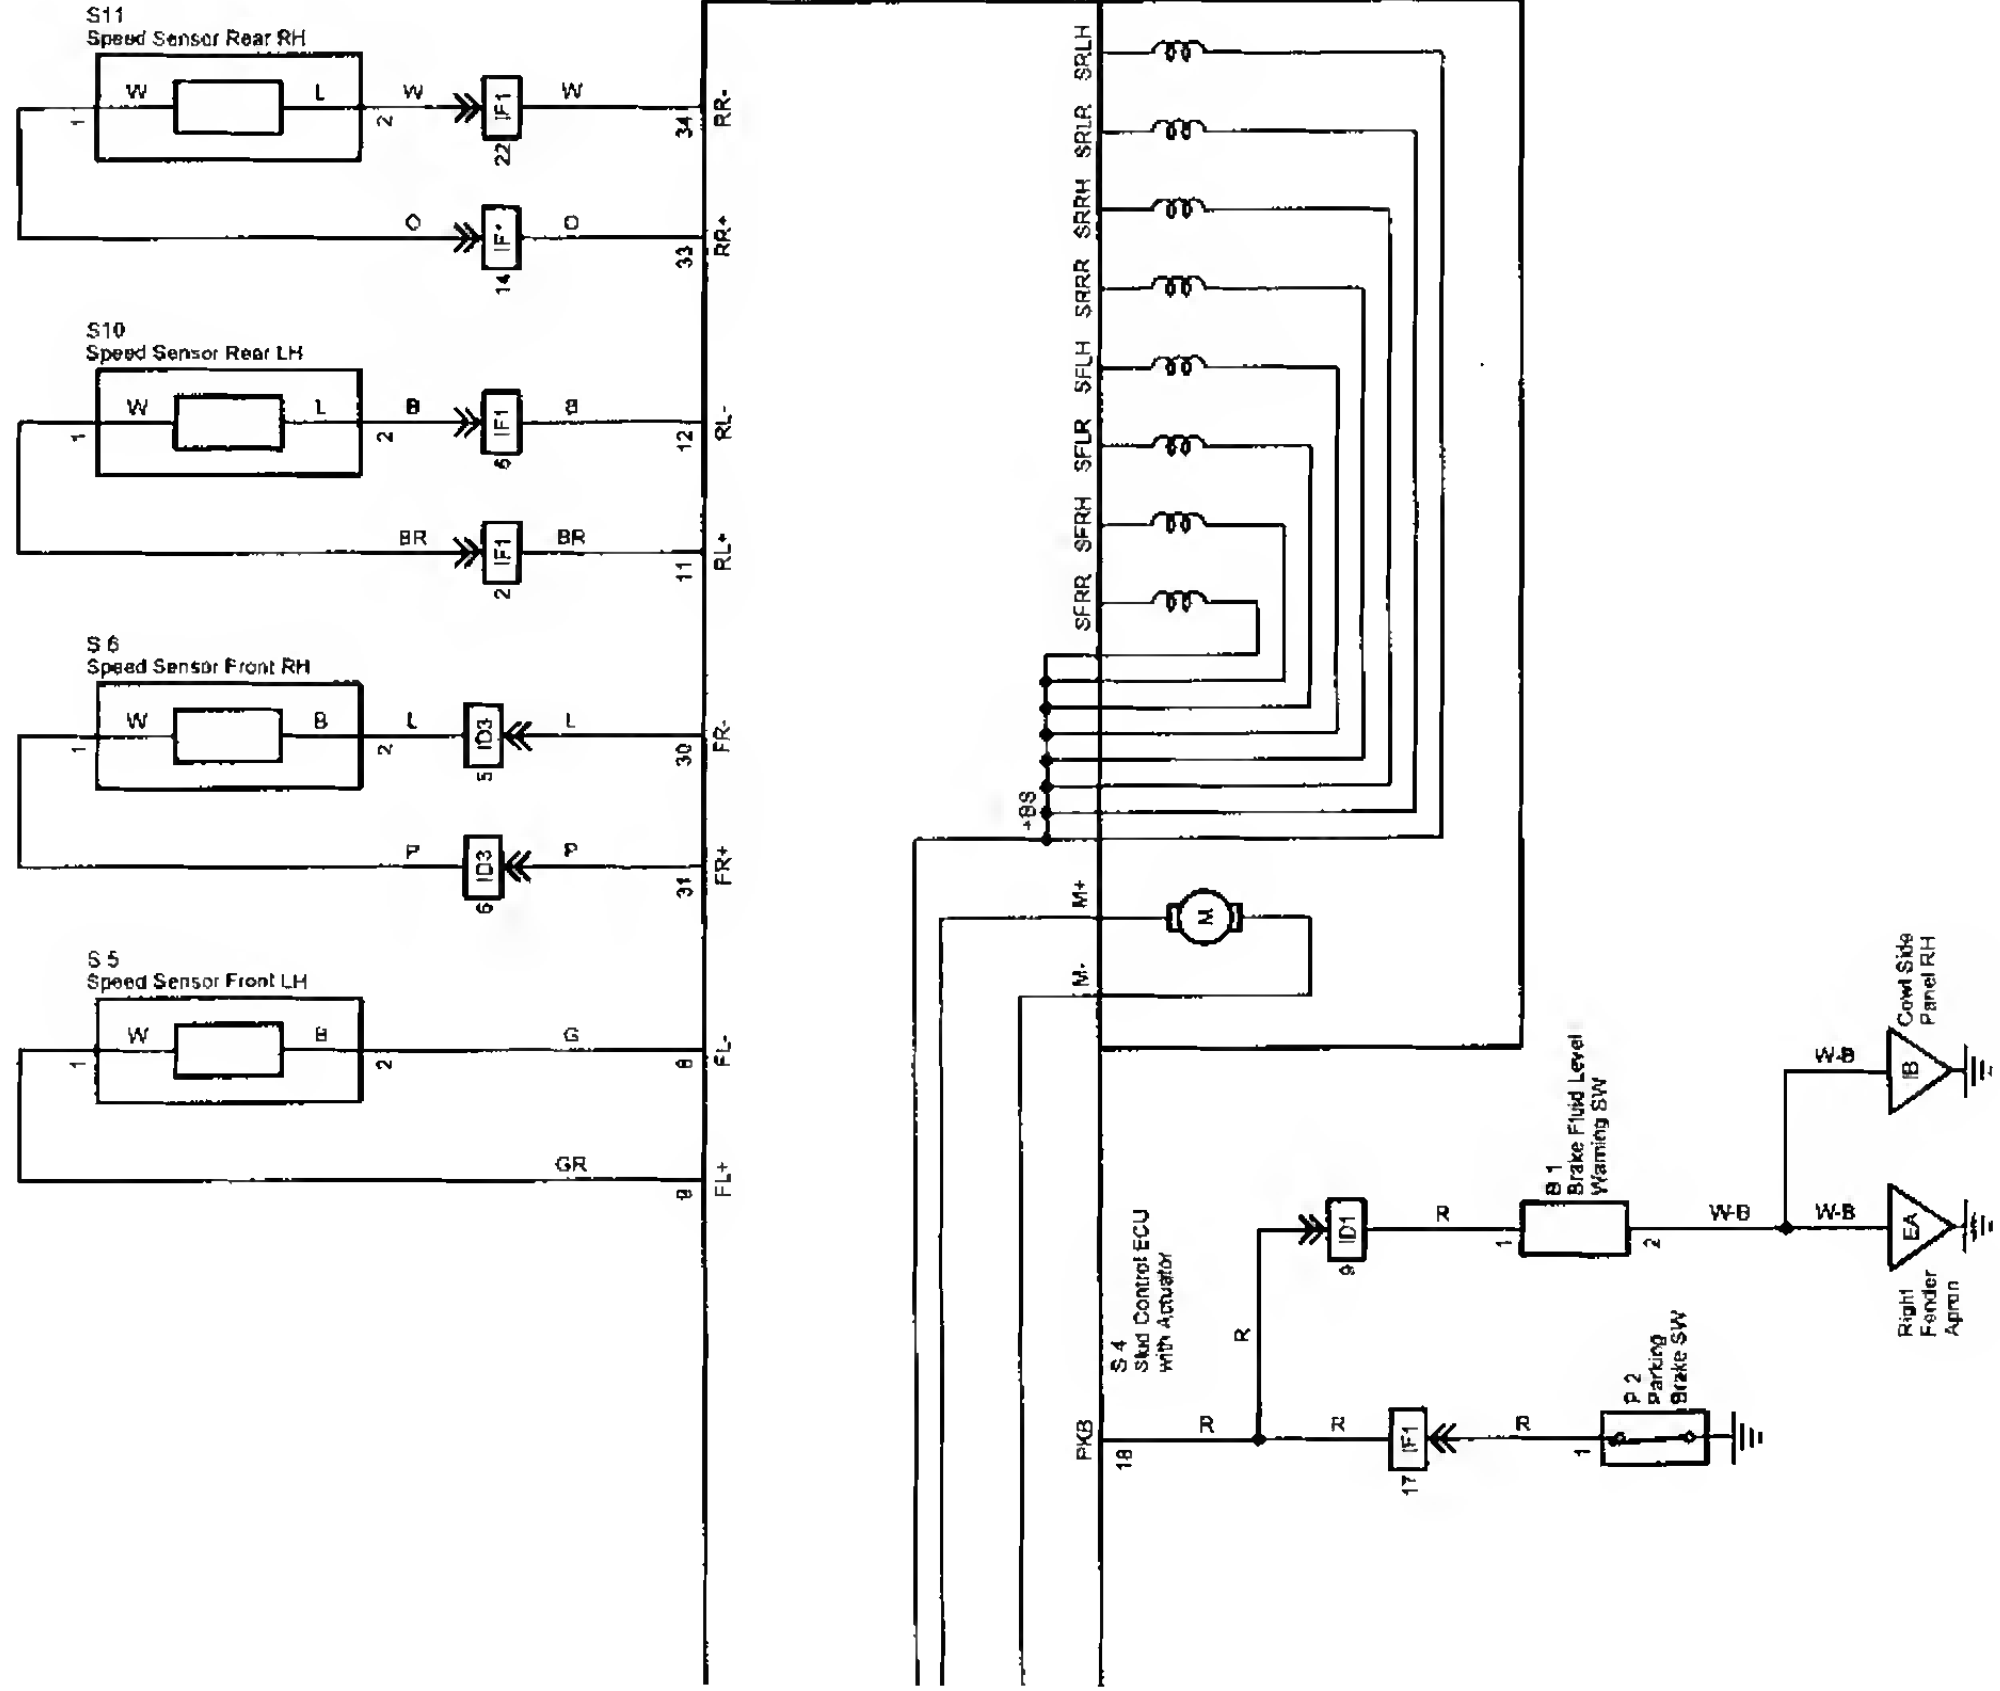


১৫৬

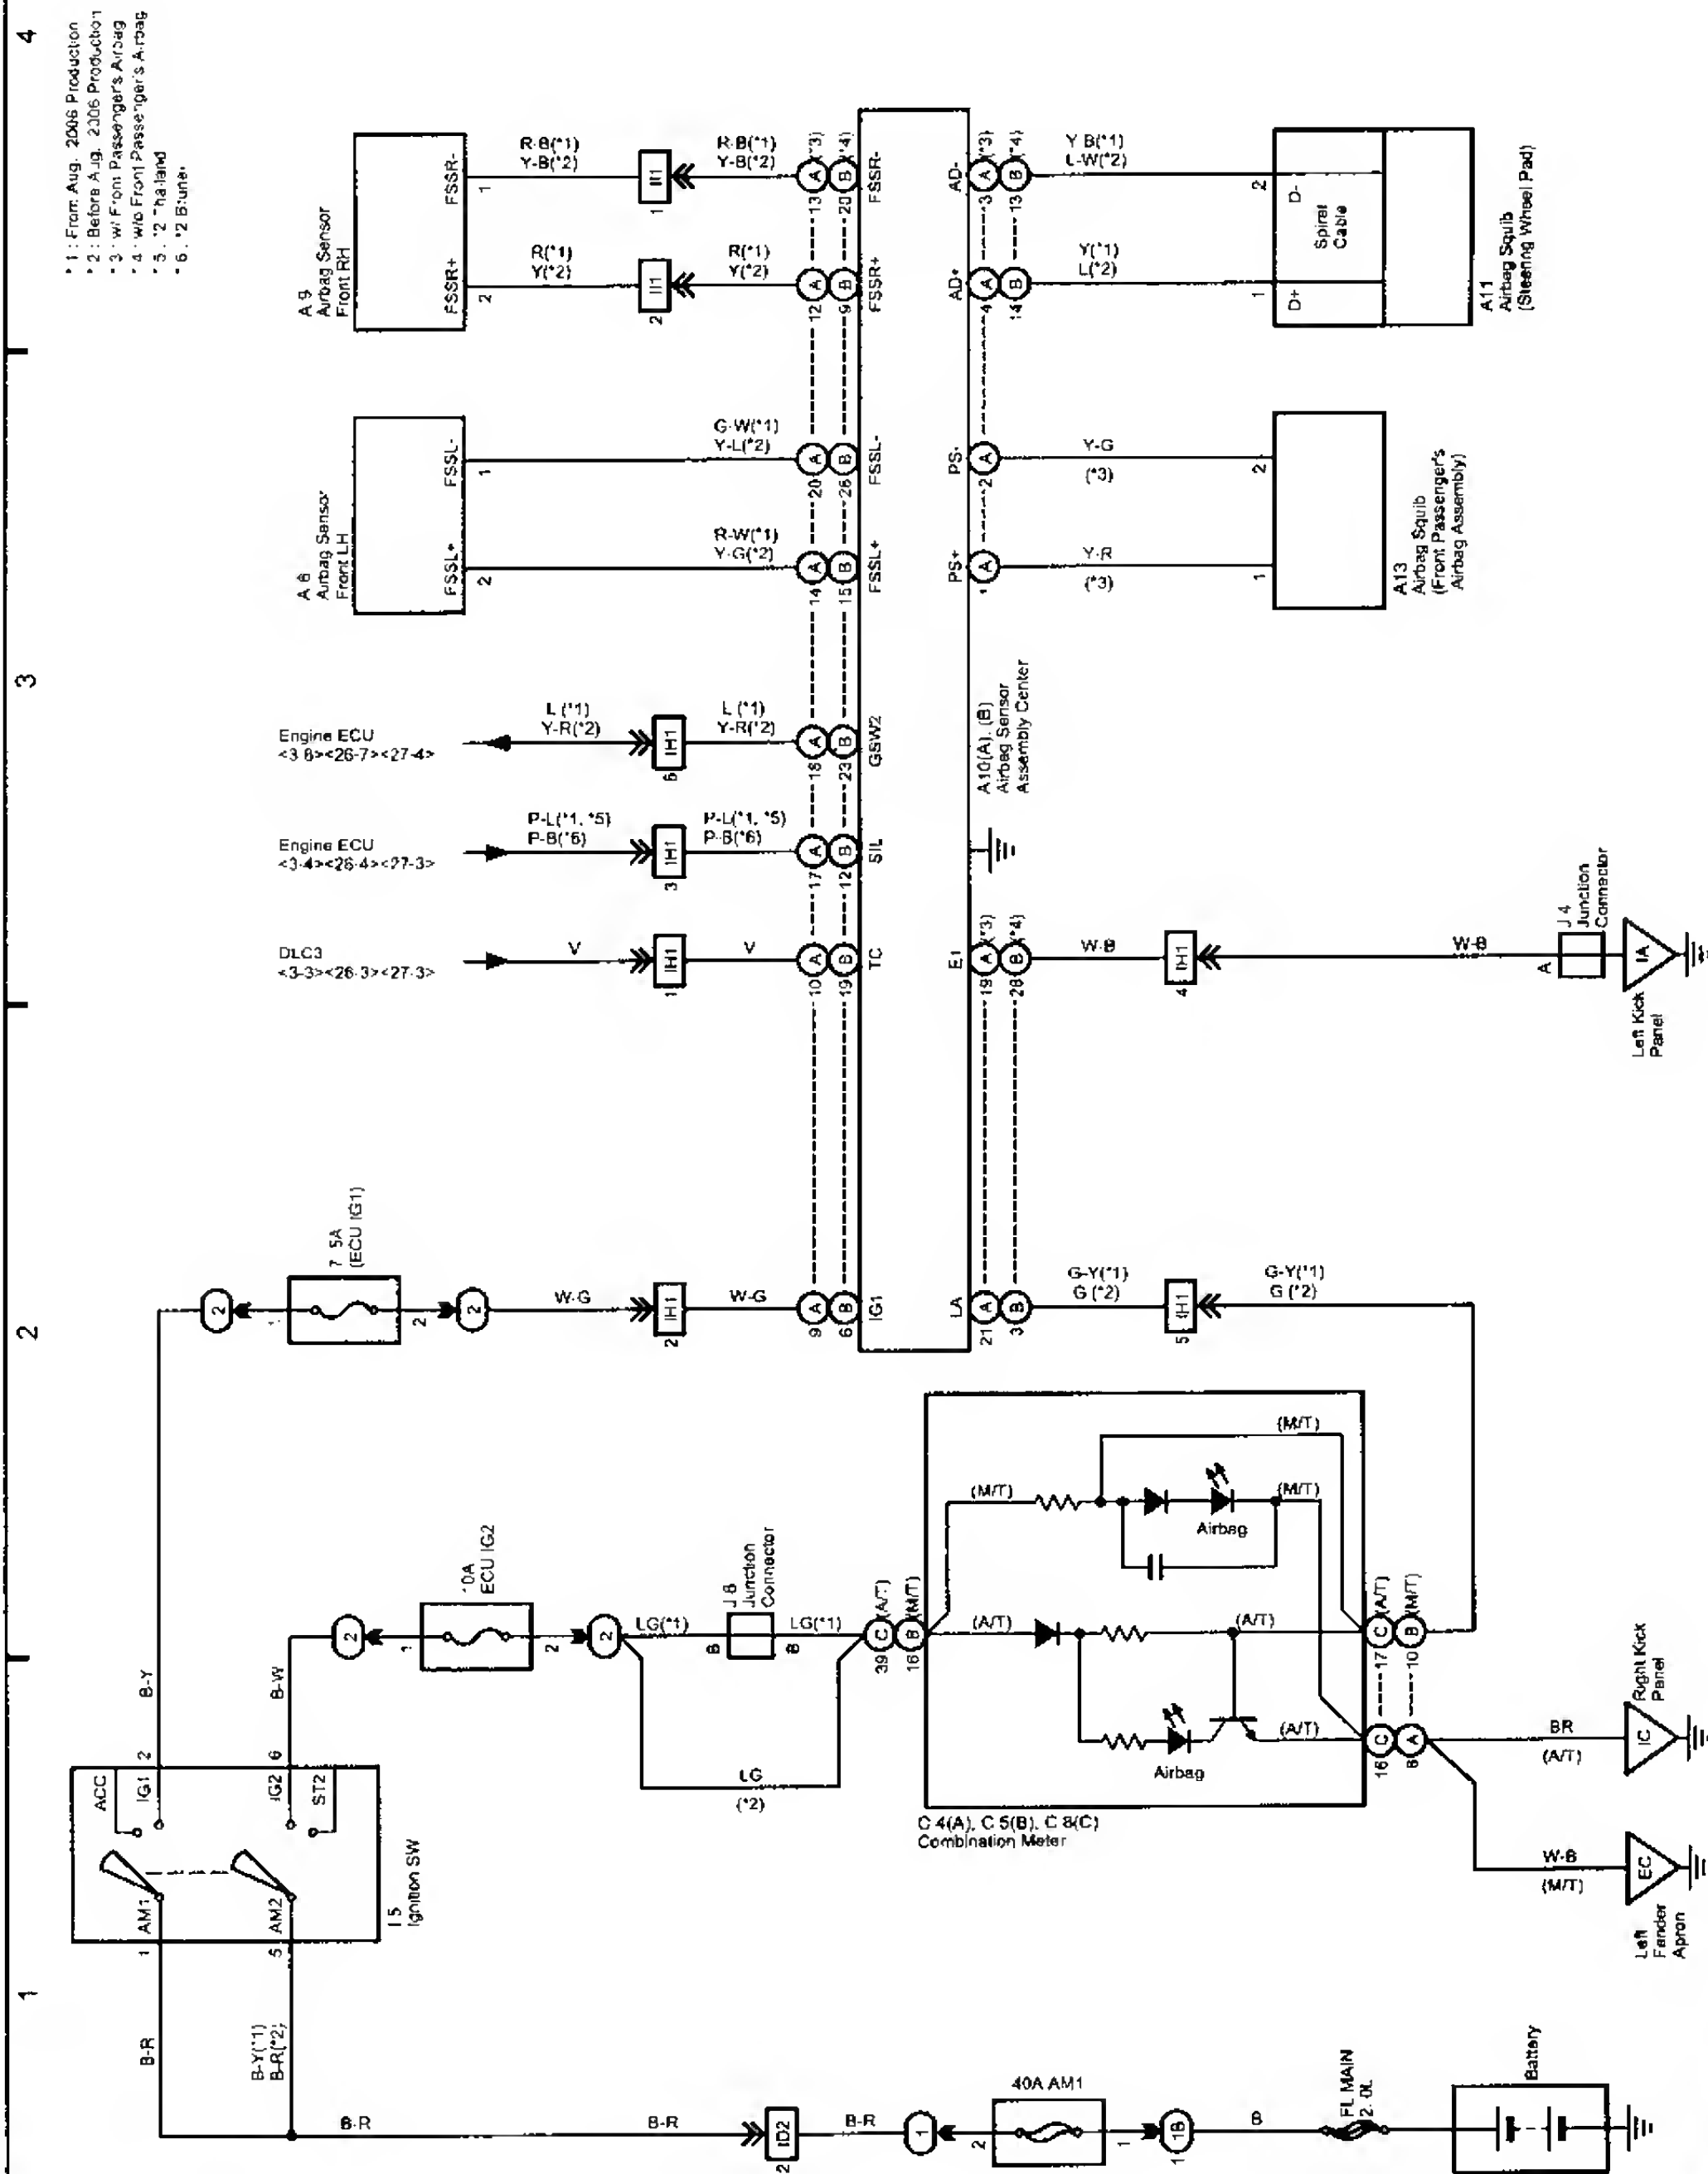

Door Lock Control (From Aug. 2006 Production)

- * 1. w/ Wireless Door Lock Control
 * 2. w/o Wireless Door Lock Control
 * 3. Except Indonesia, Brunei

Power Source

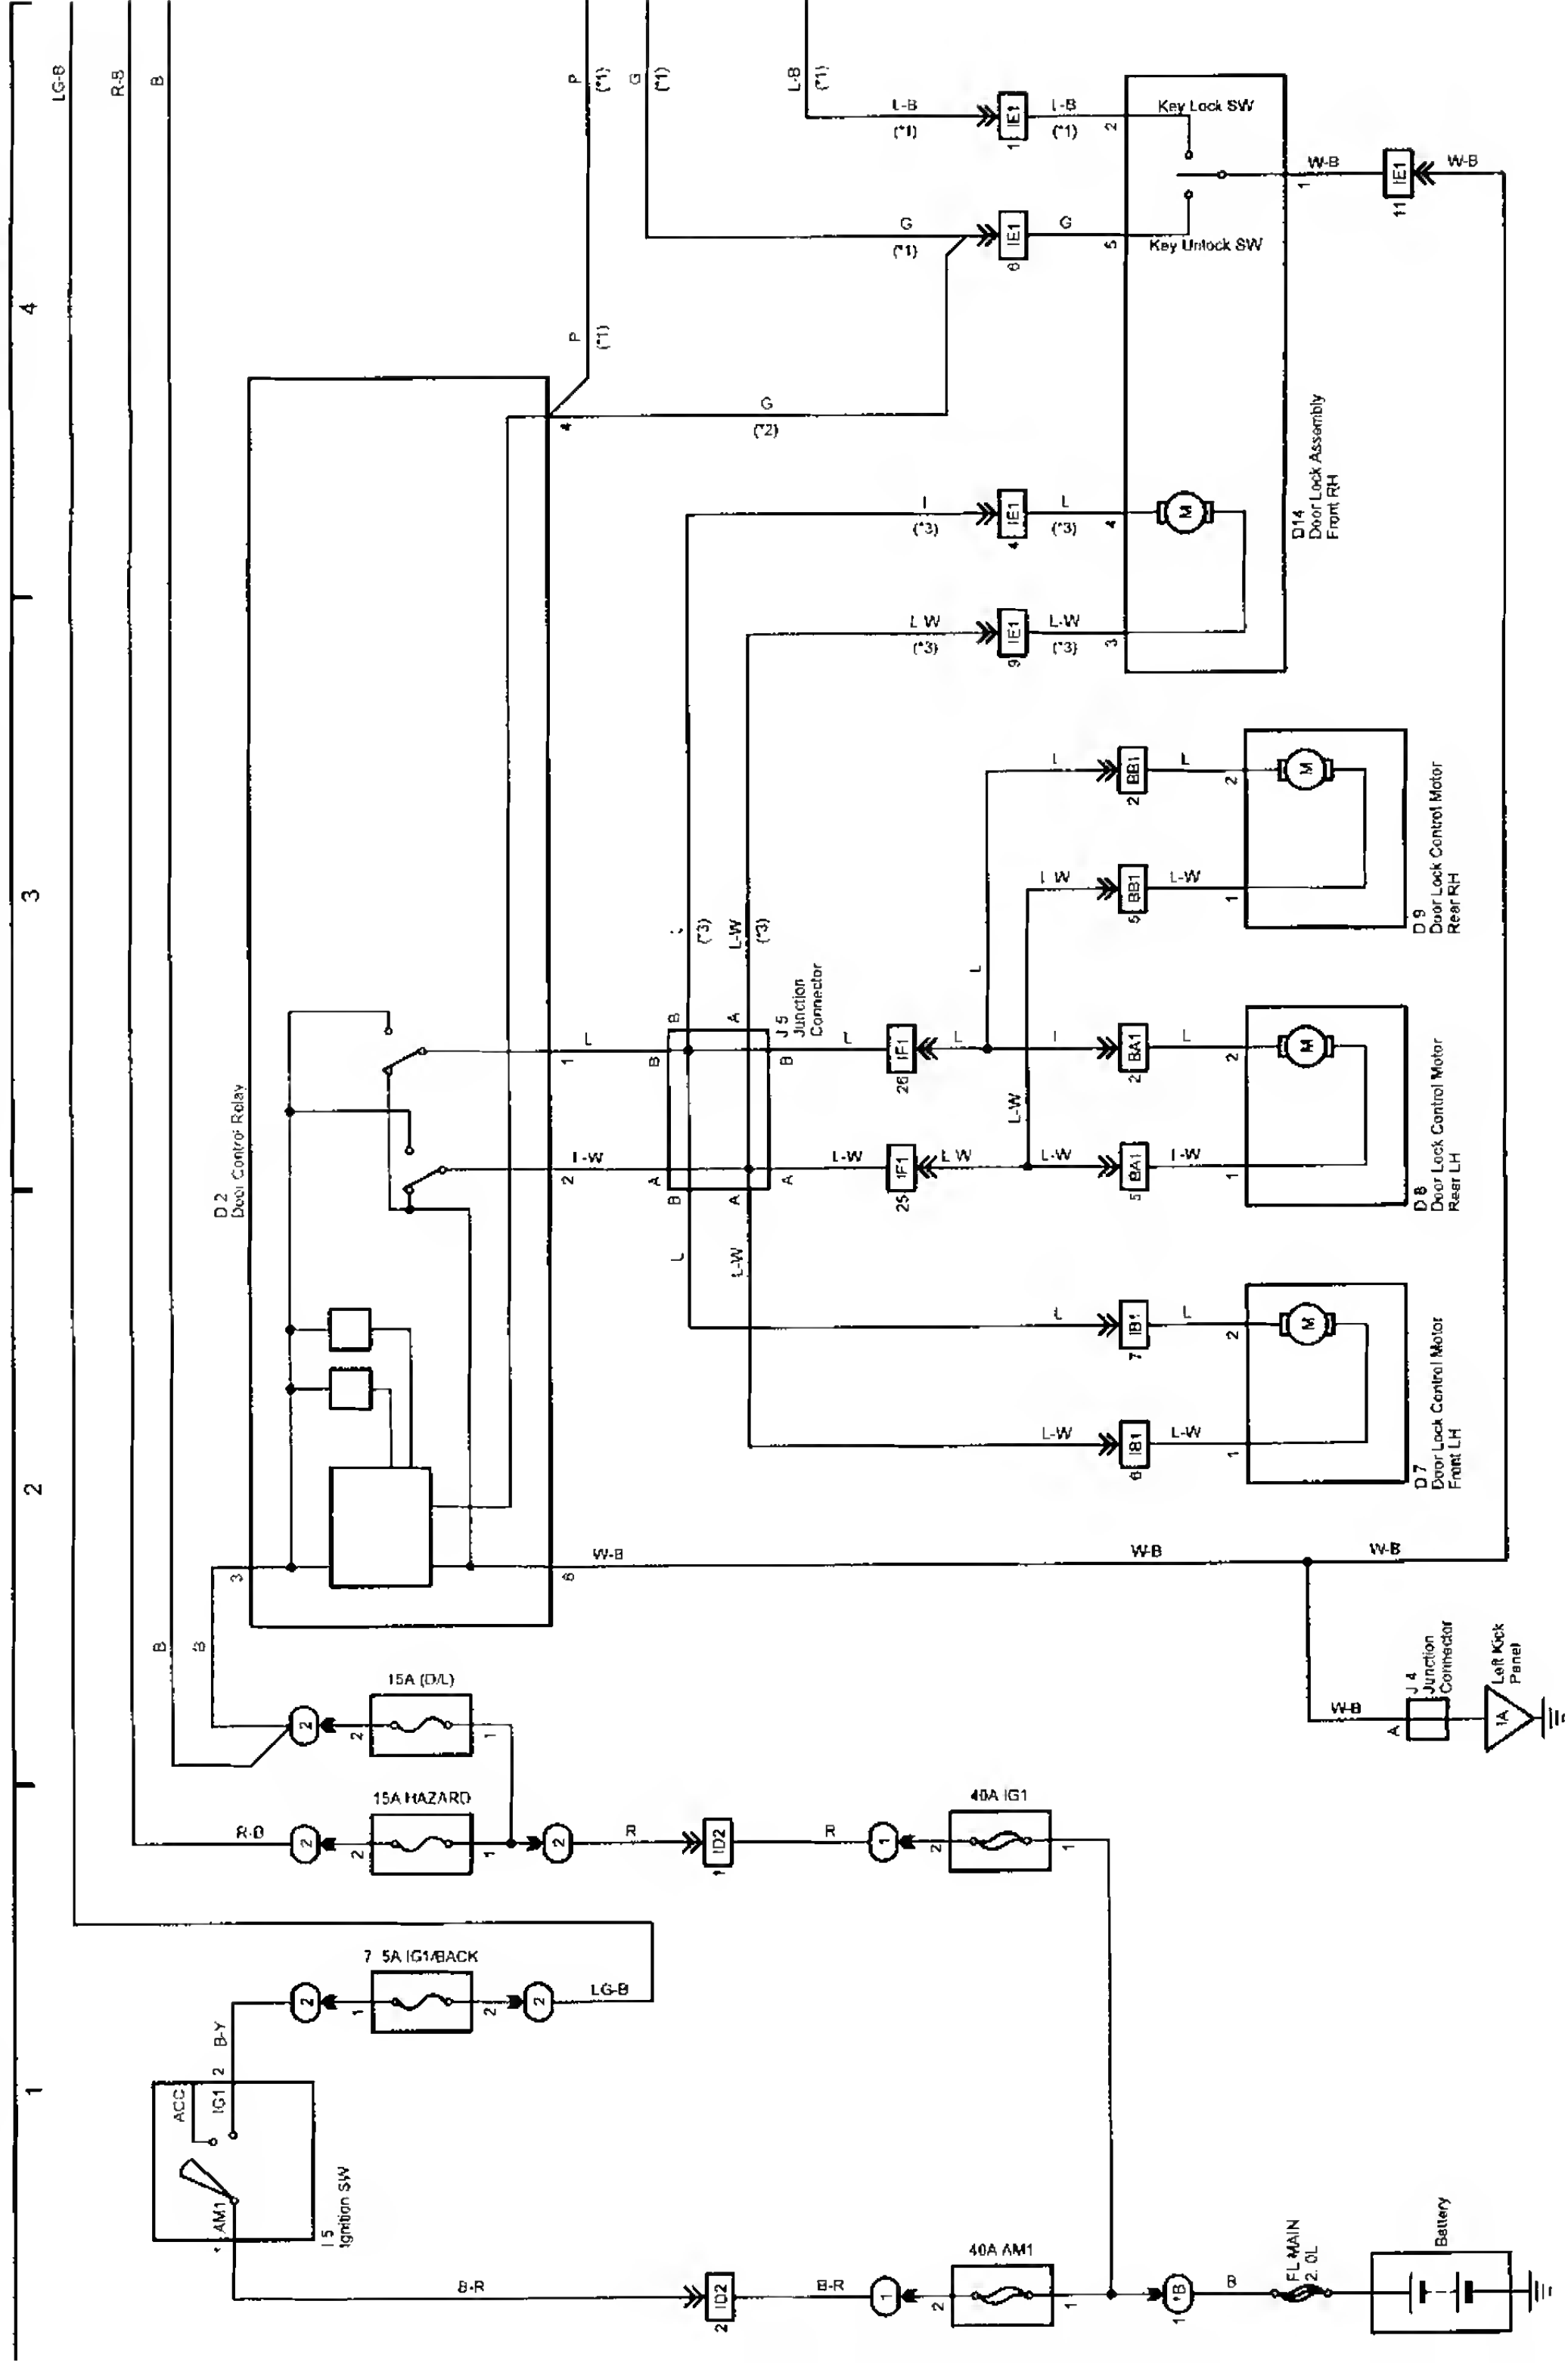

Wireless Door Lock Control (From Aug. 2006 Production)


* 1 : w/ Wireless Door Lock Control
 * 4 : w/ Engine Immobilizer System
 * 5 : w/o Engine Immobilizer System

8


7

6

5

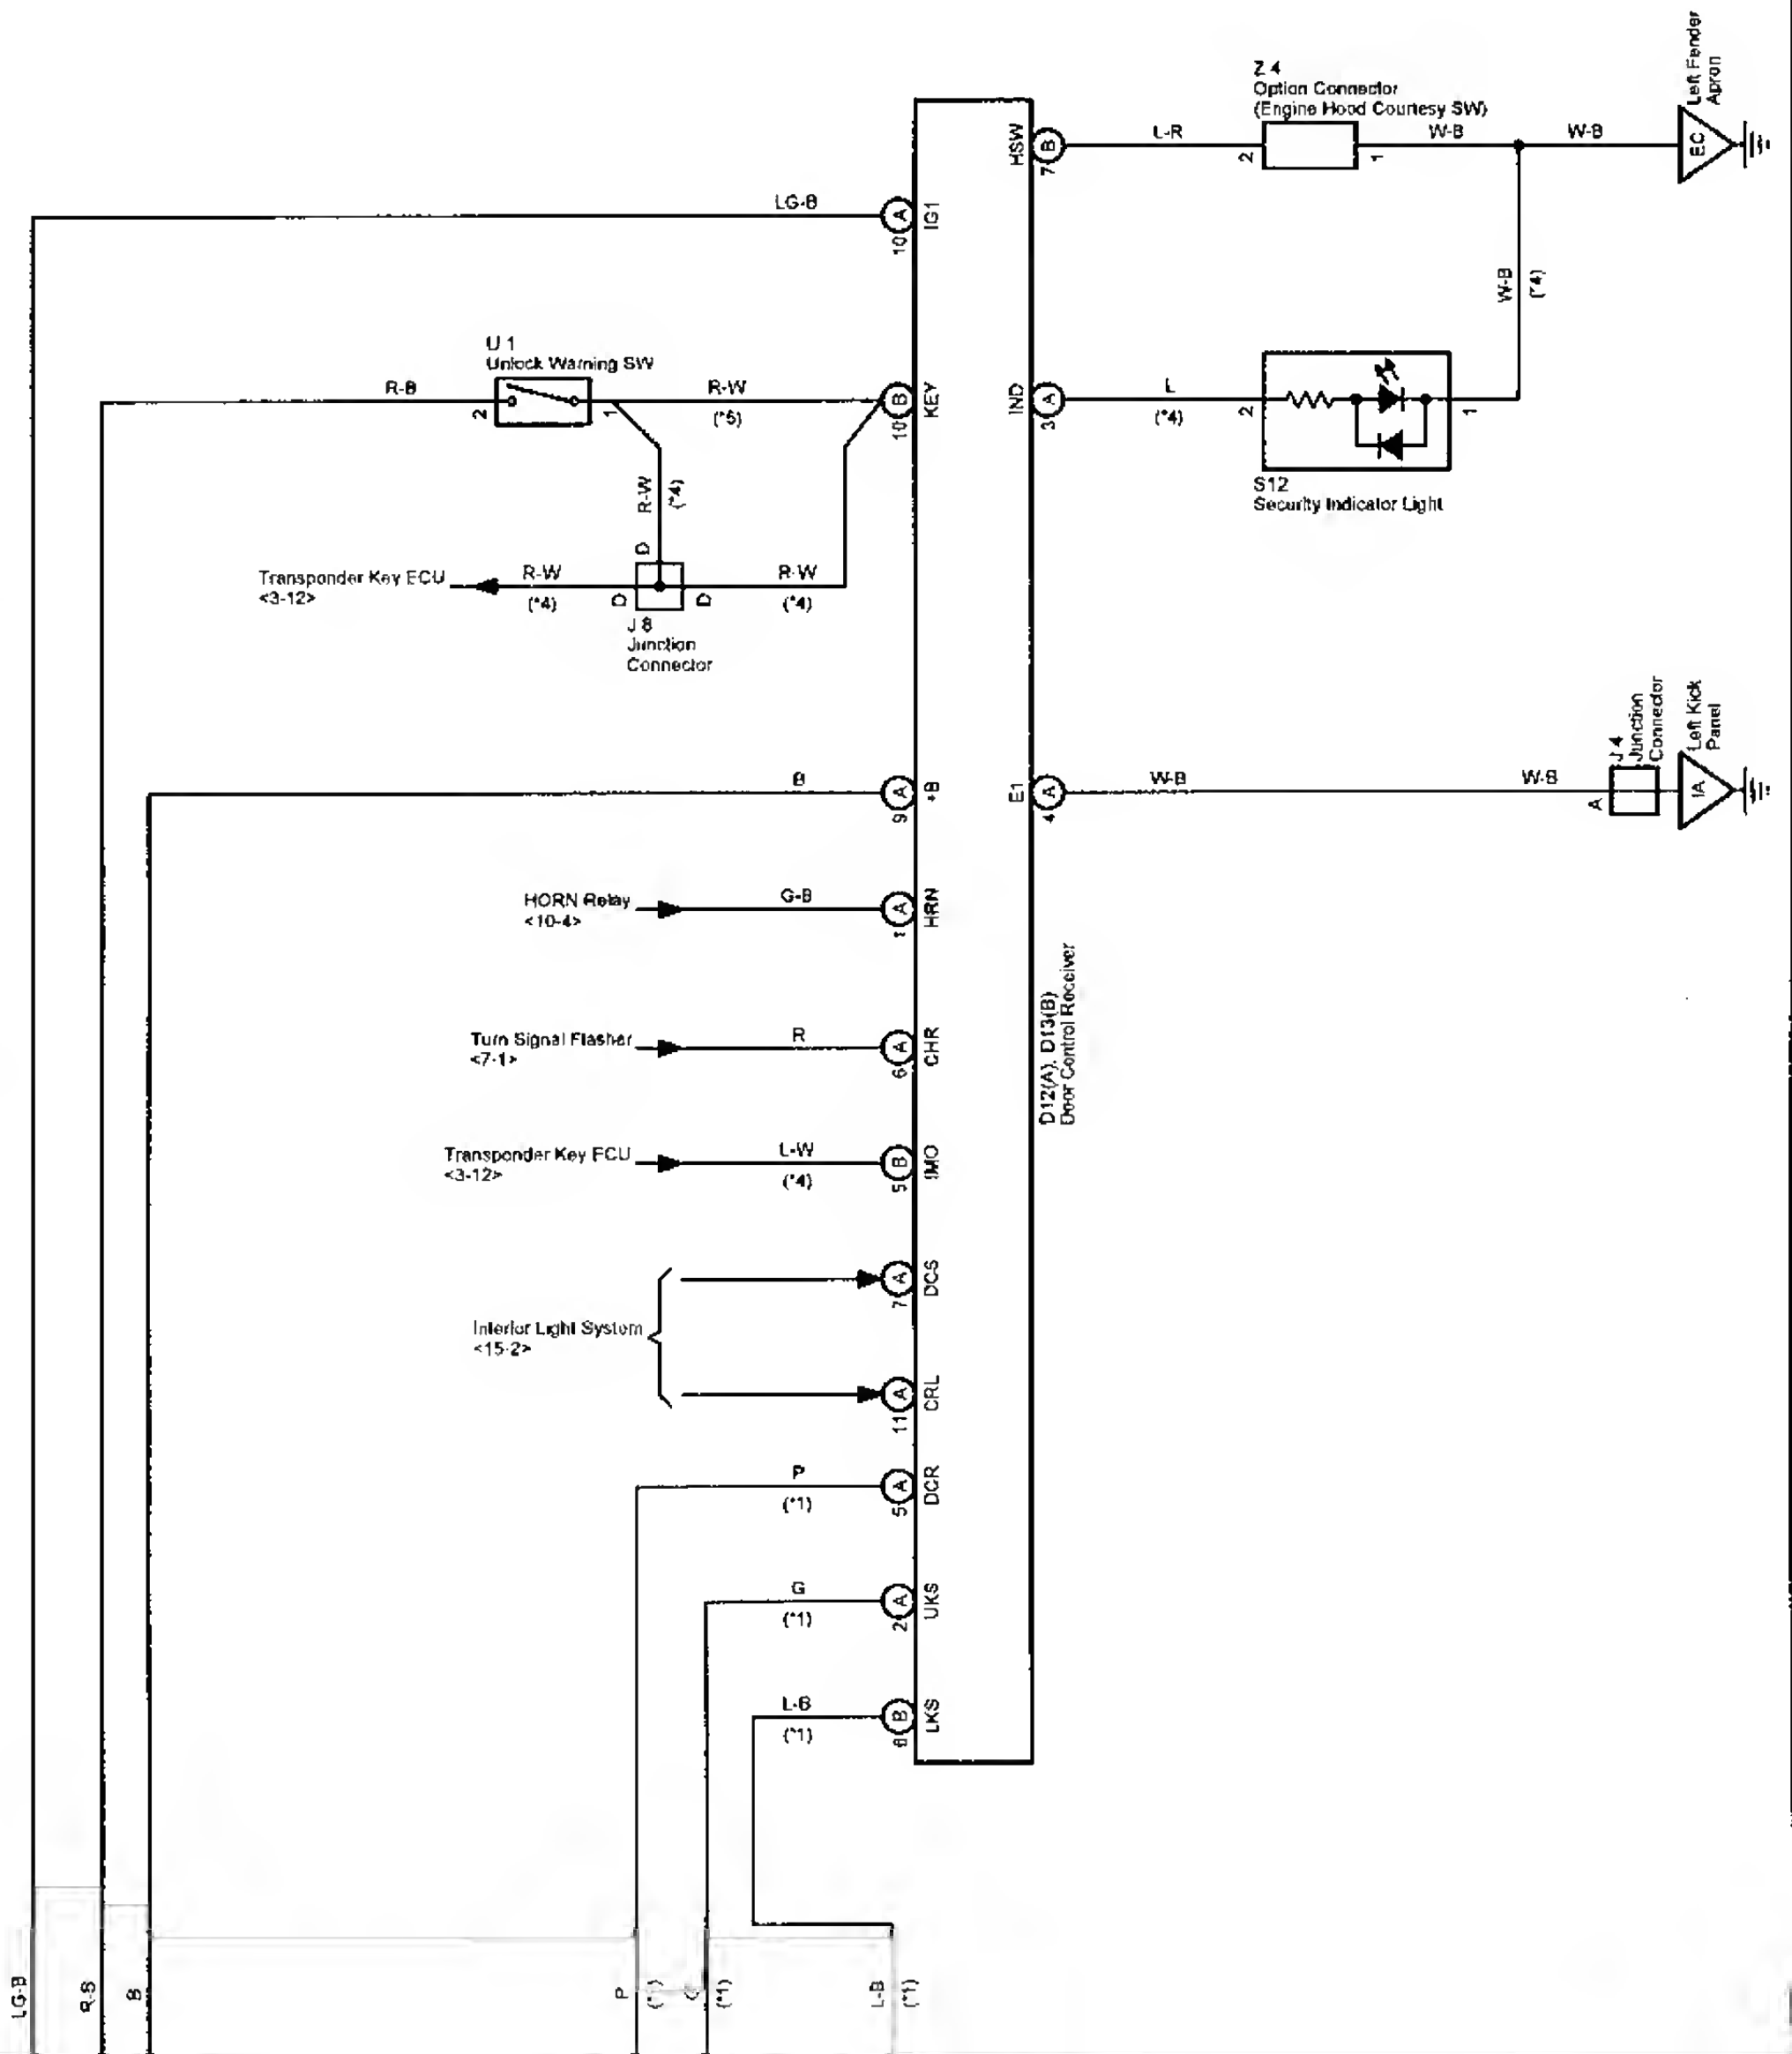

Power Source

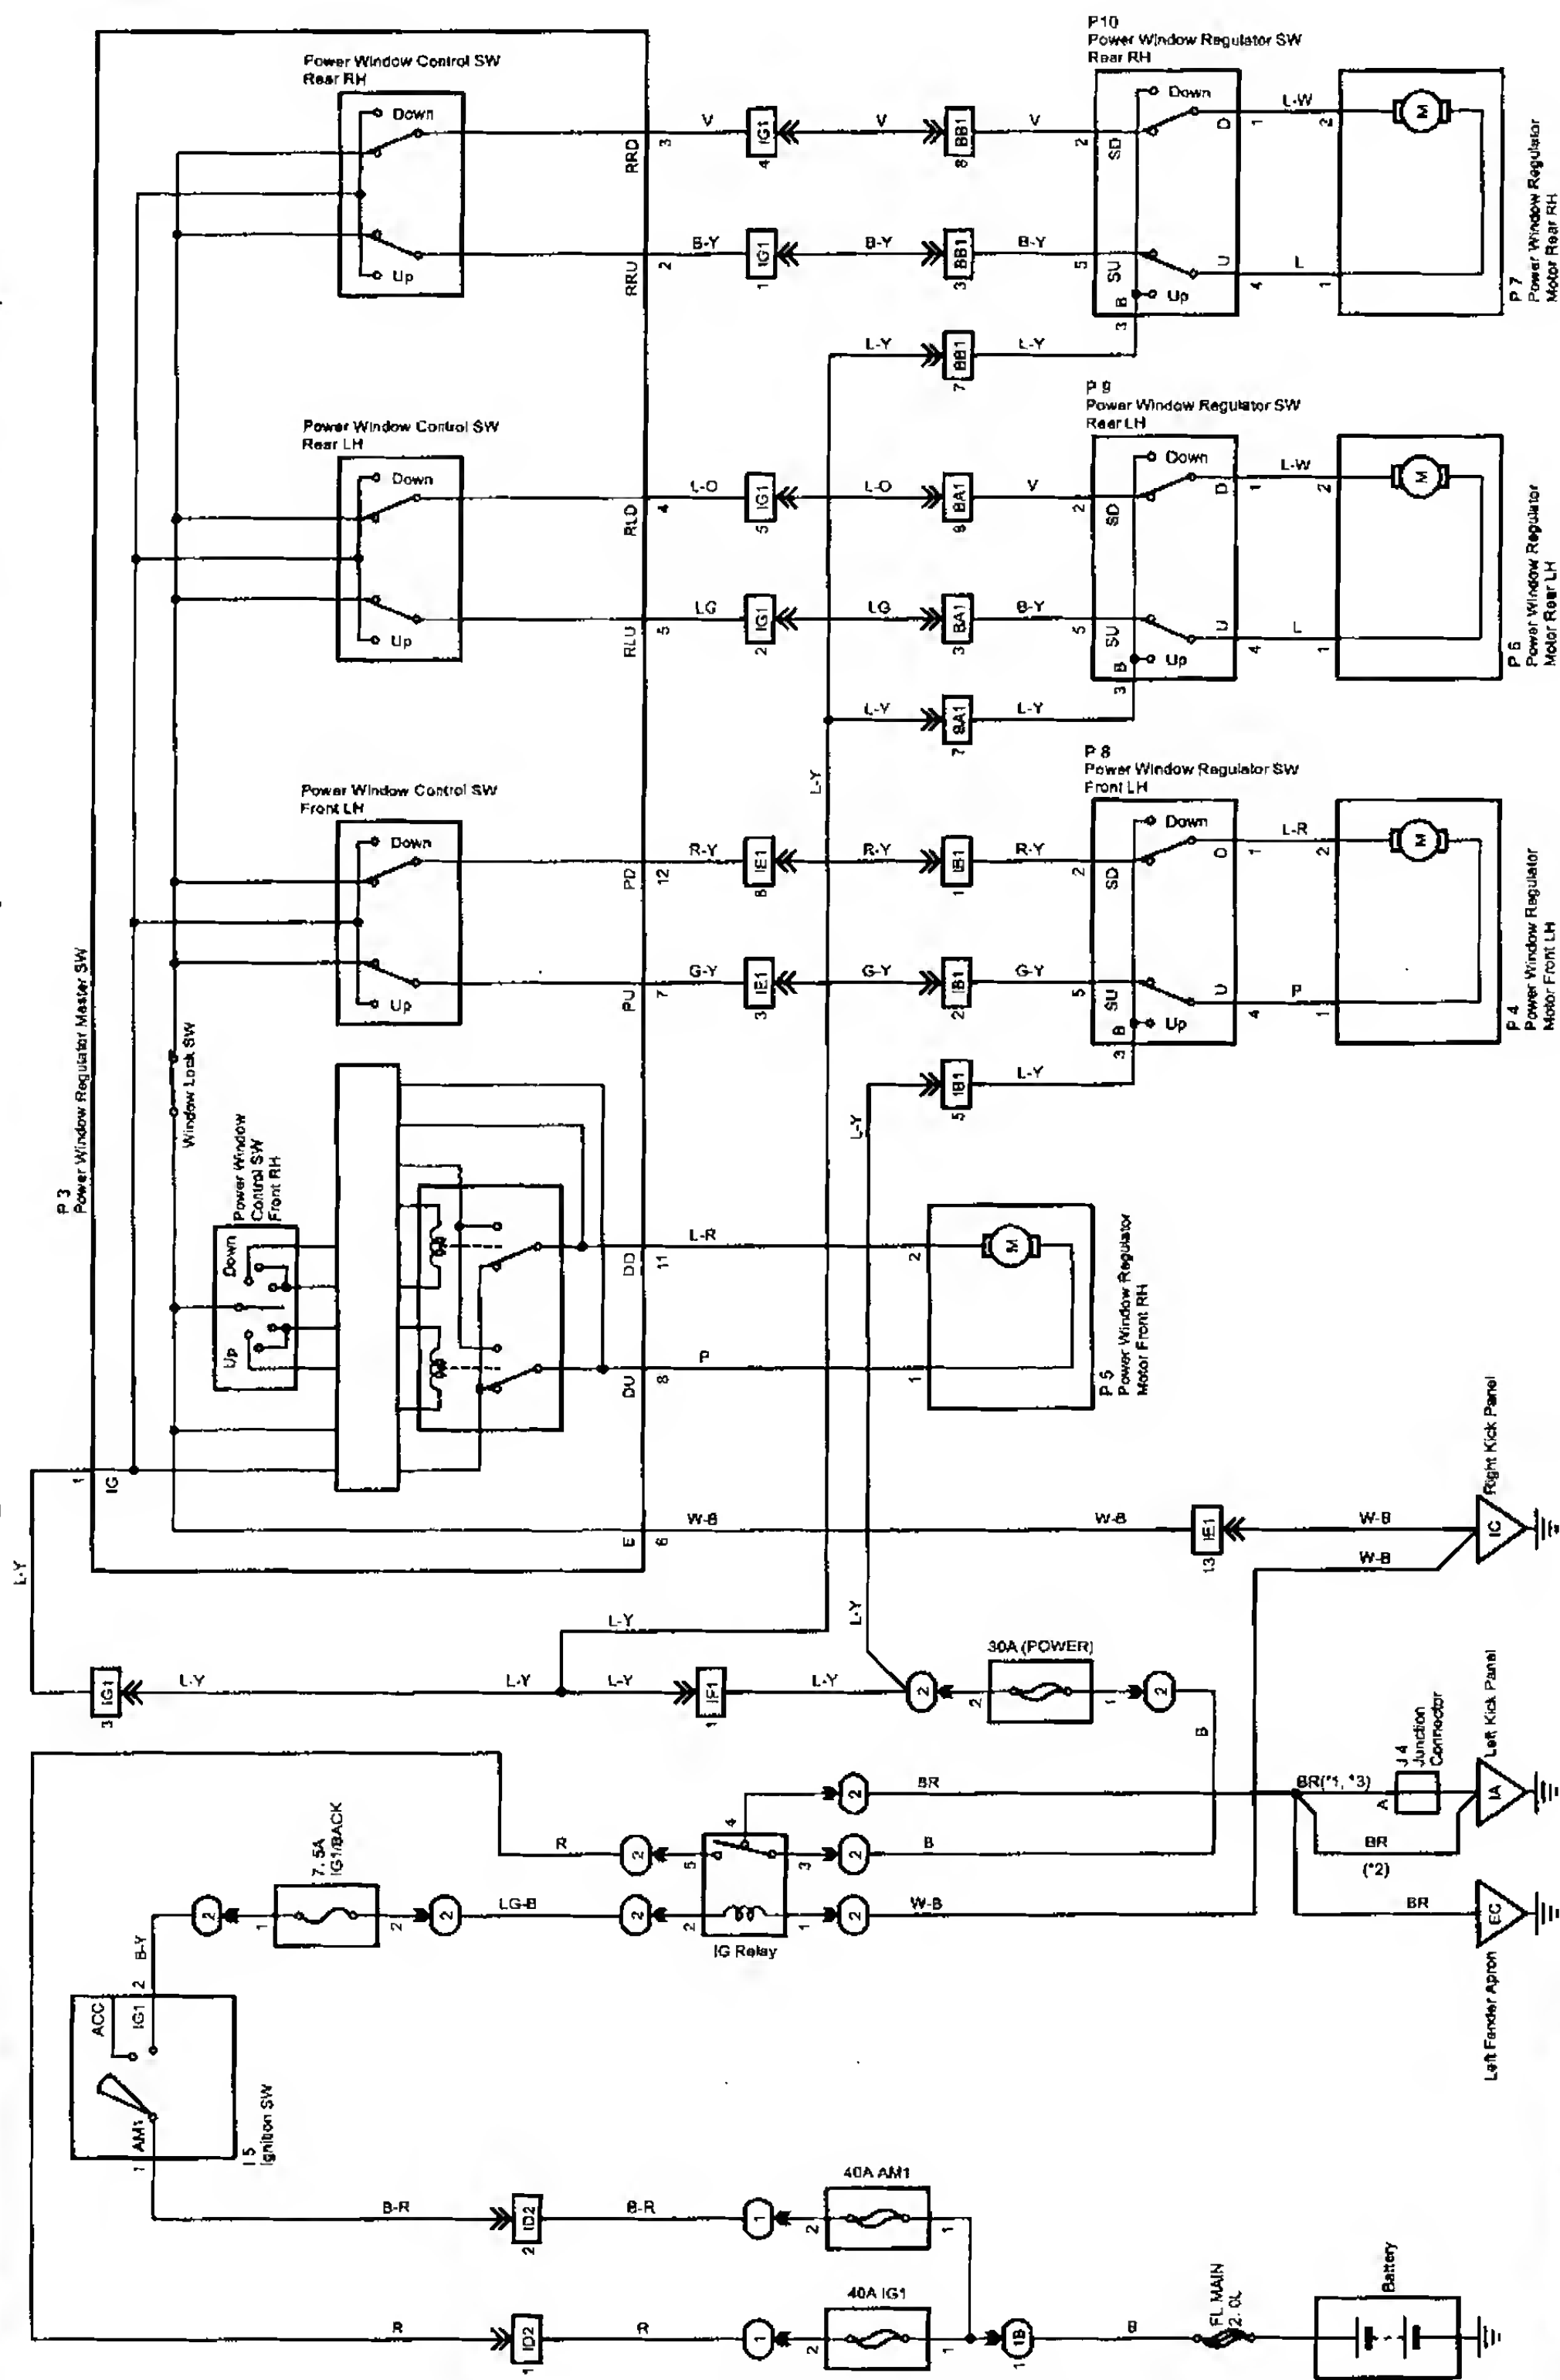

Power Source

Interior Light (From Aug. 2006 Production)


Radiator Fan

1

2

3

4

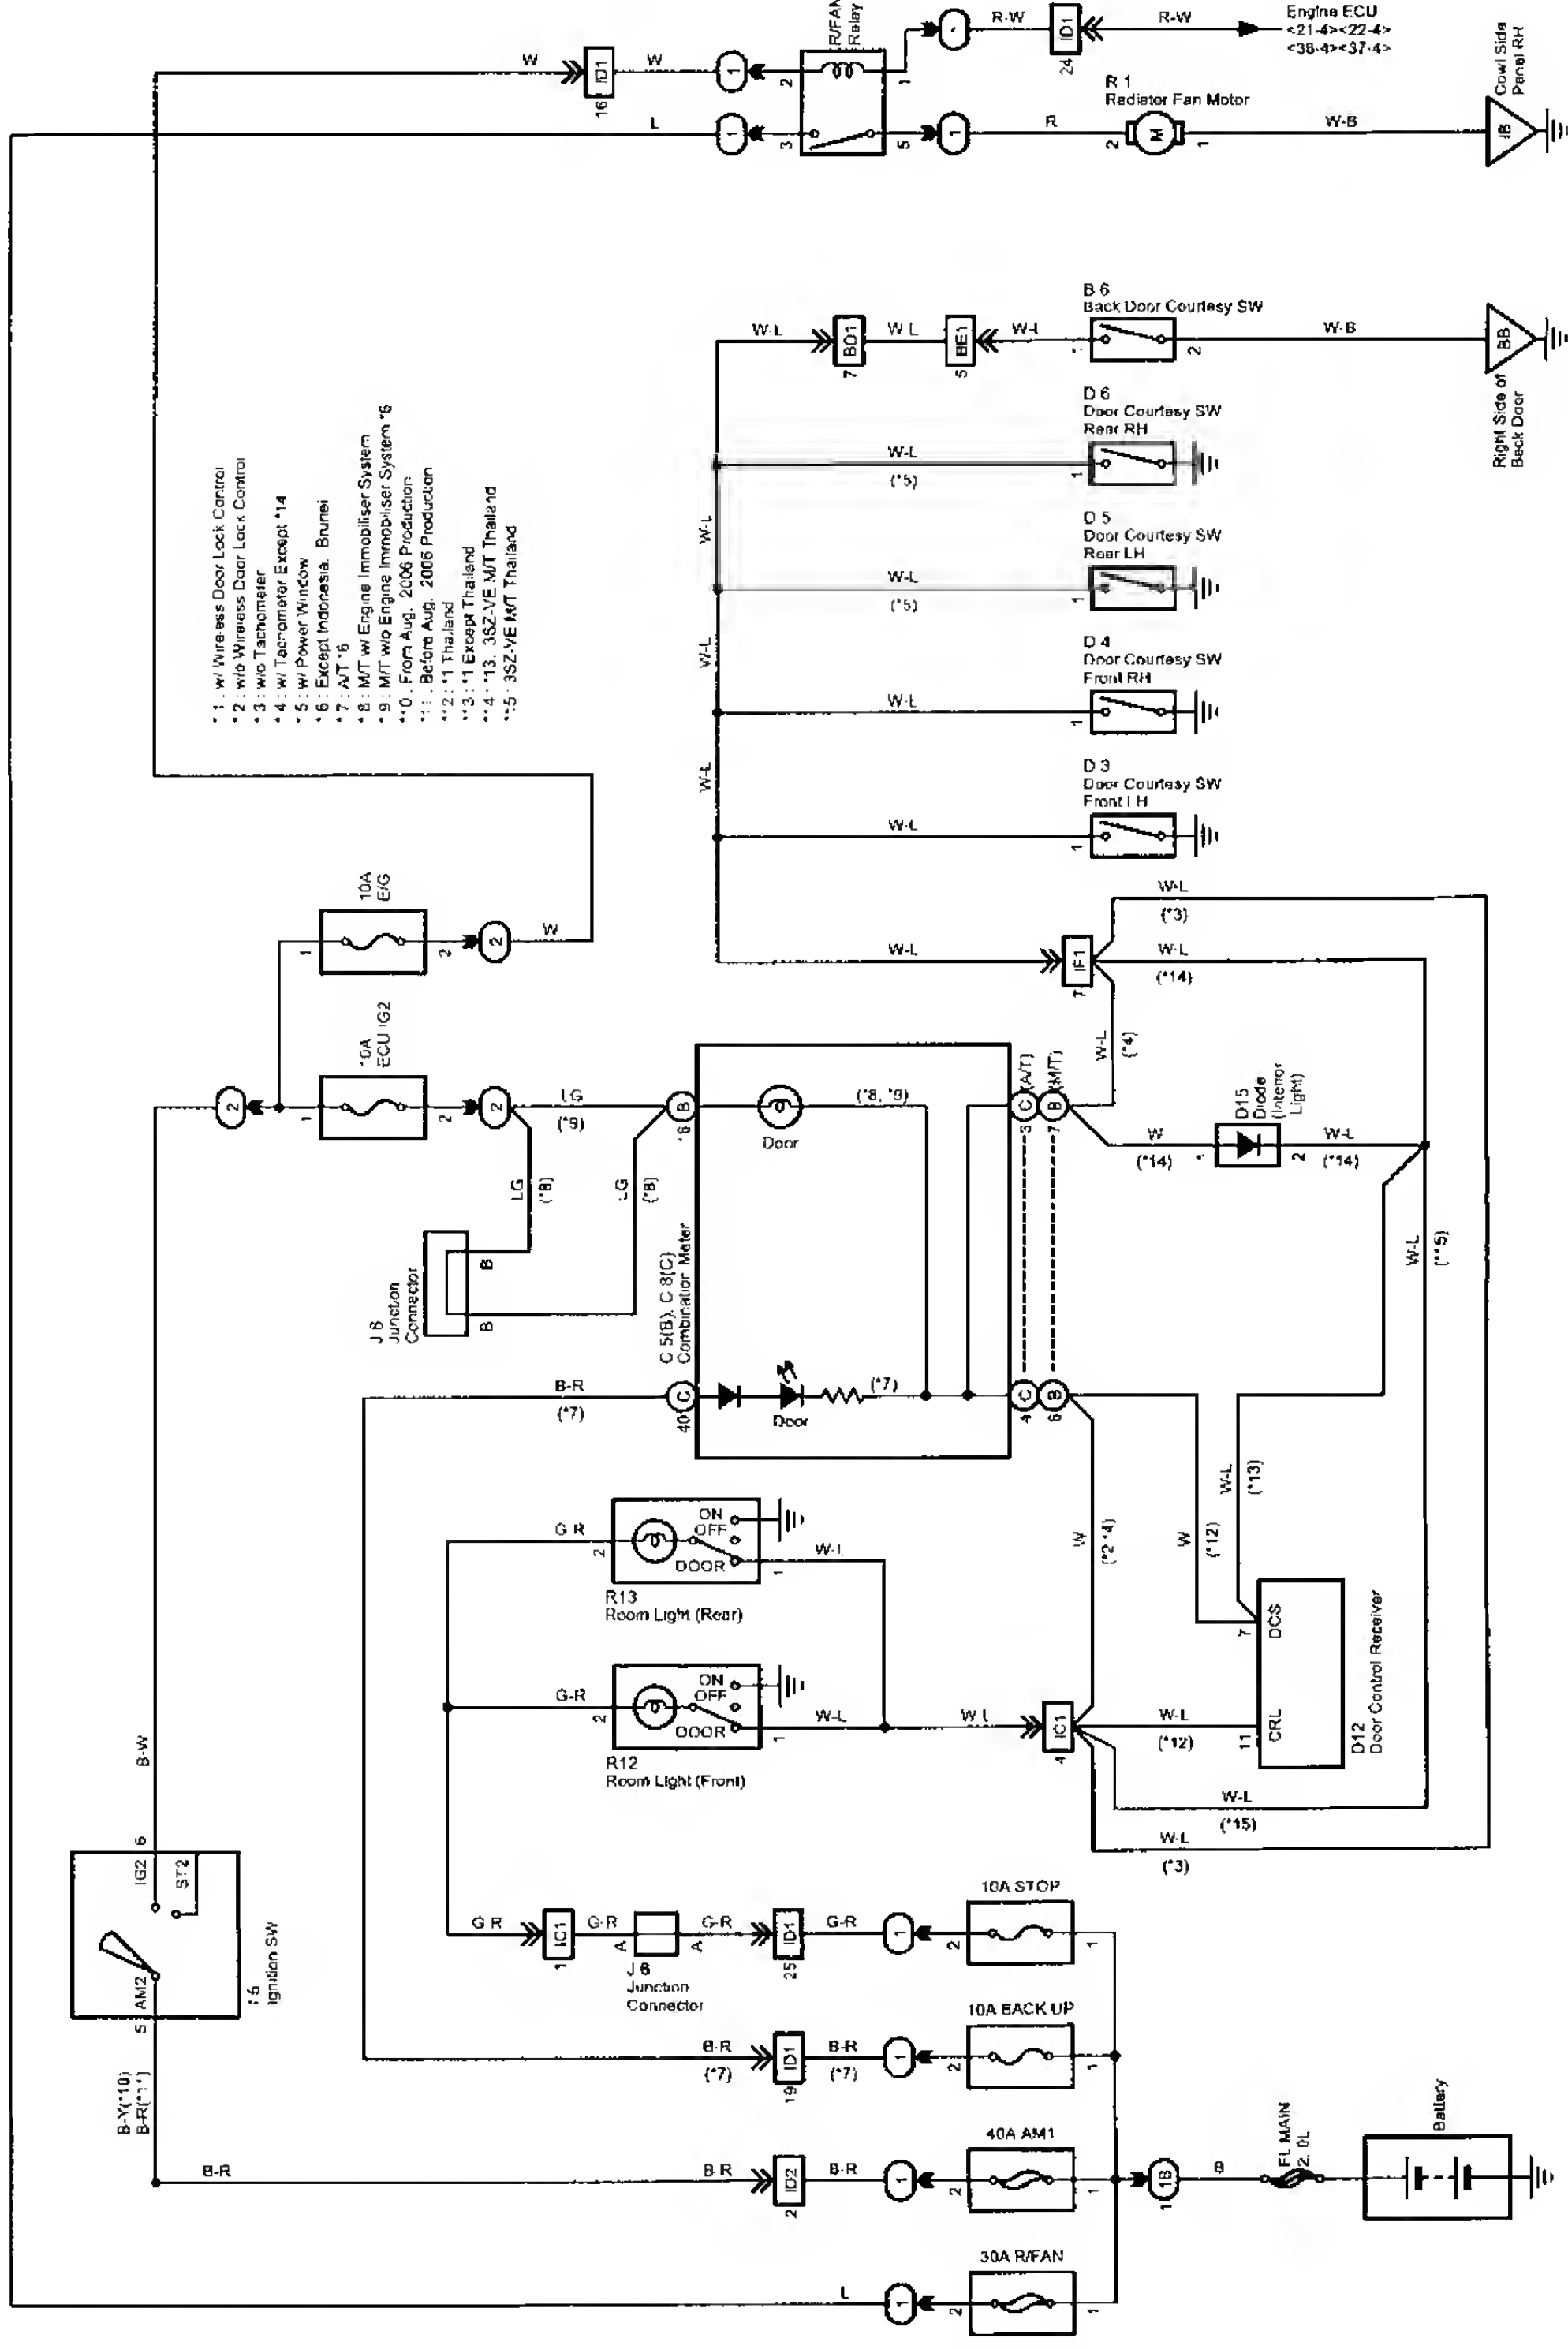



Front Wiper and Washer

Back-Up Light

Power Source

- * 1 : 7 w/o Power Window
- * 2 : 7 w/ Power Window
- * 3 : w/ Intermitent
- * 4 : w/o Intermitent
- * 5 : 6 Indonesia M/T
- * 6 : 6 Except Indonesia M/T
- * 7 : From Aug. 2008 Production
- * 8 : Before Aug. 2008 Production

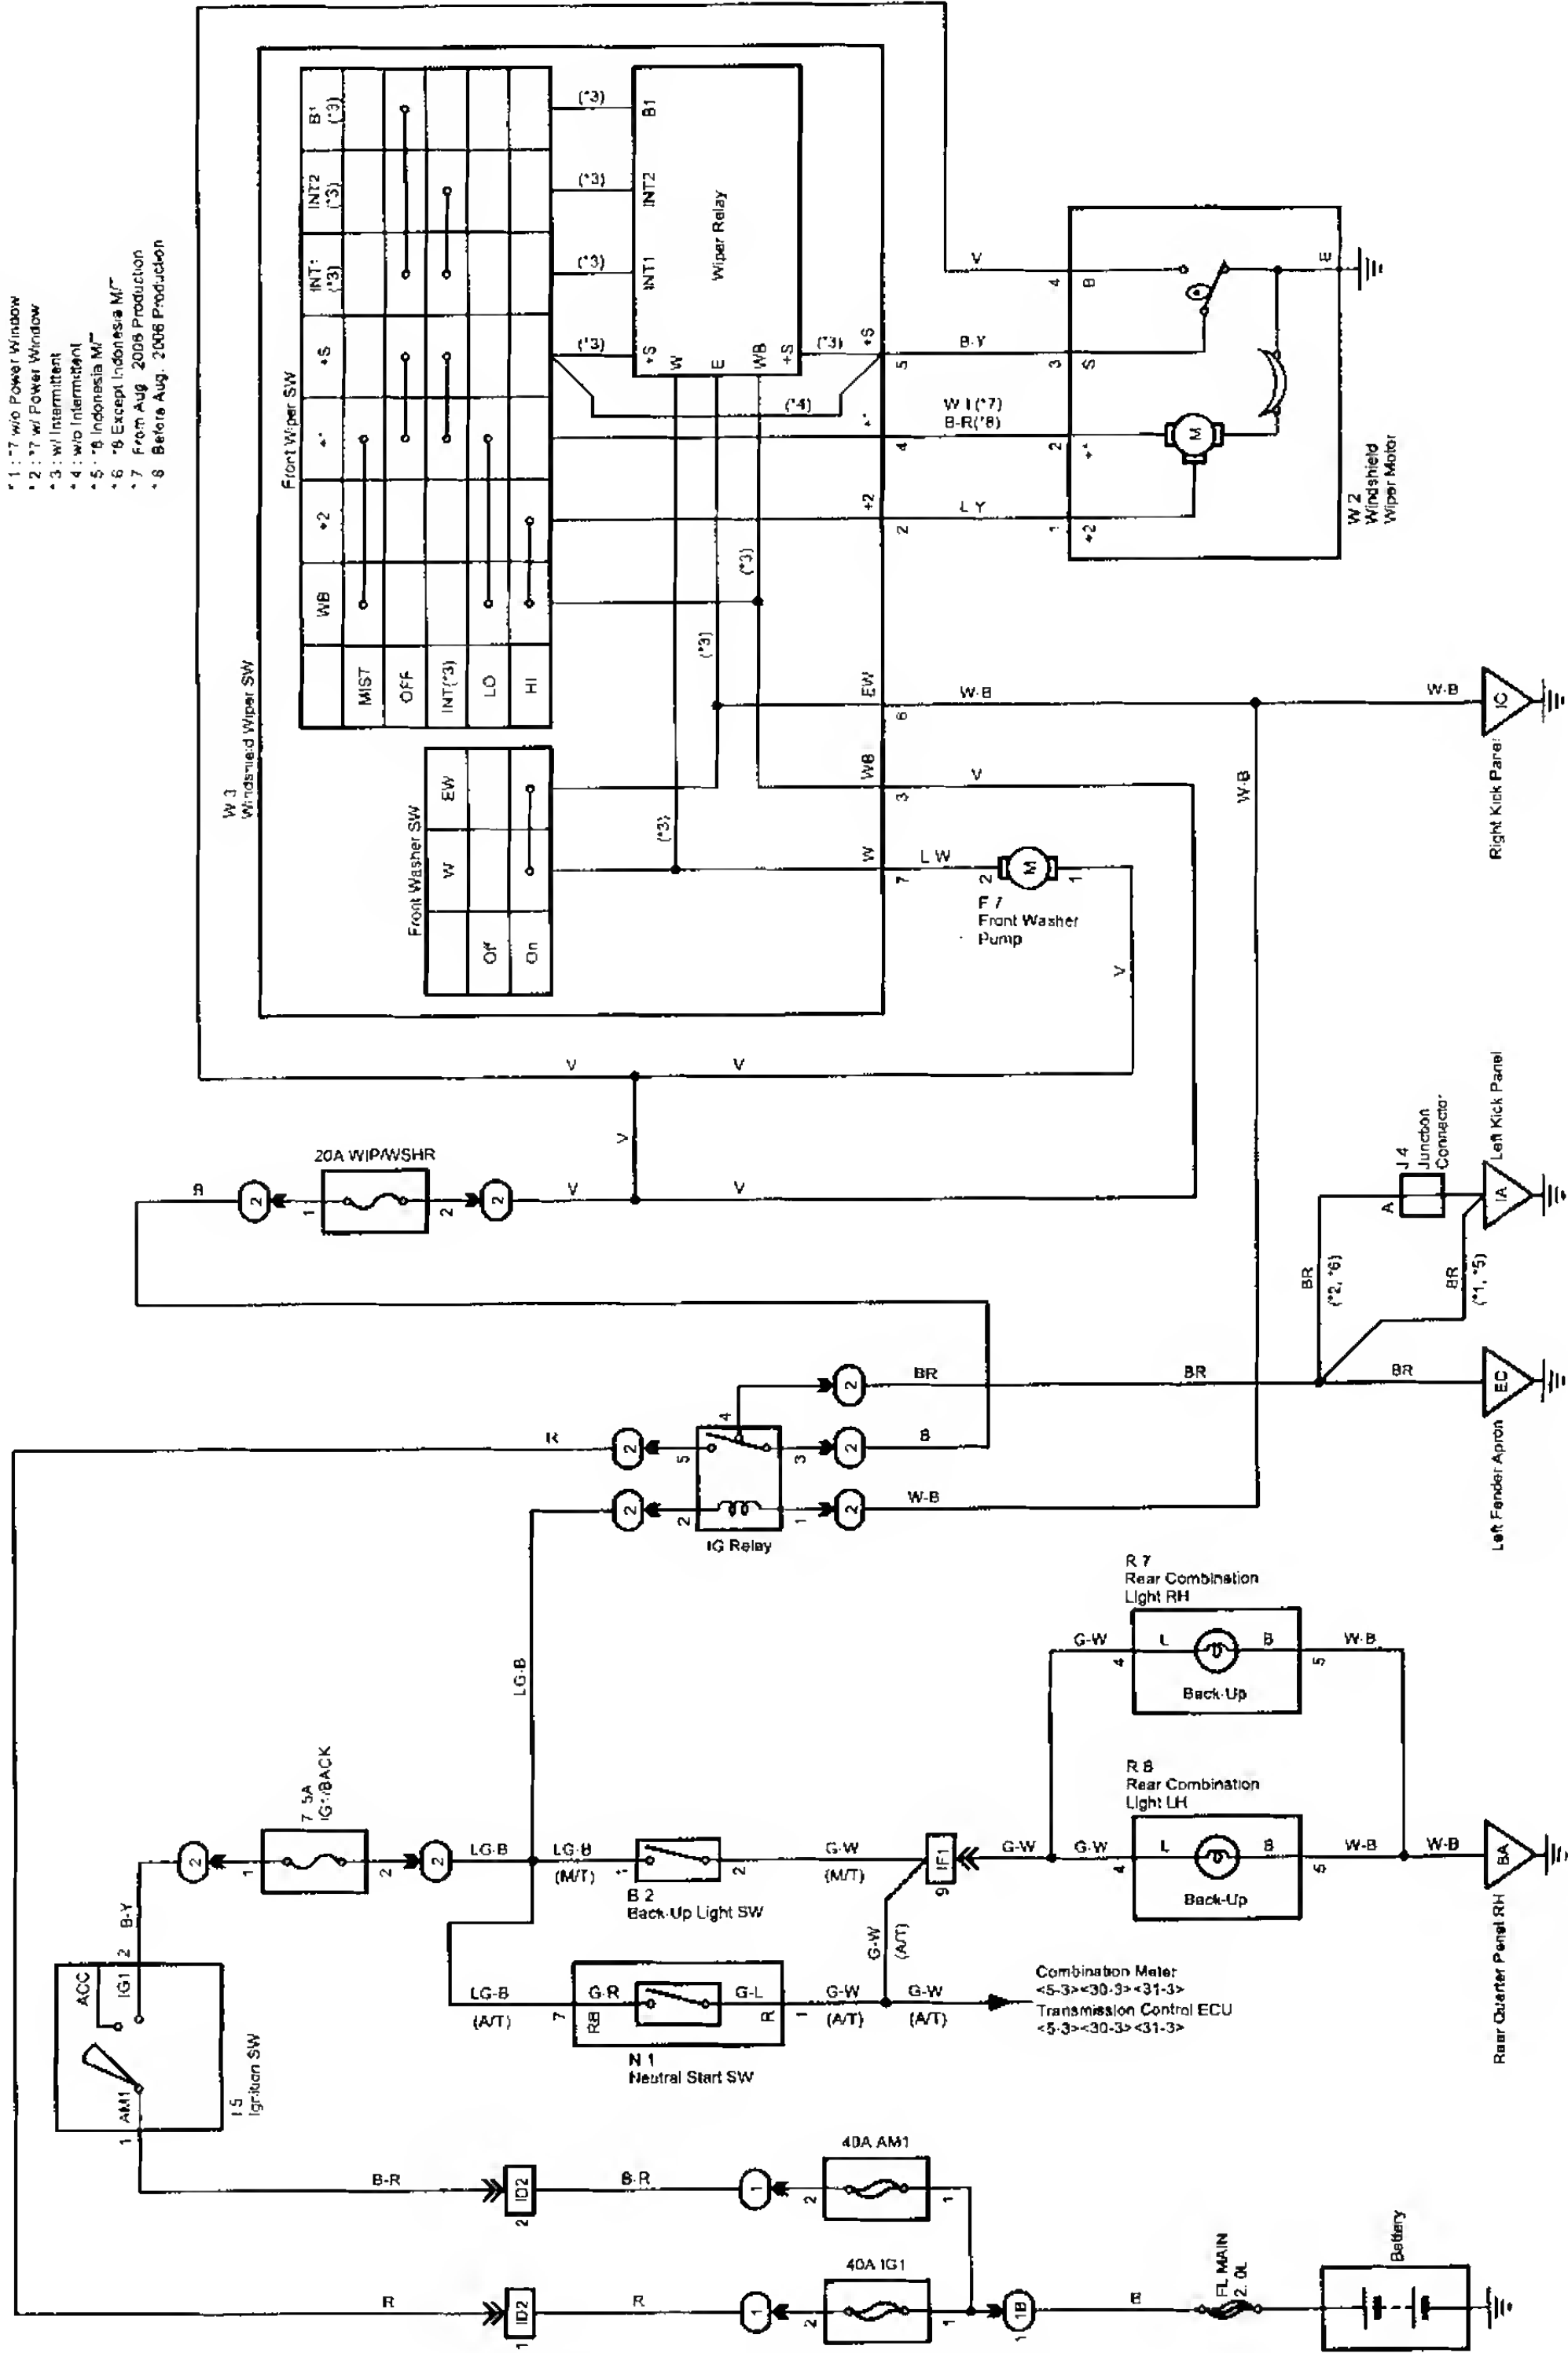

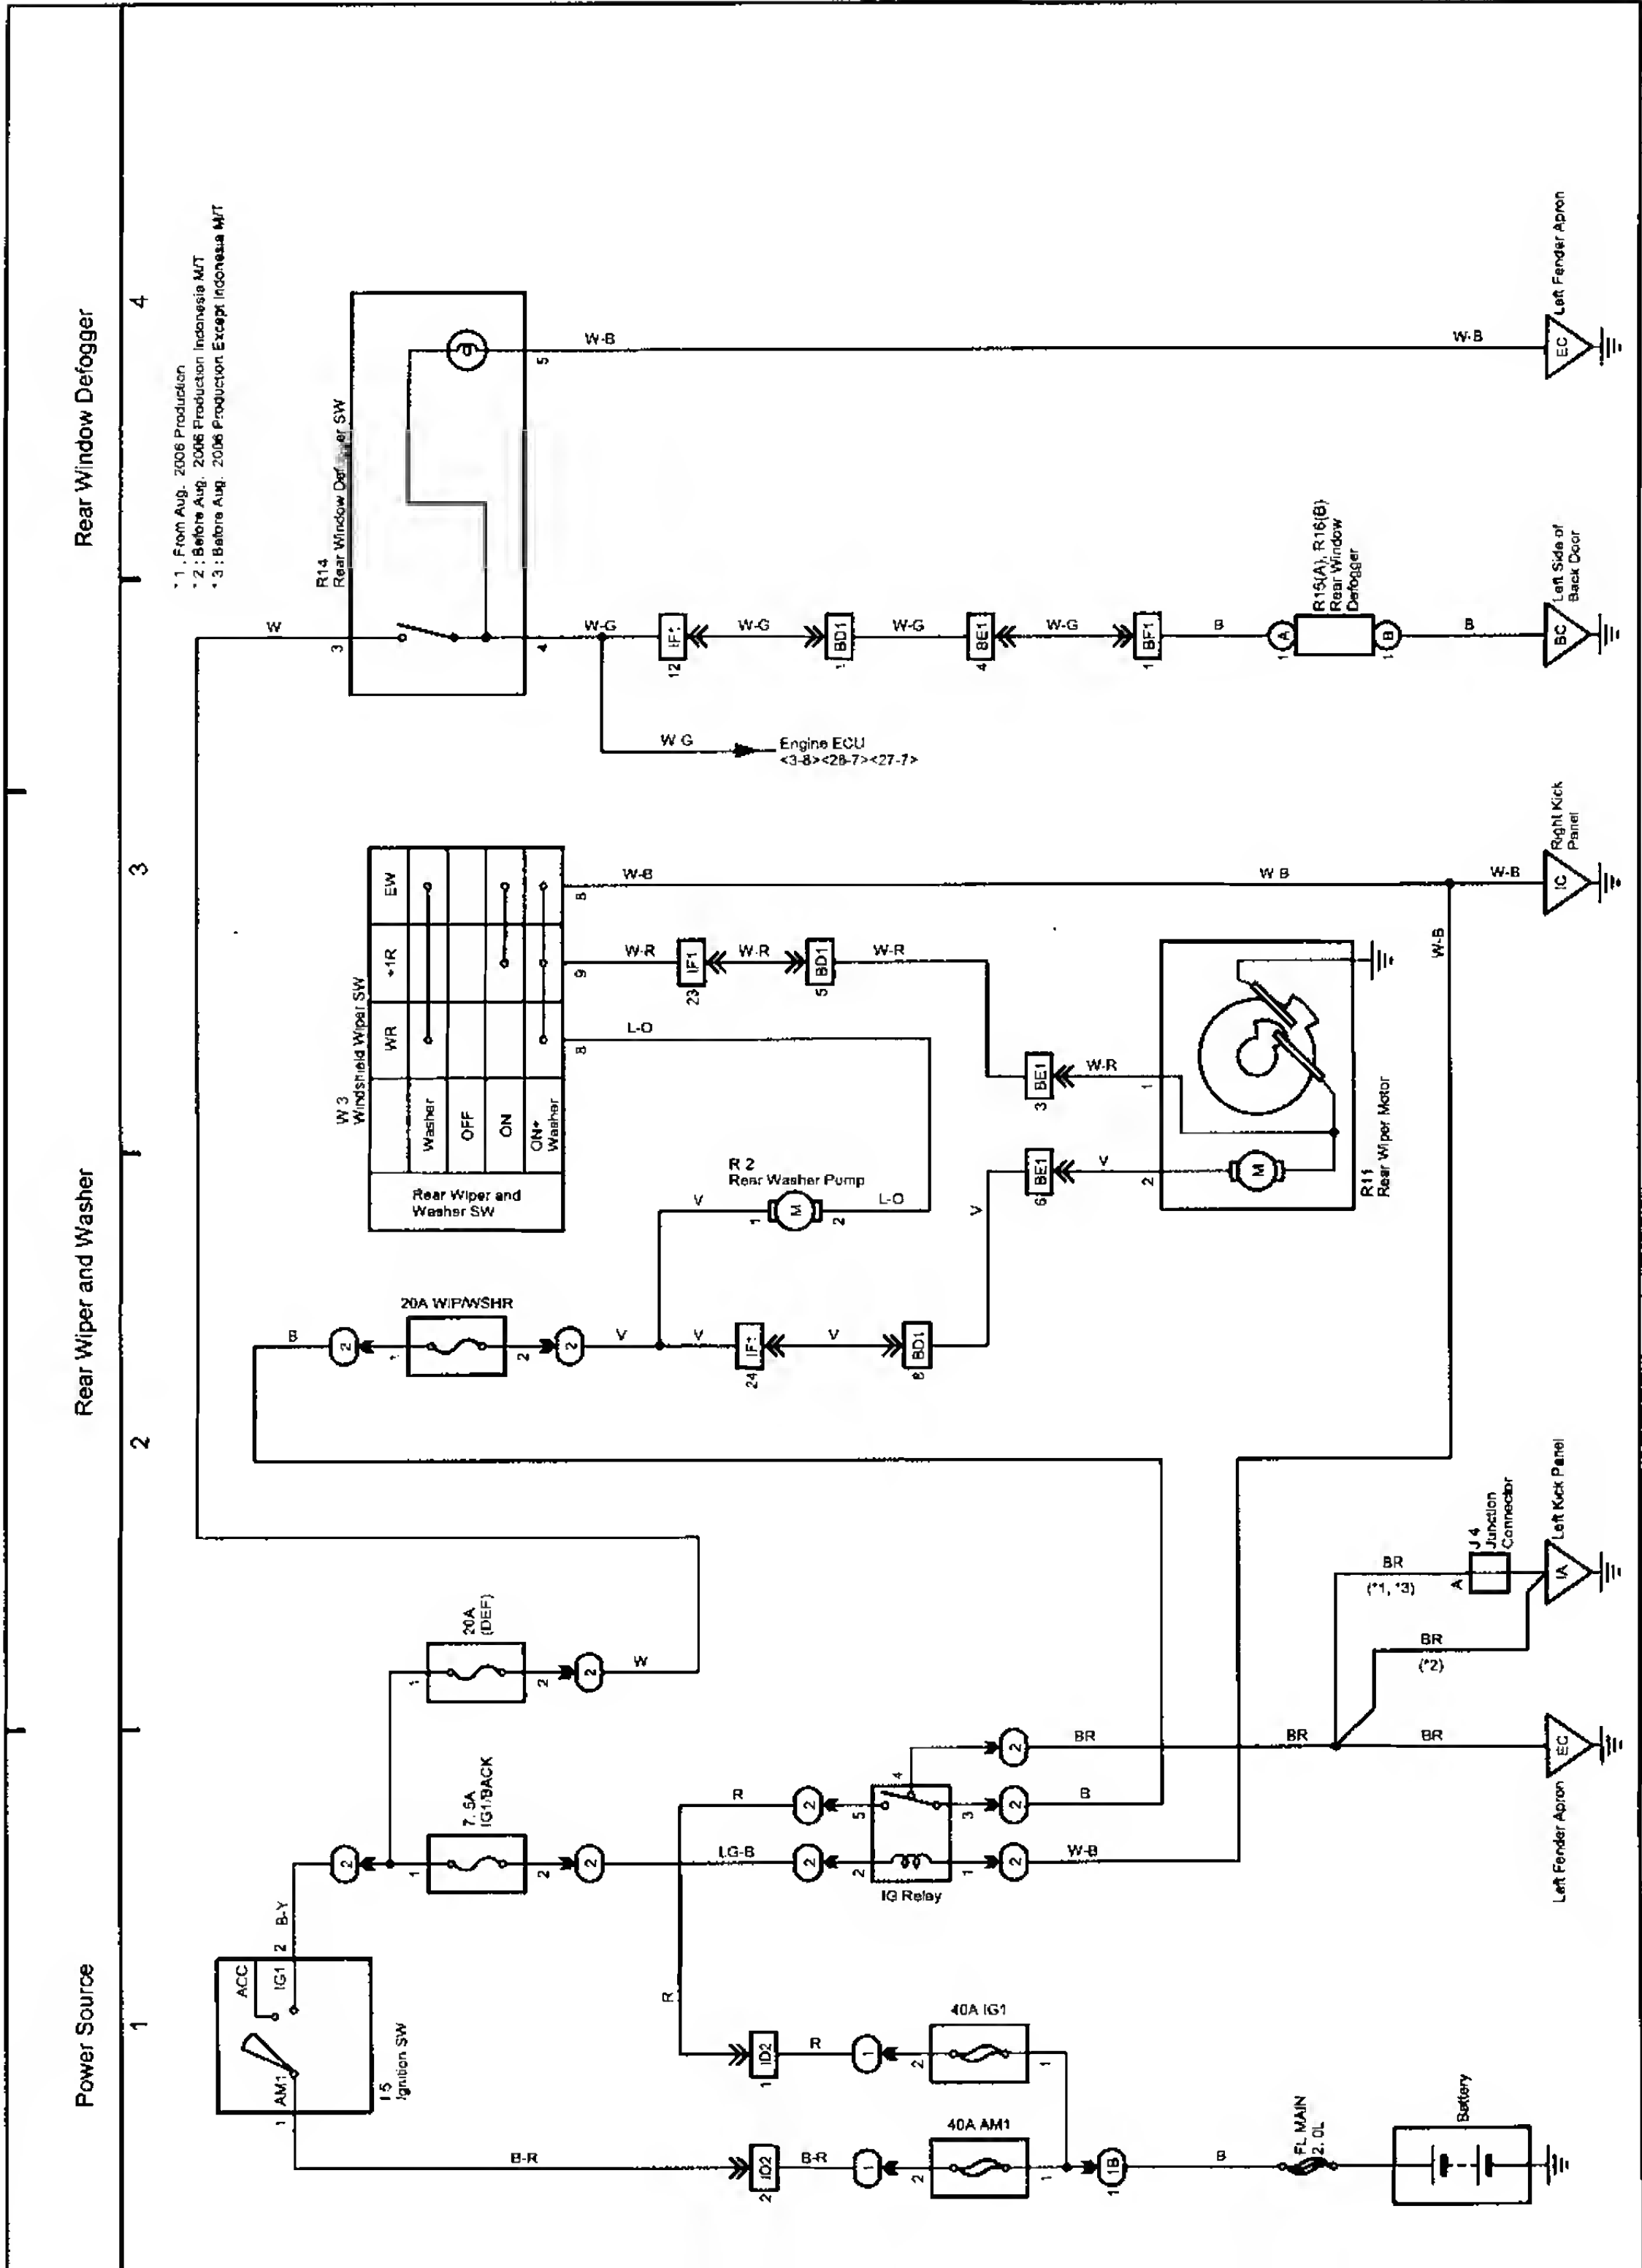


Power Source

Audio System

Cigarette Lighter


1 2 3 4

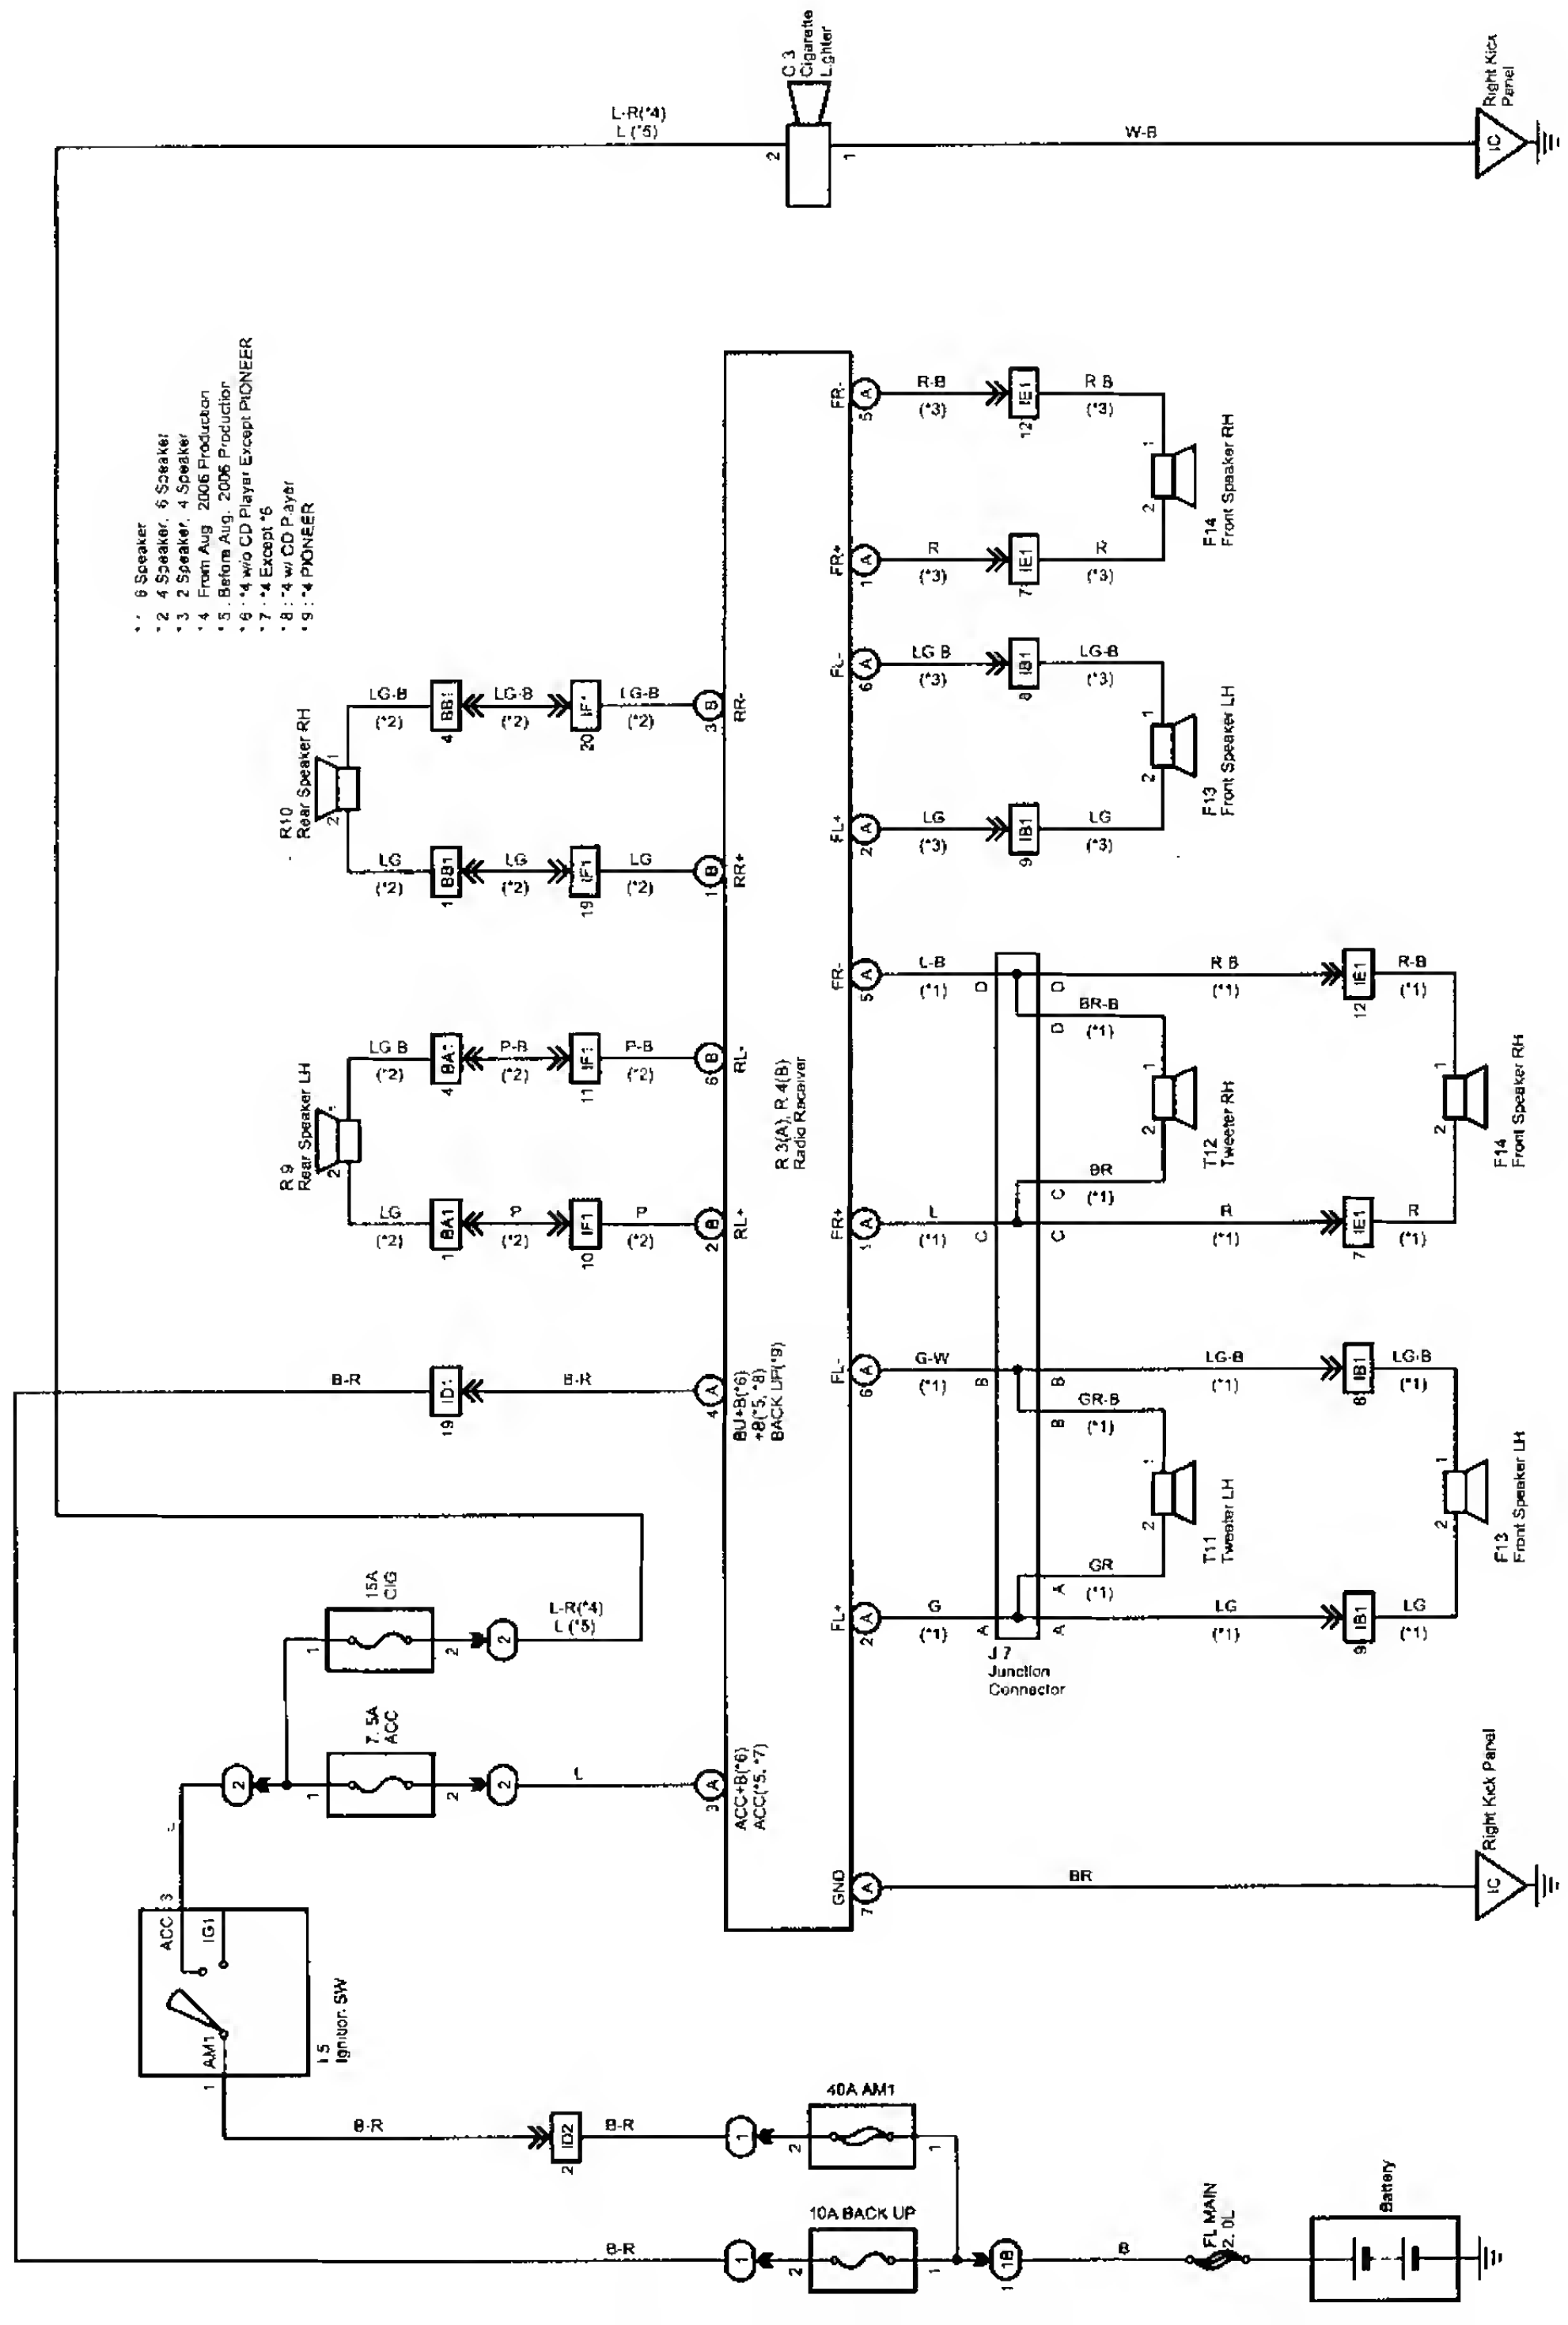

* 1 : From Aug. 2006 Production
 * 2 : Before Aug. 2006 Production
 * 3 : ** Except Indonesia, Brunei

Combination Meter (A/T)

Power Source

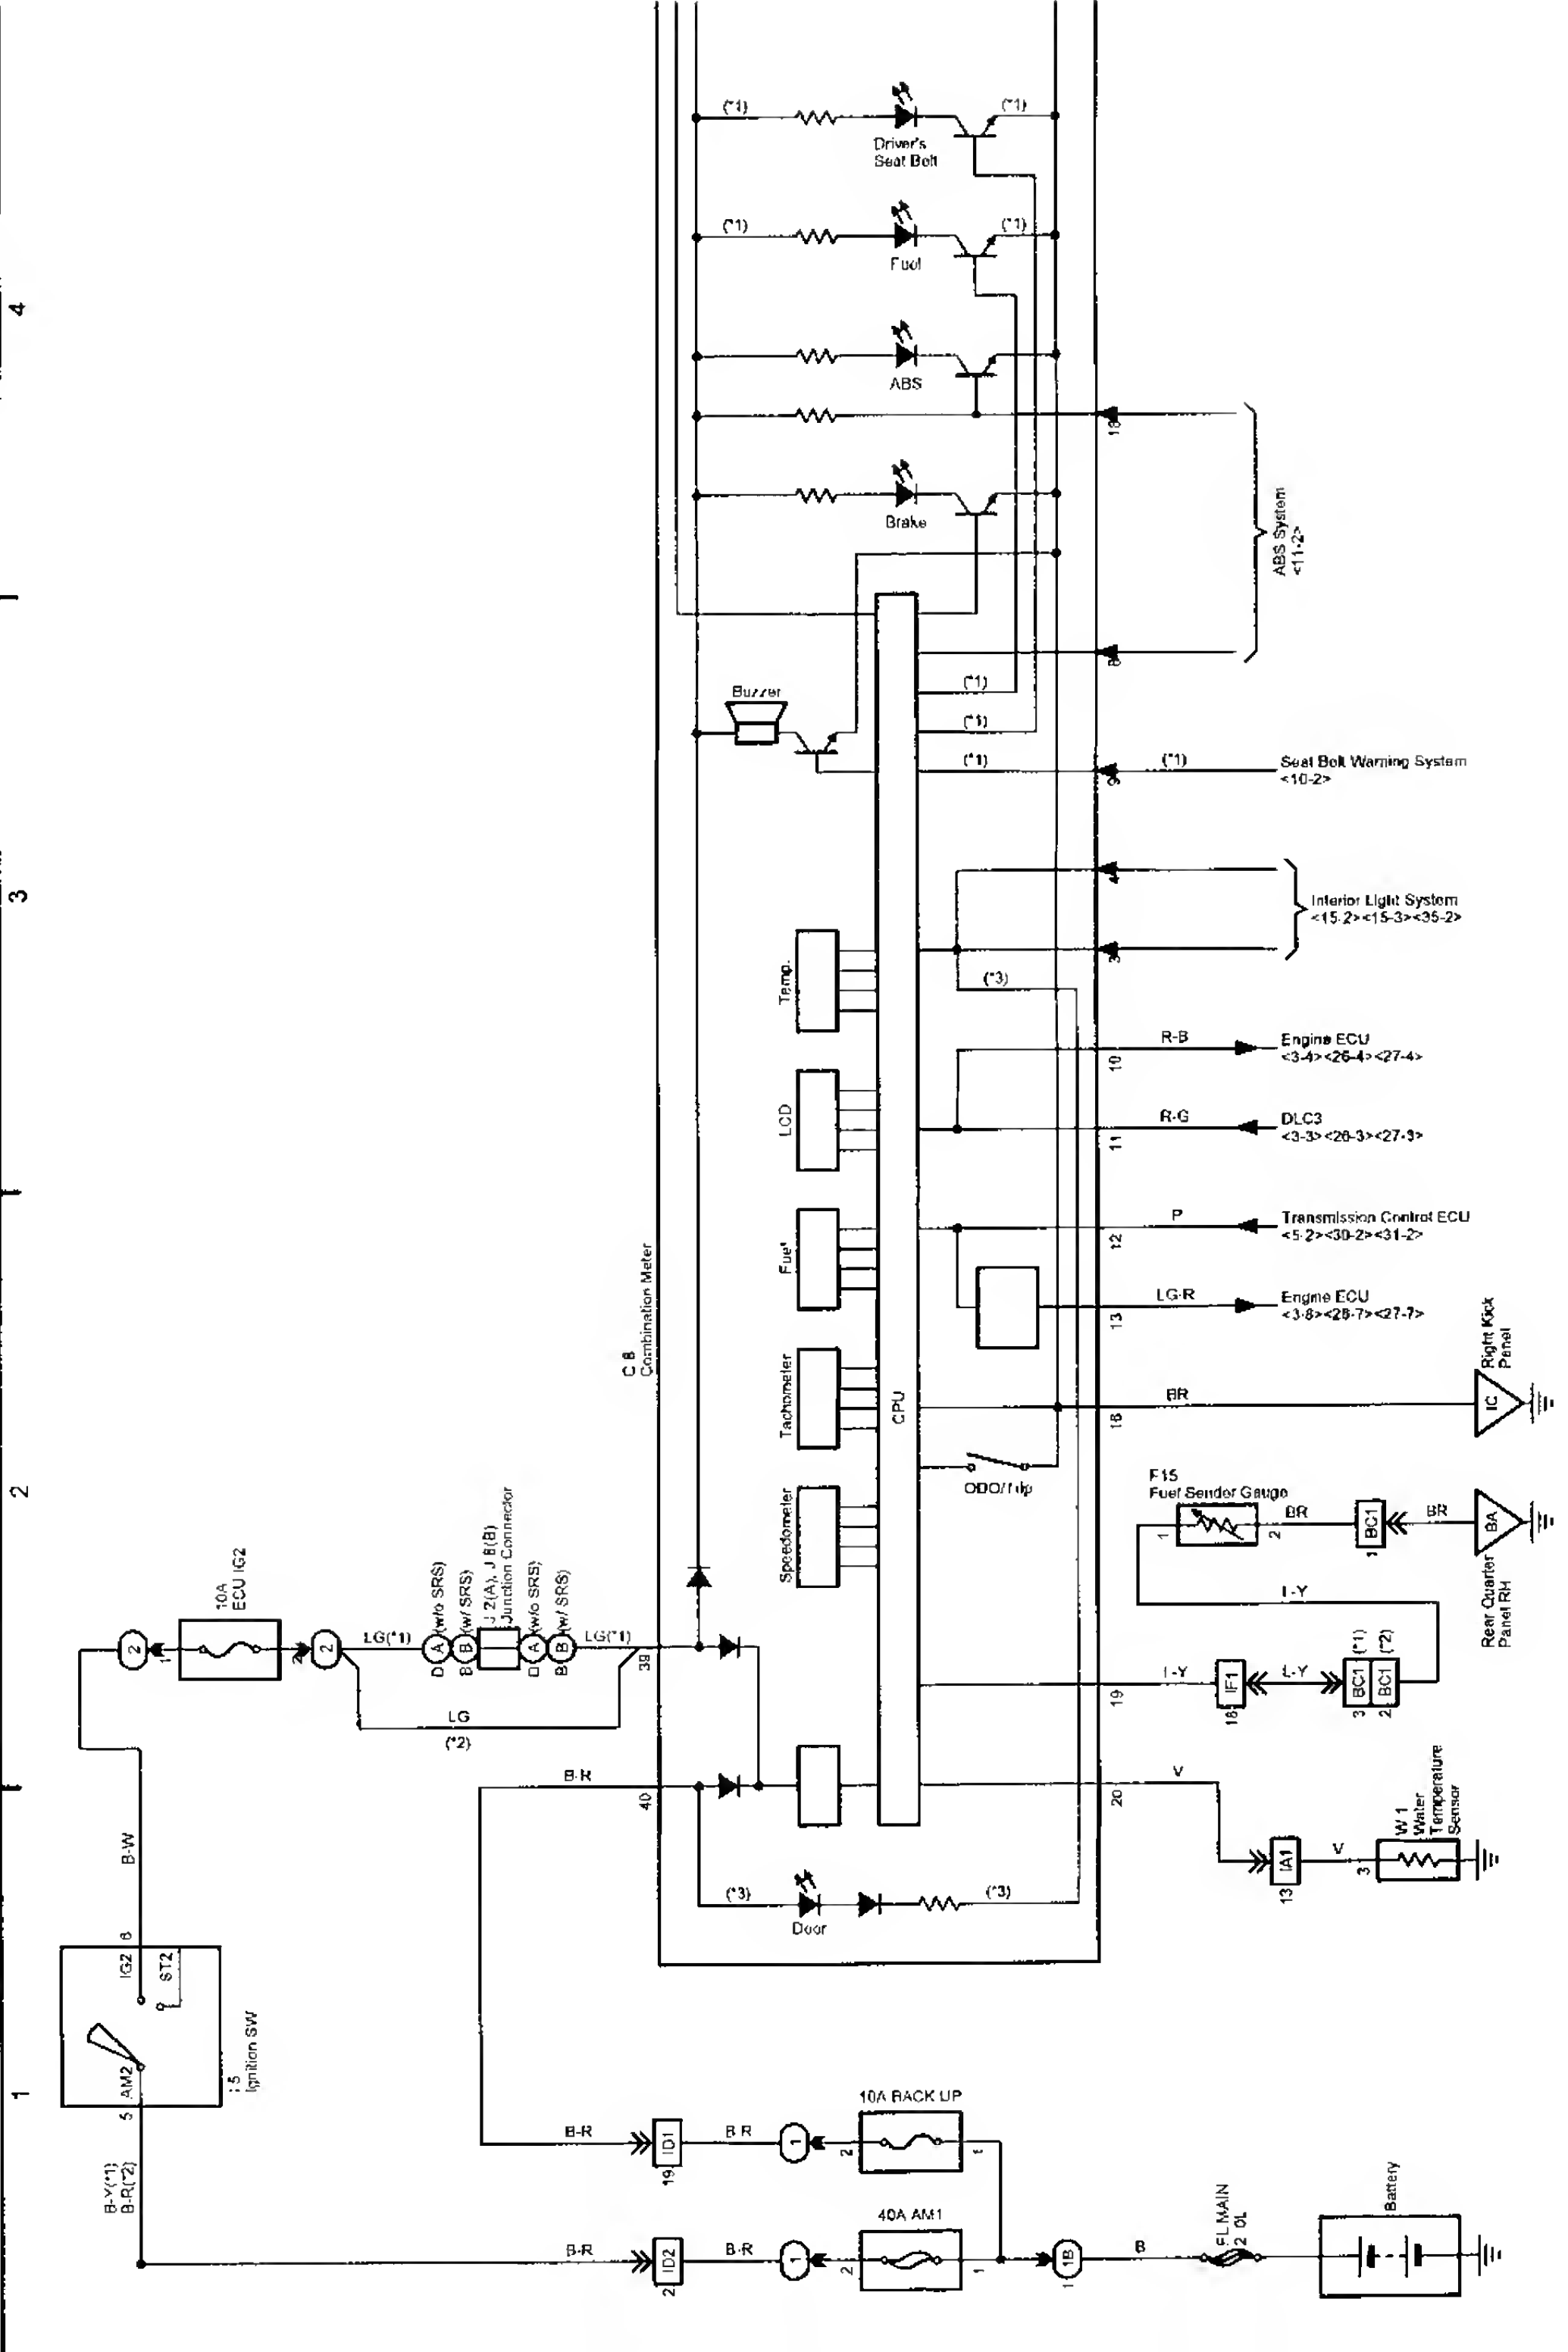


Combination Meter (A/T)

8


7

6

5

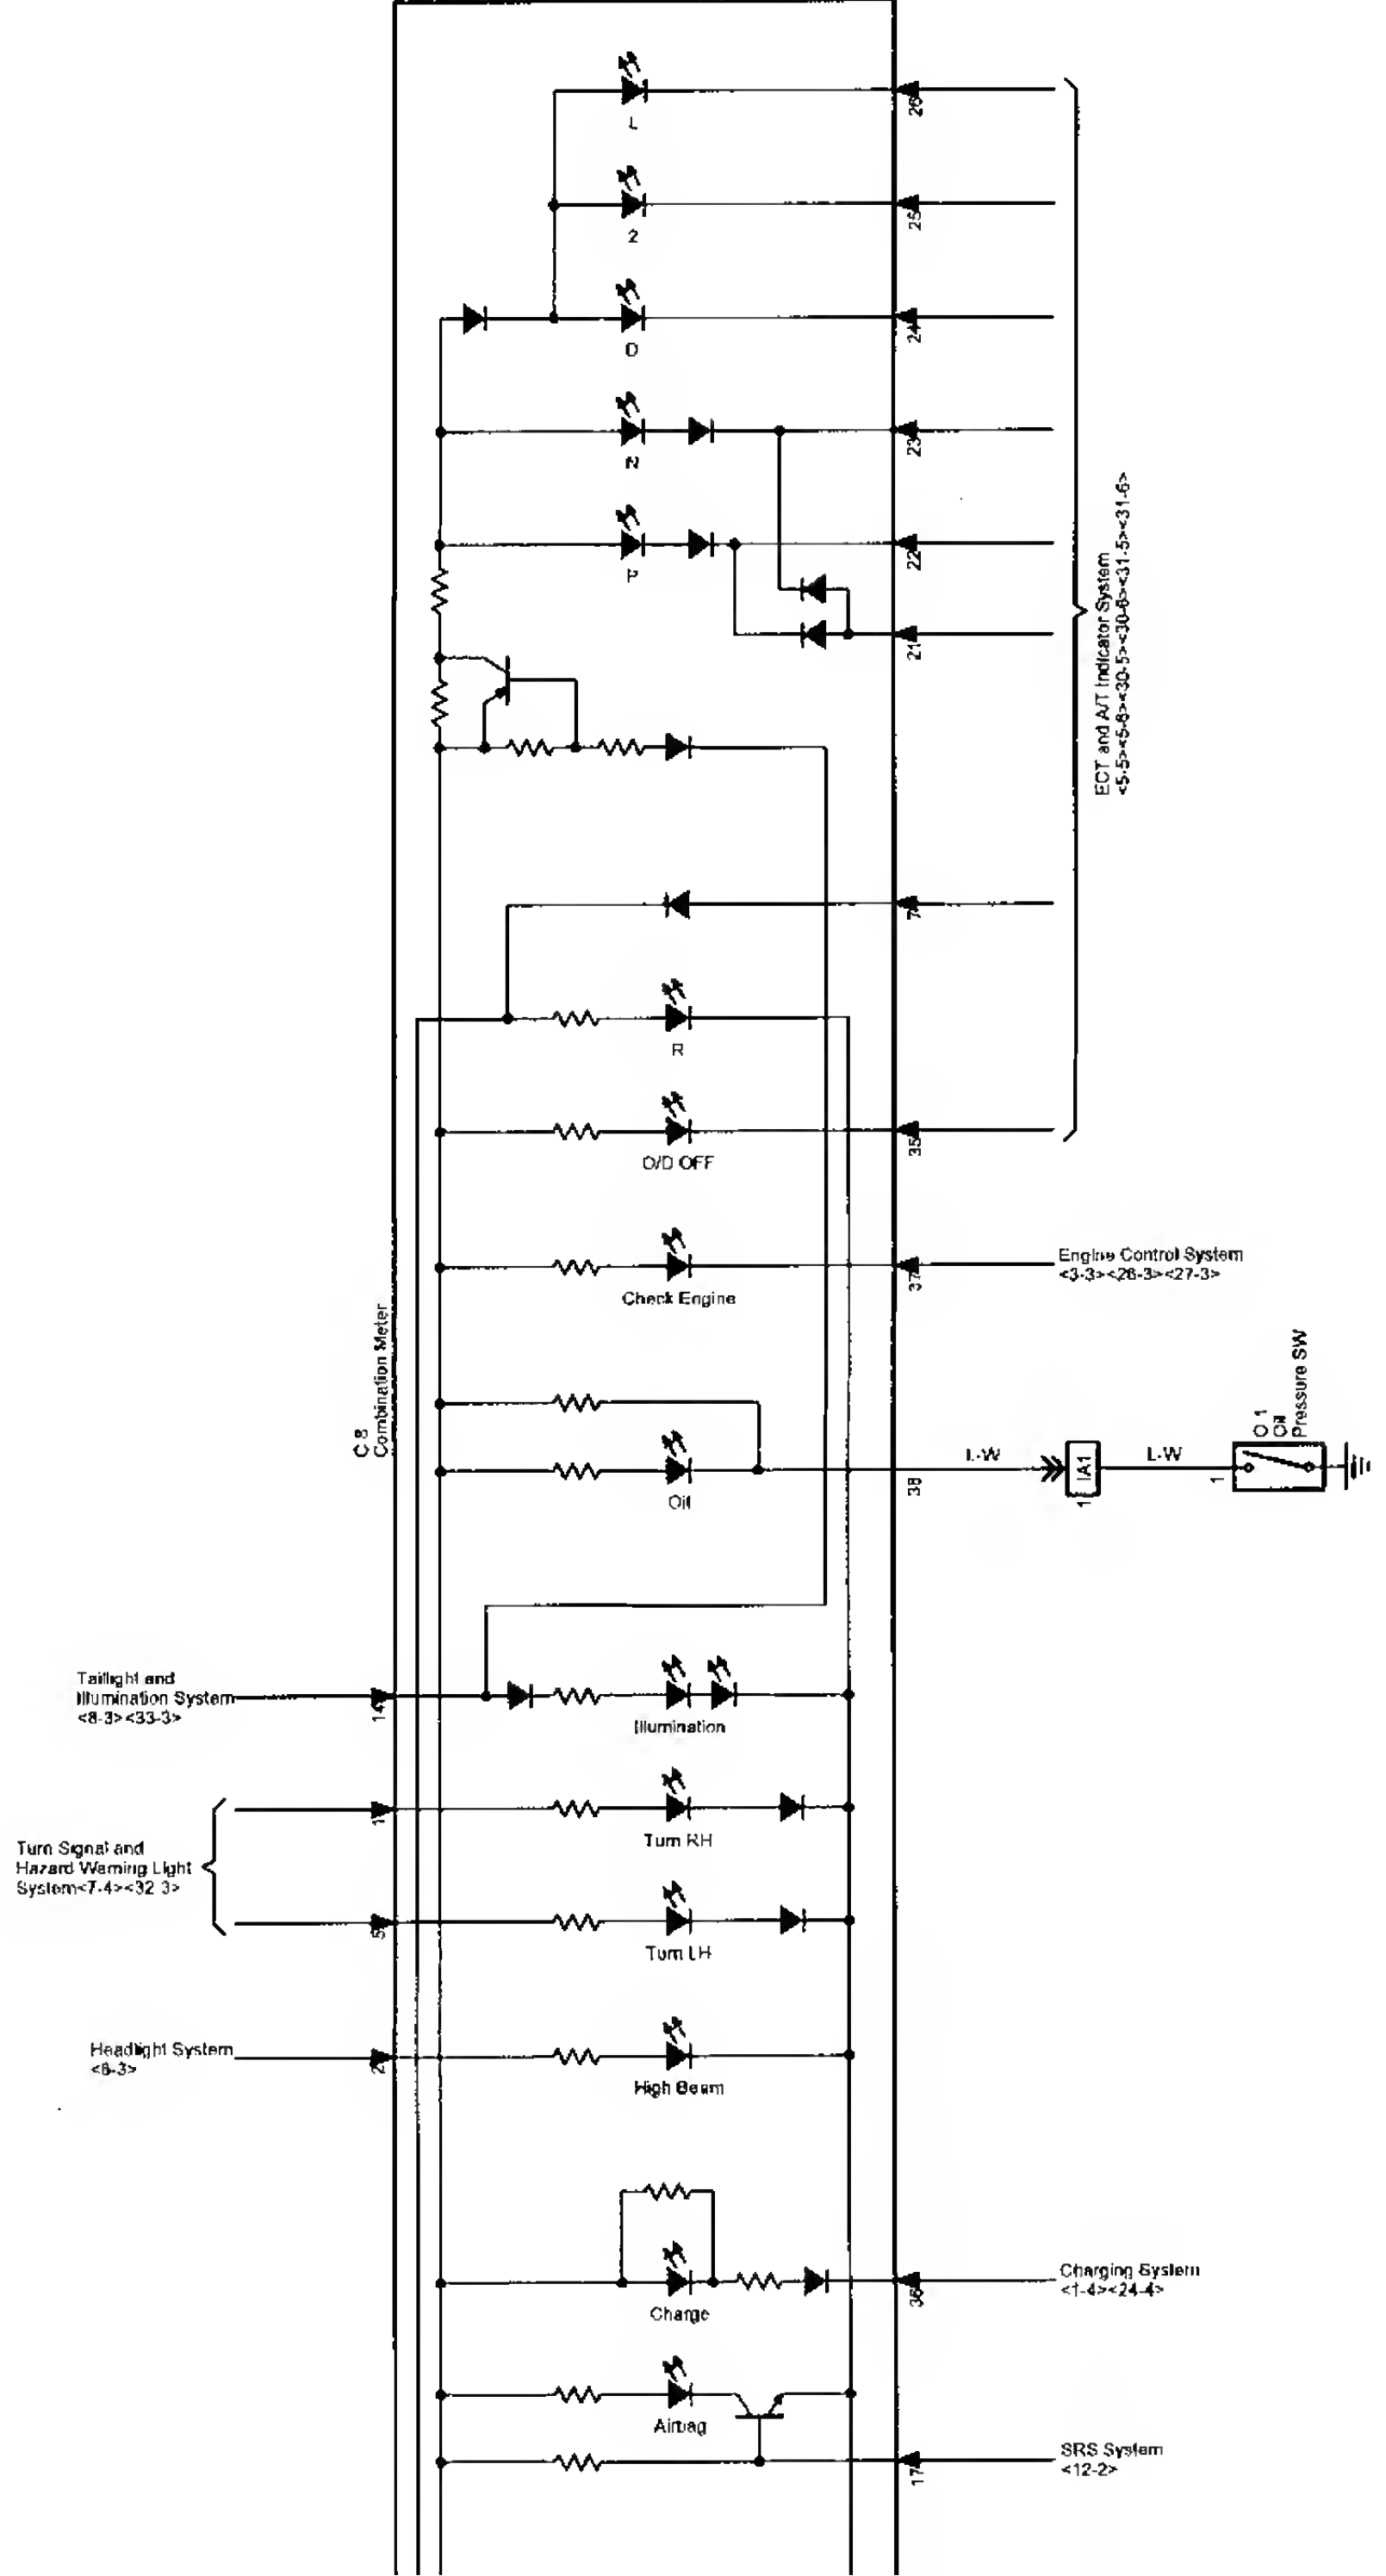

Combination Meter (M/T)

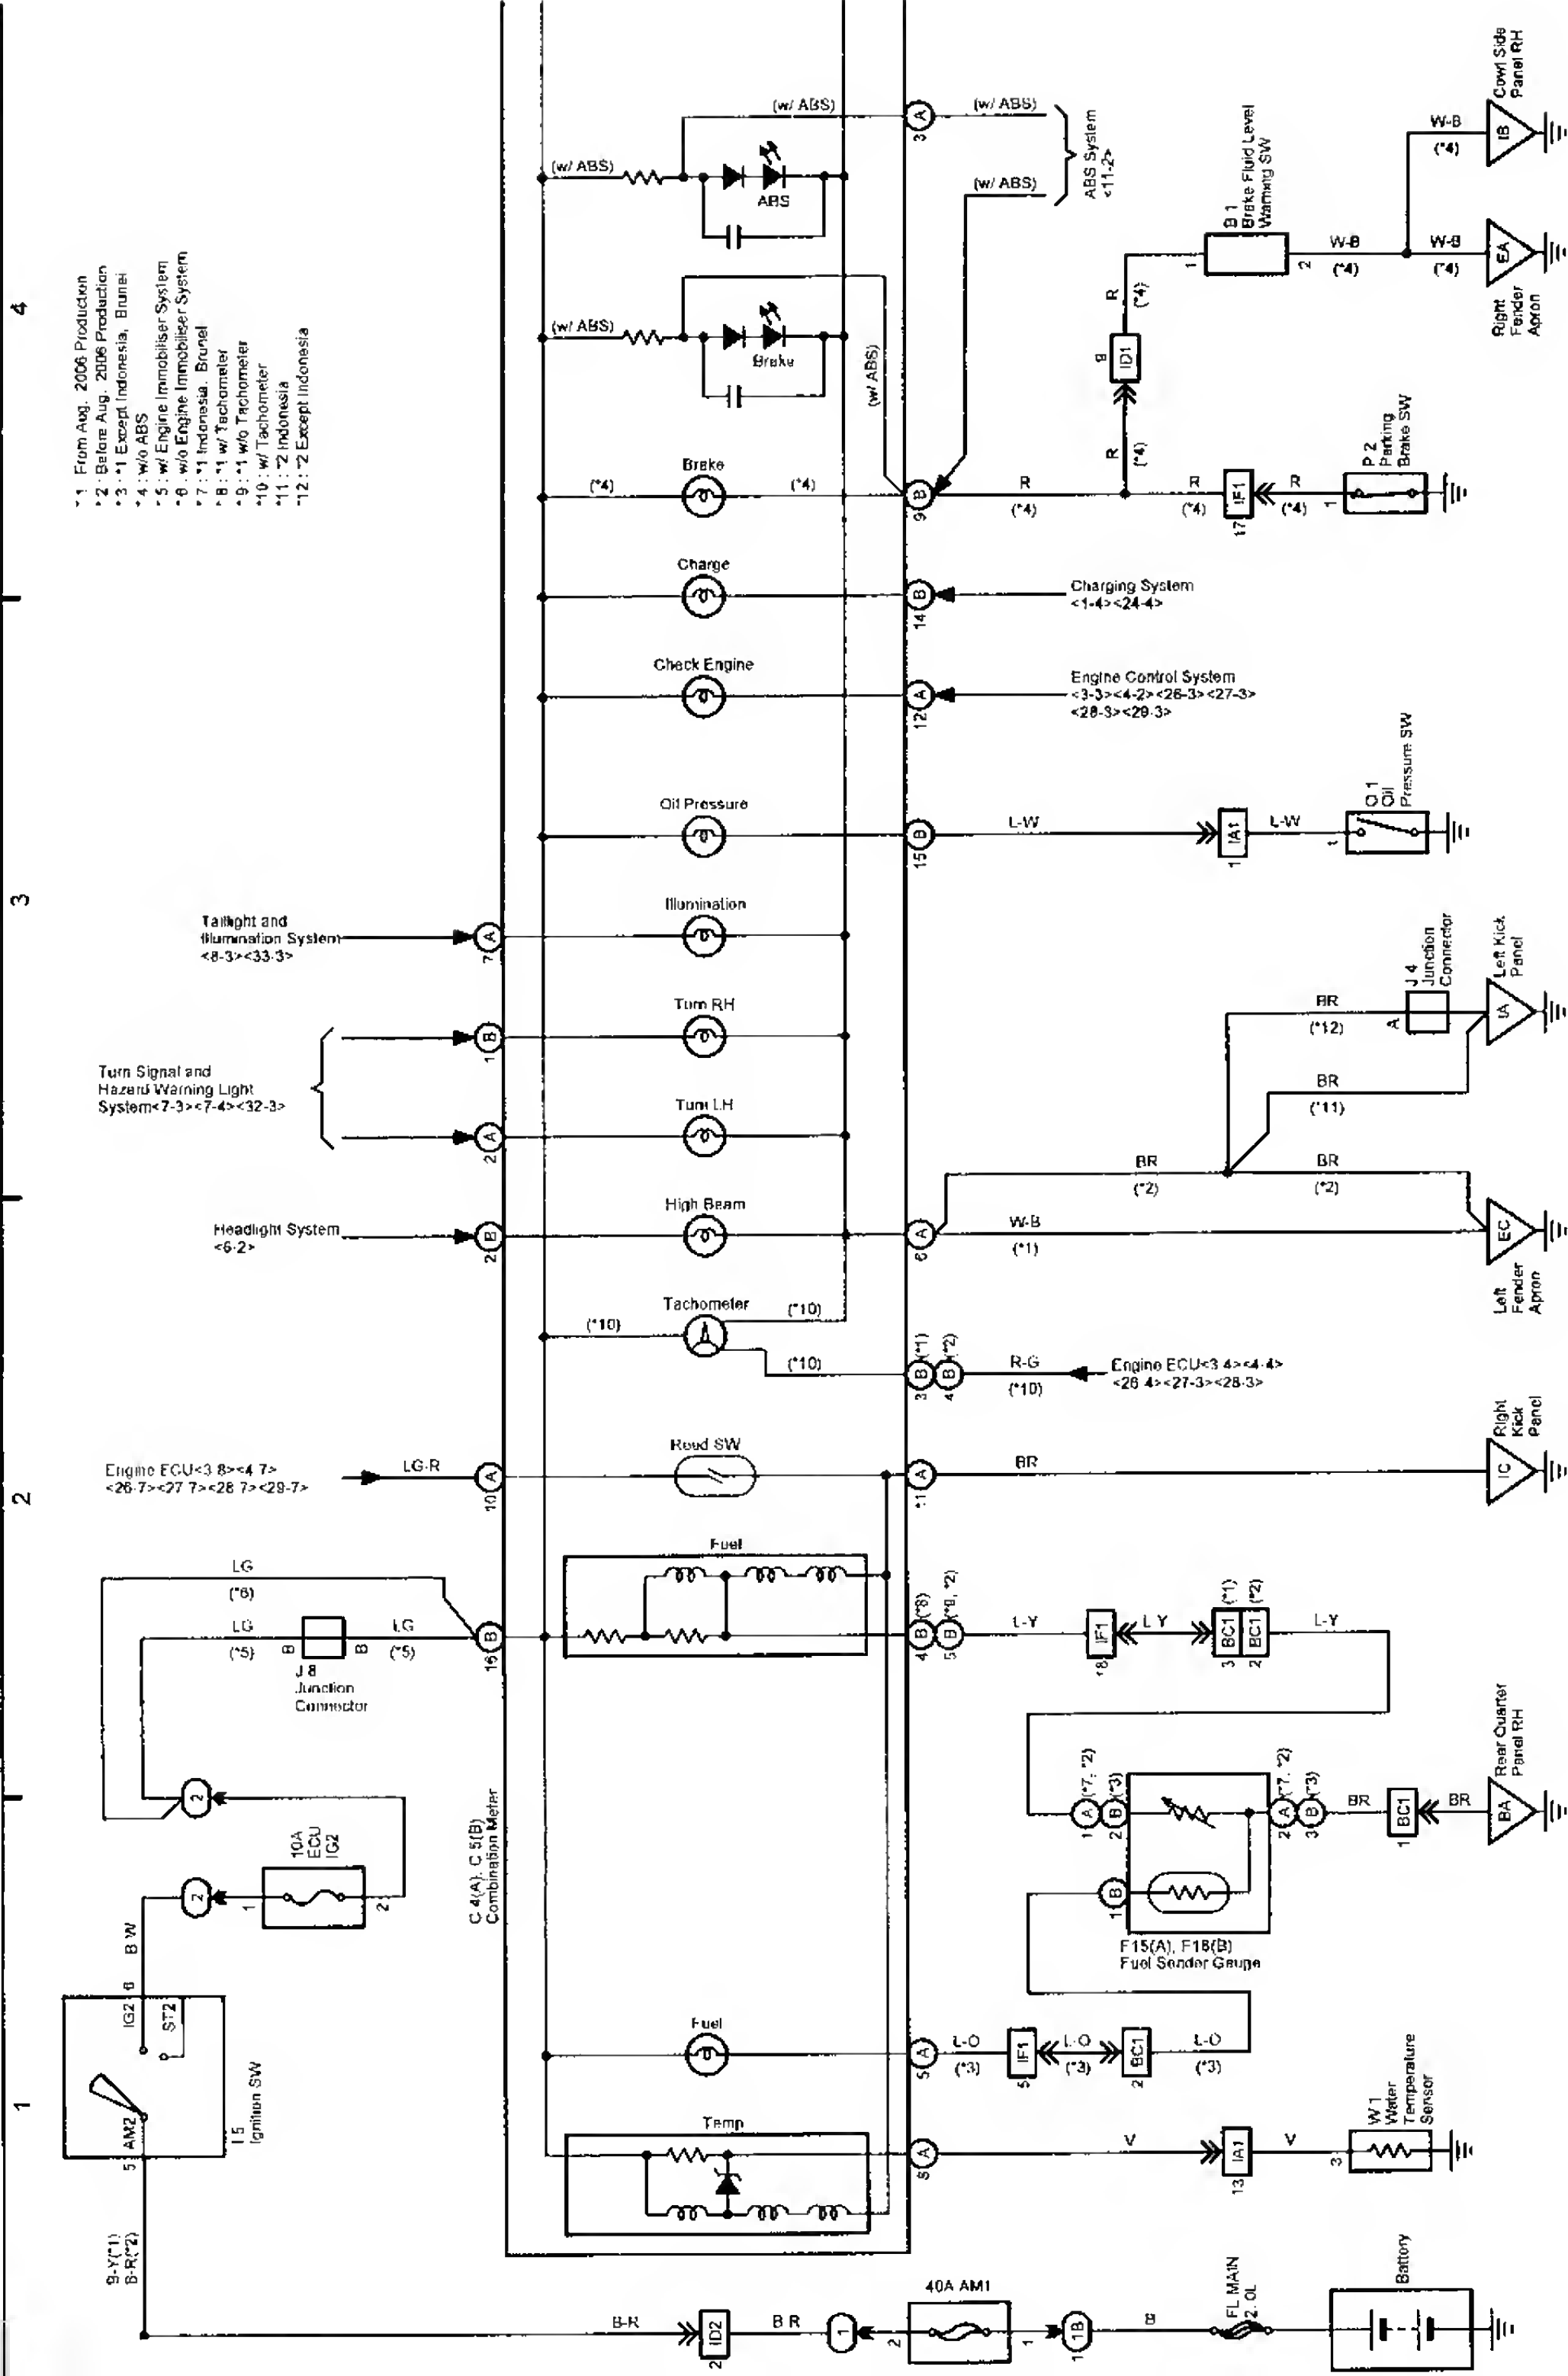

- *1: From Aug. 2006 Production
- *2: Before Aug. 2006 Production
- *3: *1 Except Indonesia, Brunei
- *4: w/o ABS
- *5: w/ Engine Immobiliser System
- *6: w/o Engine Immobiliser System
- *7: *1 Indonesia, Brunei
- *8: *1 w/ Tachometer
- *9: *1 w/o Tachometer
- *10: w/ Tachometer
- *11: *2 Indonesia
- *12: *2 Except Indonesia

Combination Meter (M/T)


1. From Aug. 2006 Production

8

7

6


5

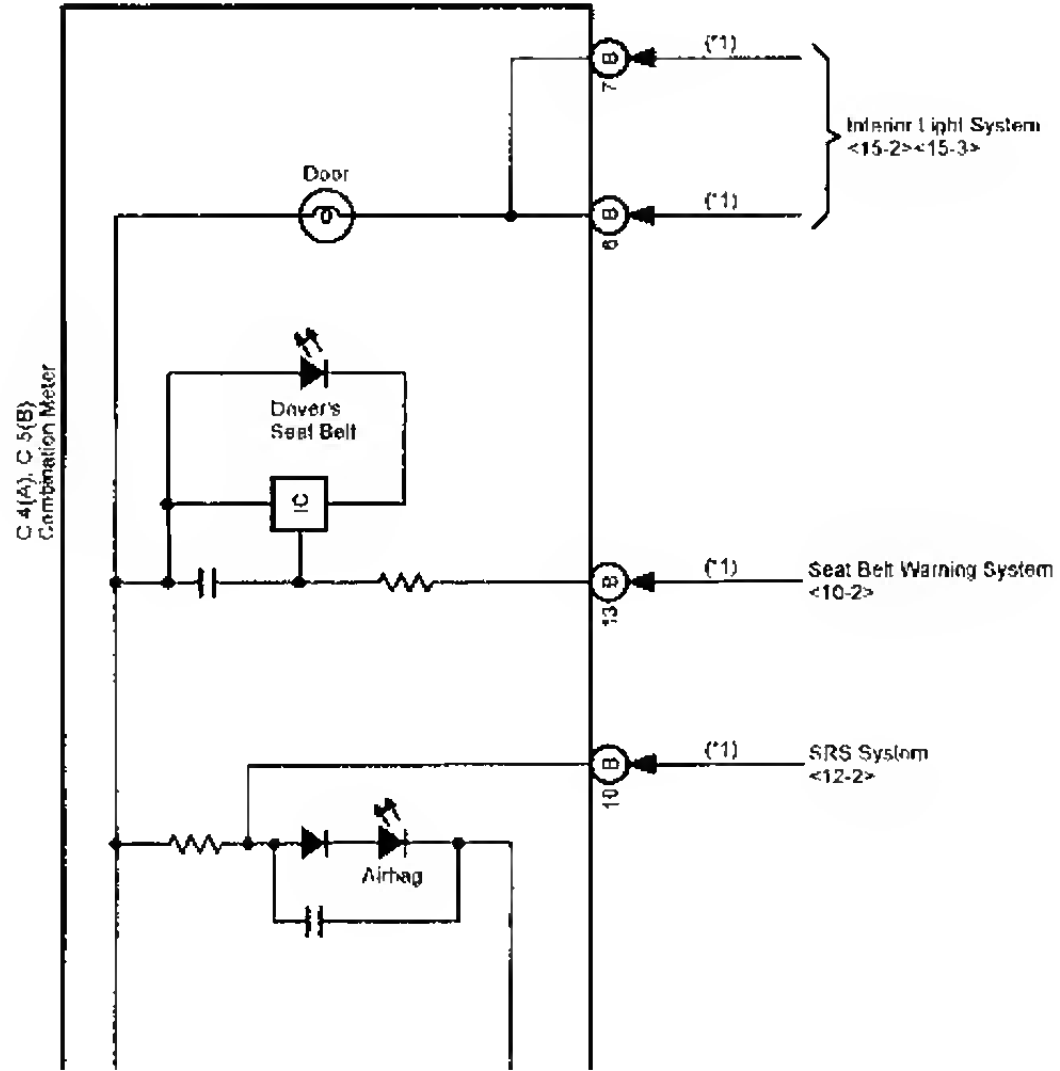

Air Conditioner (From Aug. 2006 Production w/ Heater)

* 1 w/ Rear Air Conditioner
* 2 w/o Rear Air Conditioner


Power Source

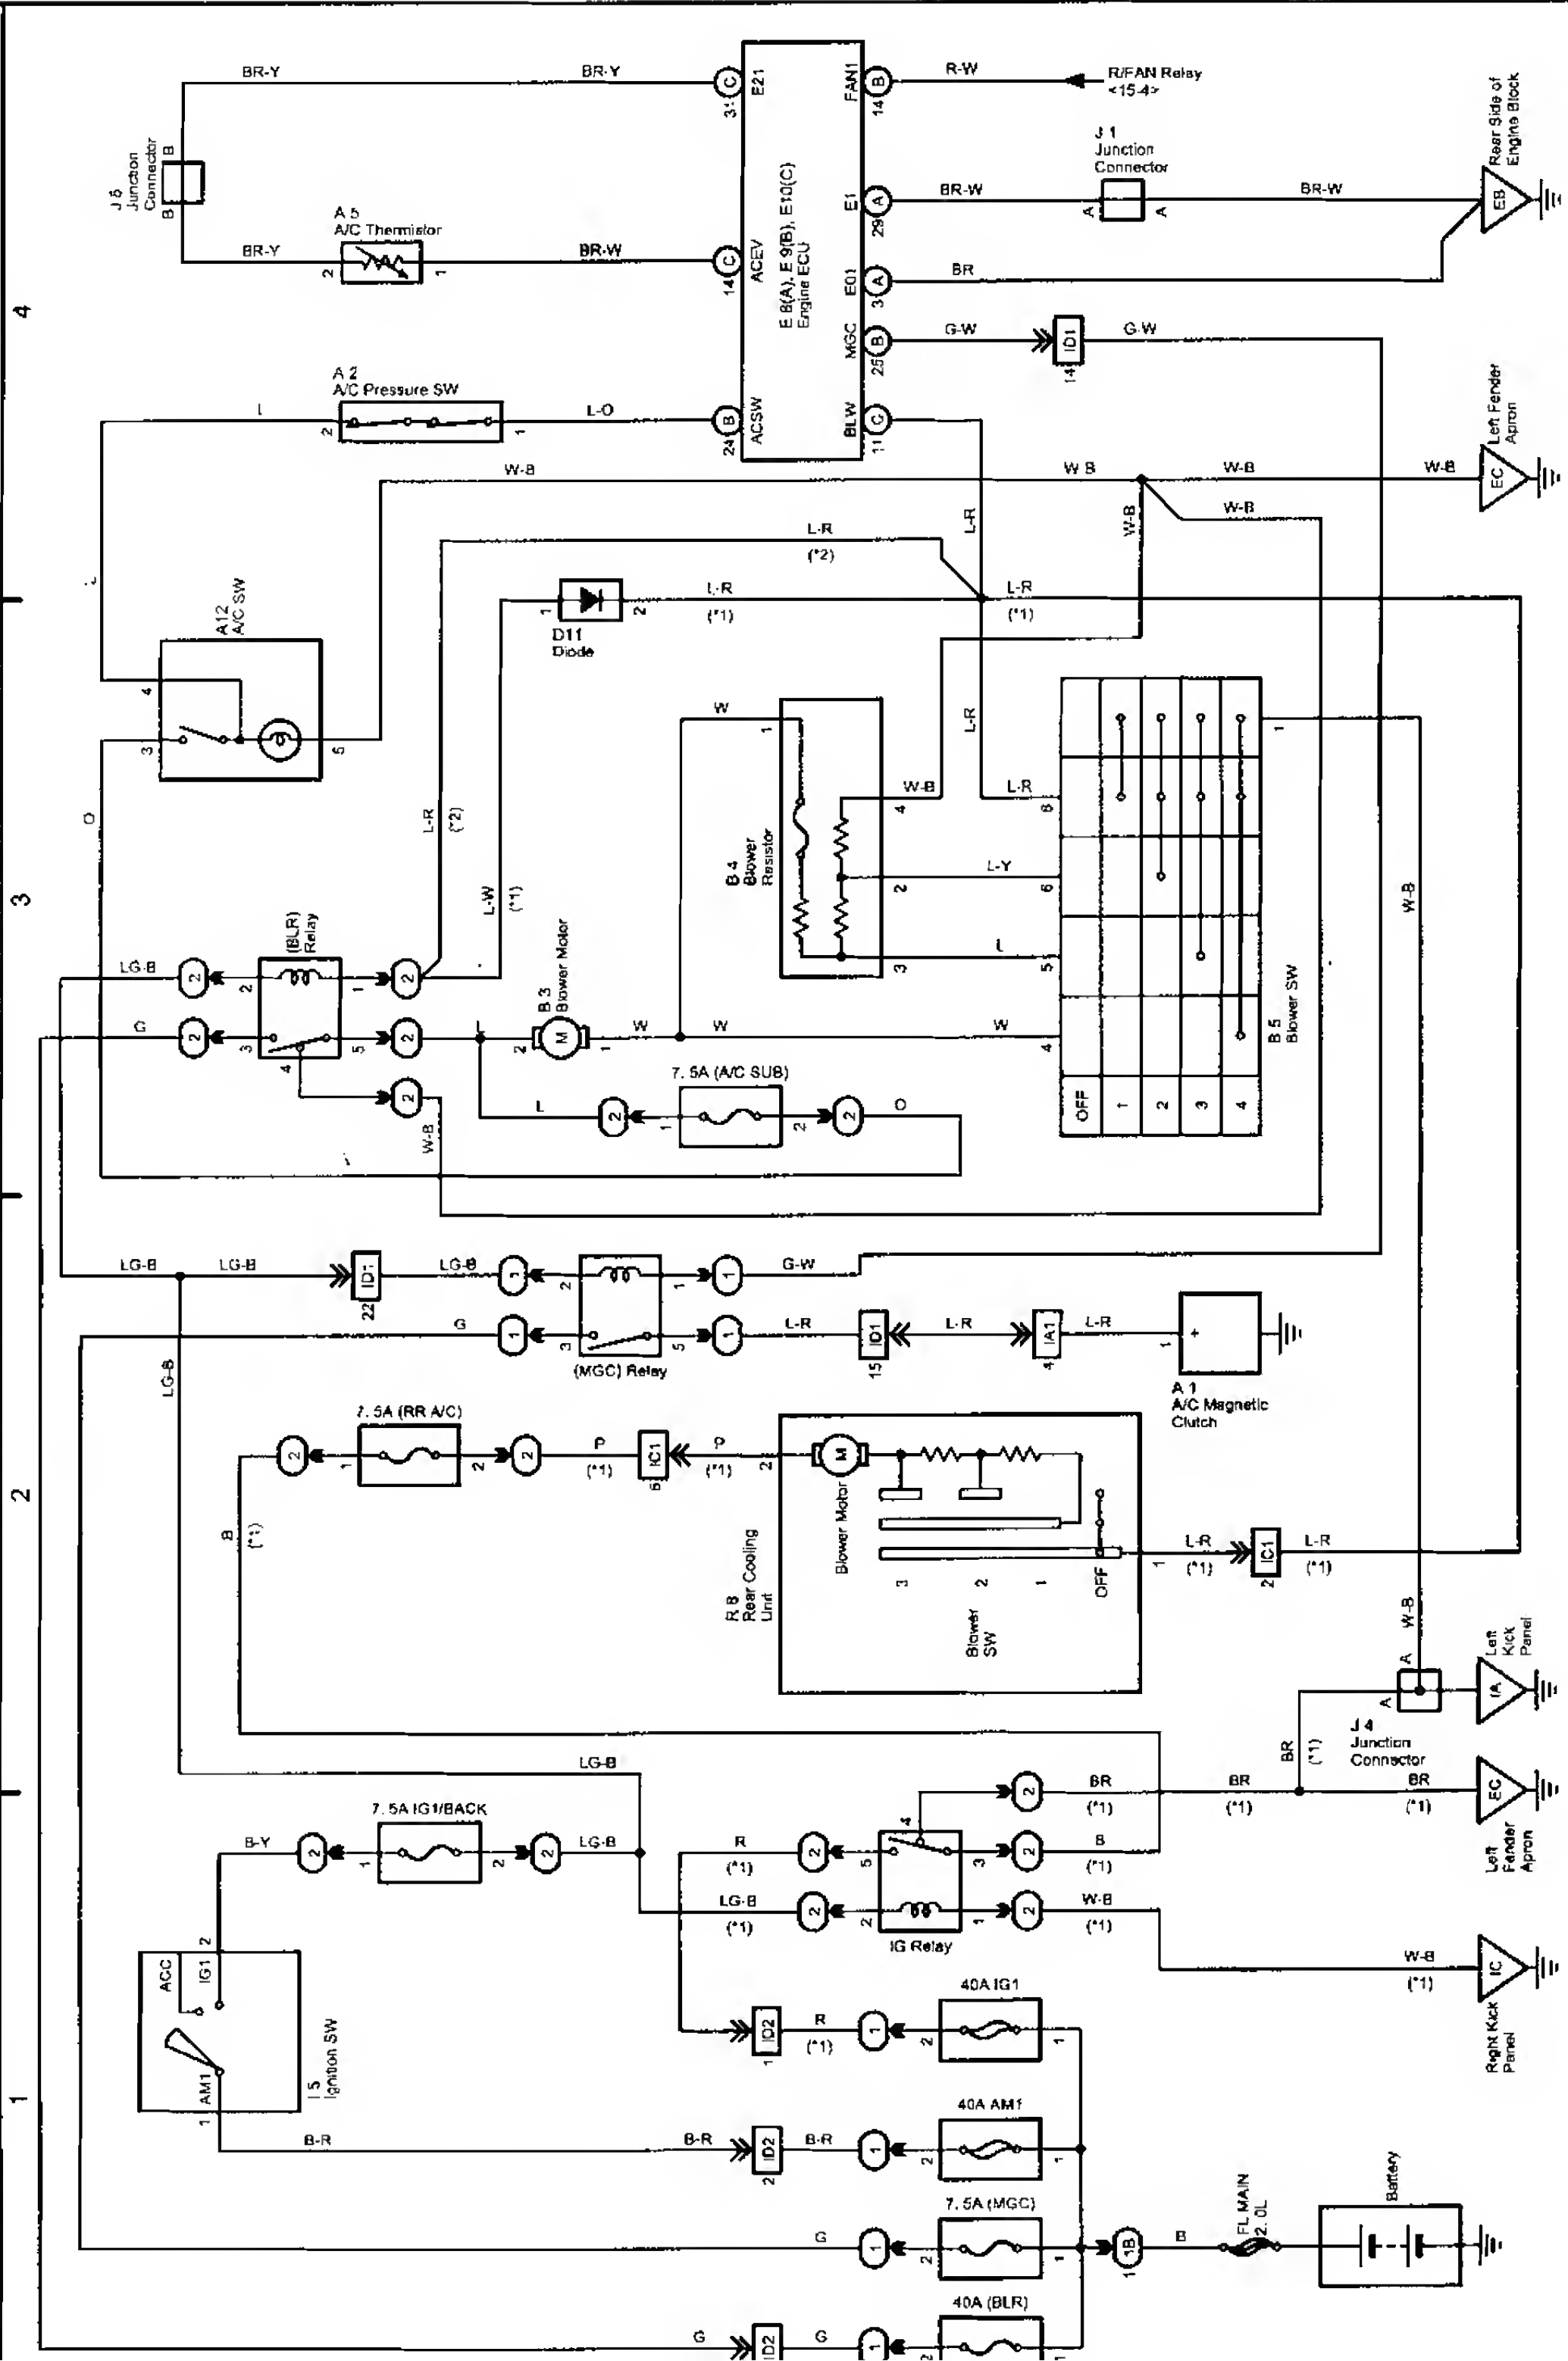

Air Conditioner (From Aug. 2006 Production w/o Heater)

Power Source

- * 1 : w/ Rear Cooler
- * 2 : w/o Rear Cooler
- * 3 : w/ Power Window
- * 4 : w/o Power Window

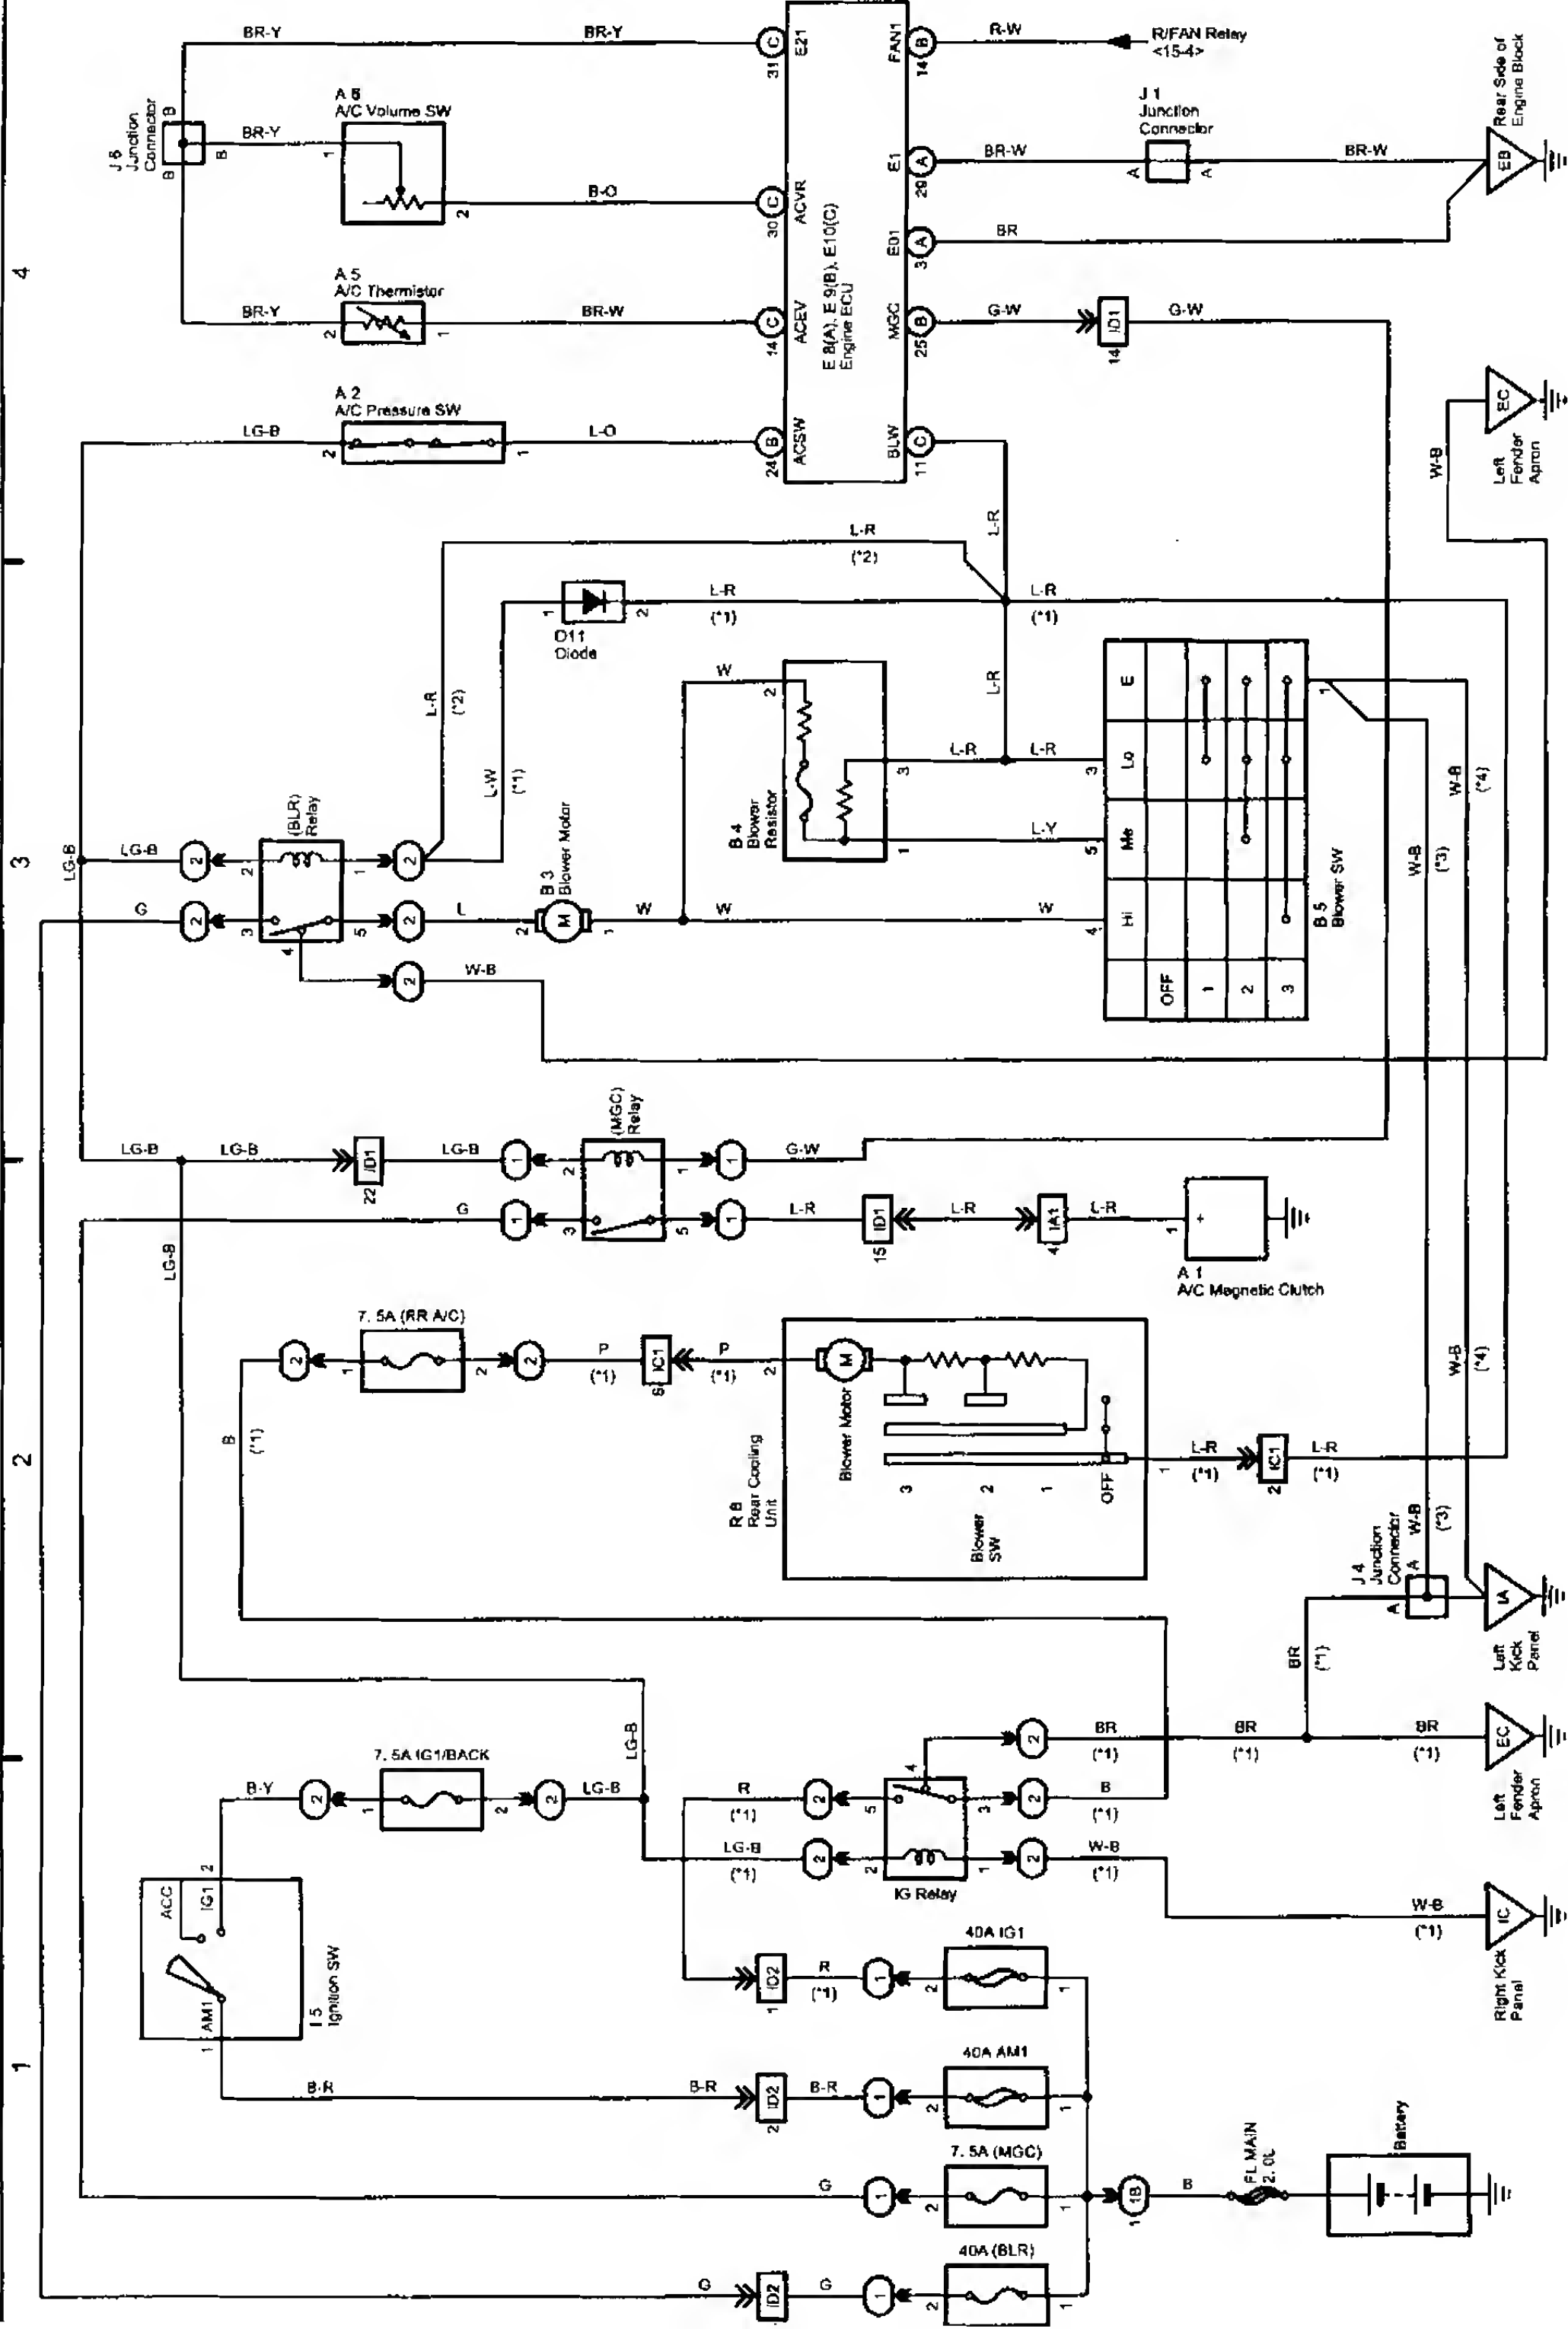

Power Source

